

## Daytech B07MC62SS2

# Daytech Wireless Call Alert System User Manual

Brand: Daytech | Model: B07MC62SS2

## 1. PRODUCT OVERVIEW

The Daytech Wireless Call Alert System is designed to provide reliable and convenient communication for caregivers and individuals needing assistance, such as the elderly or those with mobility issues. This system ensures peace of mind by offering a long-range panic button solution.

- **Enhanced Independence:** Allows individuals to maintain privacy and independence while ensuring help is readily available.
- **Wide Coverage:** Features a long range of up to 500+ feet (open area), enabling caregivers to be further away and still receive alerts.
- **User-Friendly Design:** Call buttons are easy to press, even for those with limited hand function, and can be worn around the neck or mounted.
- **Customizable Alerts:** Offers 55 different ringtones and 5 adjustable volume levels (0-110 dB, including mute mode) to suit various environments. LED indicators provide visual alerts for the hearing impaired.
- **Durable Construction:** Both the call button and receiver are waterproof and dustproof (IP55 rated), made from sturdy ABS material for long-lasting use in various settings, including bathrooms.
- **Memory Function:** Retains the previously set tune even after battery replacement.

## 2. SETUP AND INSTALLATION



Figure 2.1: Receiver back panel with battery compartment and mounting options.

## 2.1 Initial Setup

1. **Install Batteries:** Open the battery compartment on the back of the receiver and insert 6 AAA batteries (included). Ensure correct polarity.
2. **Activate Call Buttons:** Pull out the insulation sheet from the call buttons to activate their internal batteries.

## 2.2 Pairing Call Buttons with Receiver

The system typically comes pre-paired. If re-pairing is needed or if adding new buttons:

1. **Select Ringtone:** On the receiver, press the "Forward" or "Backward" buttons to cycle through the 55 available ringtones until you find your preferred melody.
2. **Enter Pairing Mode:** Press and hold the "Volume" button on the receiver until it emits a "Ding-Dong" sound and the indicator light begins to flash. This indicates the receiver is in pairing mode.
3. **Pair Button:** Quickly press the call button you wish to pair. The receiver will make a "Ding-Ding" sound, and its indicator light will flash, confirming successful pairing.

4. **Confirm Pairing:** Press the call button again to verify that the receiver sounds the selected melody. If it does, pairing is complete.

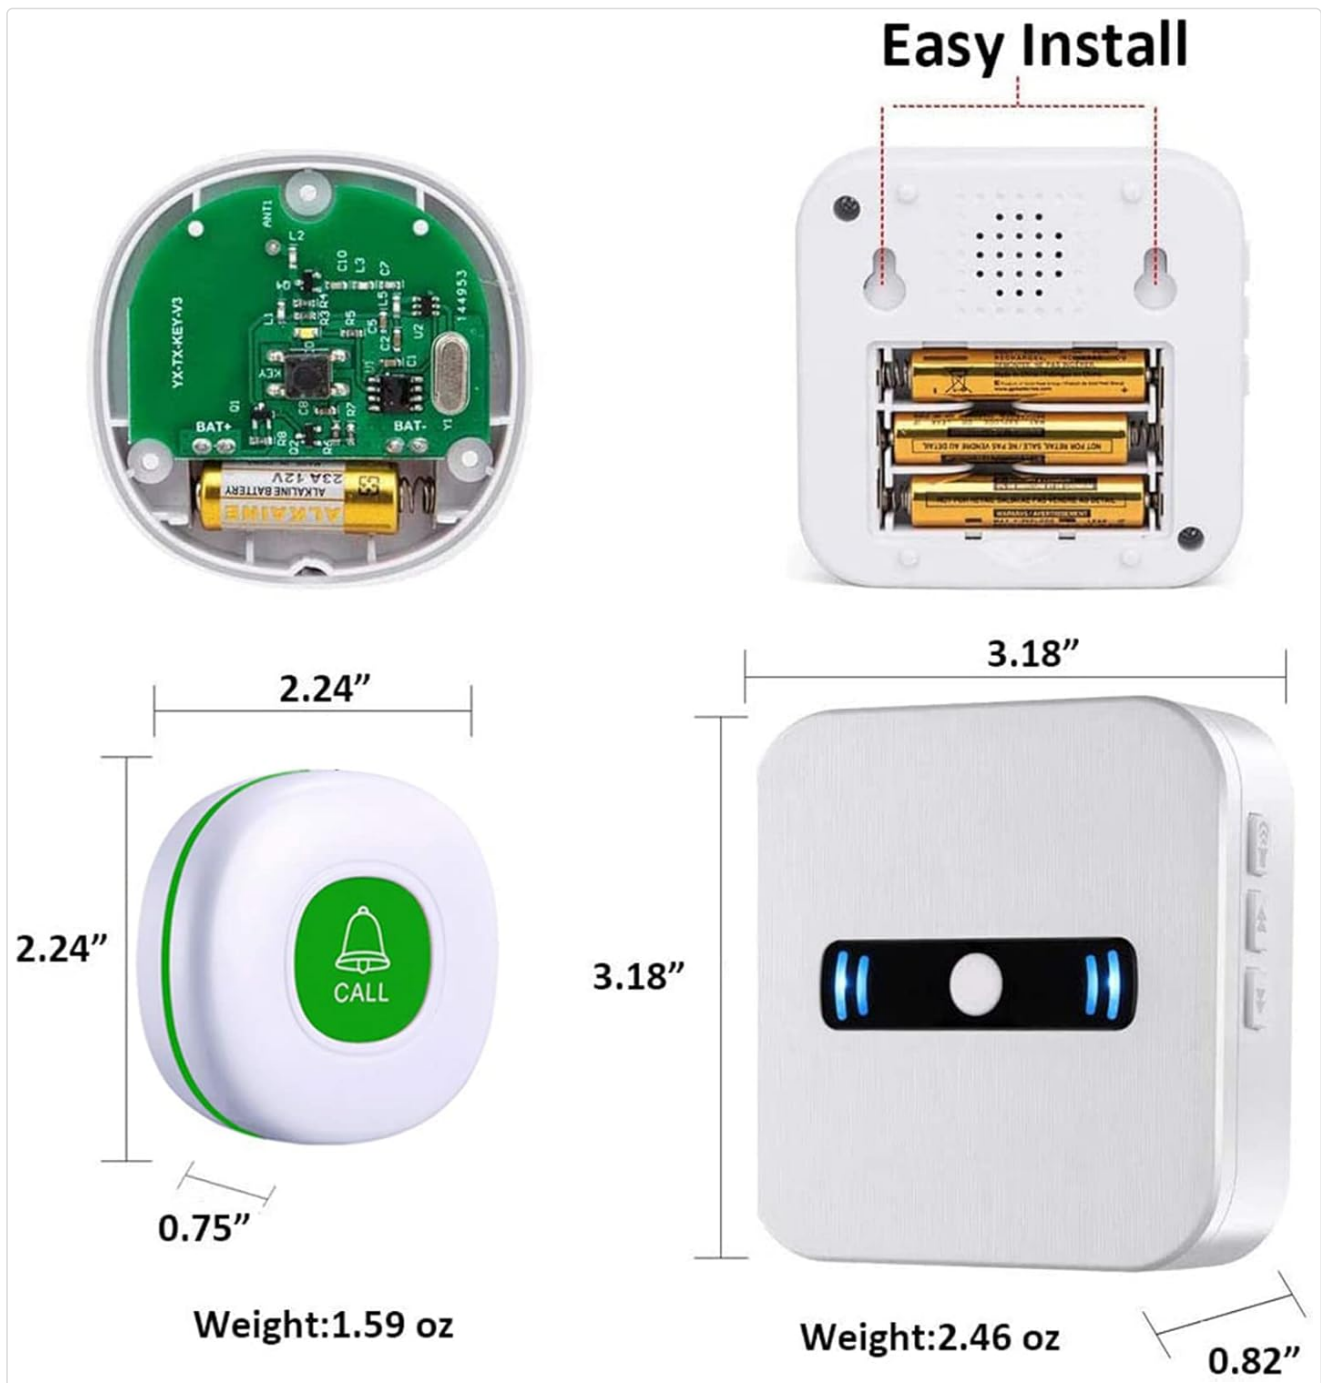


Figure 2.2: Step-by-step guide for battery installation and pairing.

## 2.3 Placement

- **Receiver:** Place the receiver in a central location where the alert can be easily heard by the caregiver. Consider areas like the living room, kitchen, or caregiver's bedroom.
- **Call Buttons:** The call buttons can be worn around the neck using the included strap or secured to a surface using the provided bracket or double-sided adhesive. Common placement areas include:
  - Bedside
  - Bathroom (due to waterproof design)
  - Living area
  - Near a wheelchair or frequently used chair



Figure 2.3: Versatile usage scenarios for the Daytech Call Alert System.

### 3. OPERATING INSTRUCTIONS

#### 3.1 Using the Call Button

To request assistance, simply press the large "CALL" button on the caregiver call button. This will send a signal to the receiver, triggering the selected melody and flashing LED indicator.





Figure 3.1: Activating the call button.

### 3.2 Adjusting Receiver Settings

- **Ringtone Selection:** Use the "Forward" and "Backward" buttons on the side of the receiver to scroll through the 55 available melodies.
- **Volume Control:** Press the "Volume" button on the side of the receiver to adjust the sound level. There are 5 adjustable volume levels, ranging from 0 dB (mute) to 110 dB.
- **Visual Alert:** The receiver features an LED light melody indicator that flashes when an alert is received, providing a visual cue in addition to the audio.

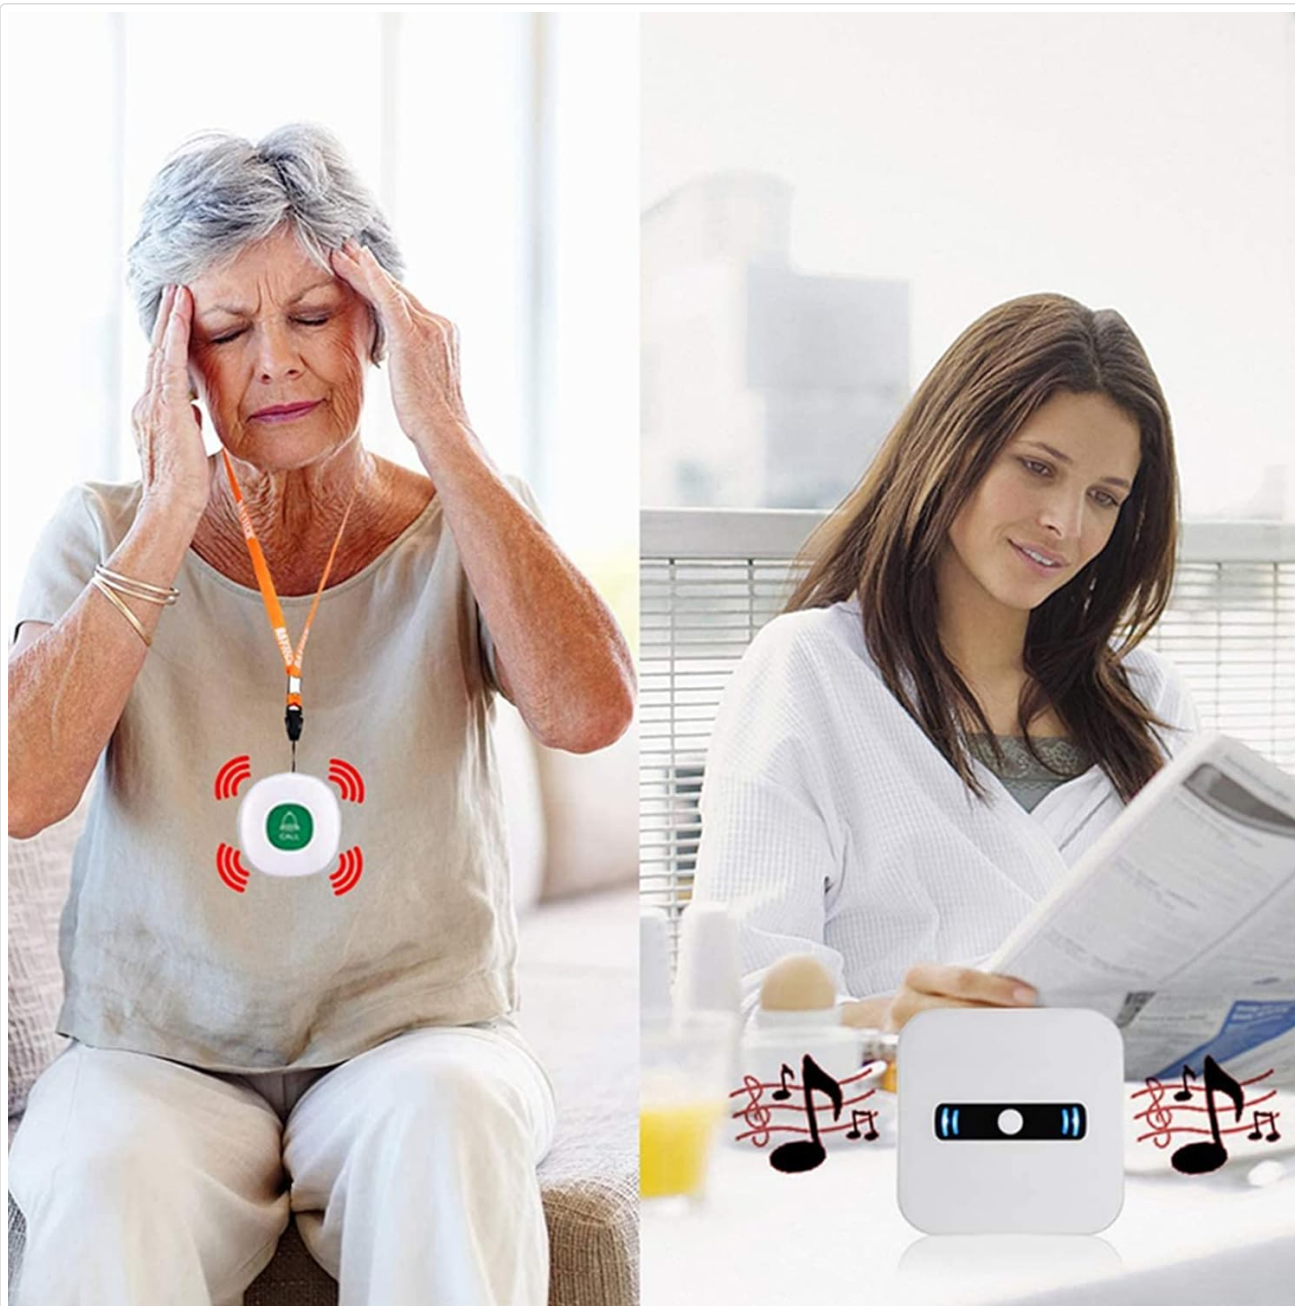


Figure 3.2: Receiver features for ringtone and volume adjustment.

## 4. MAINTENANCE

### 4.1 Cleaning

Wipe the surfaces of the receiver and call buttons with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the devices are dry before re-installing batteries or using them.

### 4.2 Battery Replacement

- **Receiver:** The receiver requires 6 AAA batteries. Replace all batteries simultaneously when the indicator light dims or the sound becomes weak.
- **Call Buttons:** The call buttons use a 12V (DC) battery. Replace the battery when the button's indicator light does not illuminate or the signal range decreases significantly. Refer to Figure 2.1 for battery compartment

access on the receiver.

The system features a memory function, retaining your last selected ringtone even after battery replacement.

## 5. TROUBLESHOOTING

- **No Sound from Receiver:**
  - Check if the receiver's volume is set to mute (0 dB). Adjust the volume using the "Volume" button.
  - Ensure batteries are correctly installed and not depleted. Replace if necessary.
  - Verify that the call button is properly paired with the receiver (refer to Section 2.2).
- **Limited Range:**
  - Replace batteries in both the call button and receiver.
  - Ensure there are no significant metal objects or thick walls obstructing the signal path between the call button and receiver.
  - Relocate the receiver to a more central position.
- **Call Button Not Responding:**
  - Check the call button's battery. Replace if needed.
  - Re-pair the call button with the receiver (refer to Section 2.2).

## 6. SPECIFICATIONS

Feature	Detail
Brand	Daytech
Model Number	B07MC62SS2
Power Source (Receiver)	Battery Powered (6 AAA batteries, included)
Power Source (Call Button)	12 Volts (DC) Battery
Control Method	Touch
Noise Level	Up to 110 dB
Operating Range	Up to 500+ feet (open area)
Waterproof/Dustproof Rating	IP55
Item Weight	0.704 ounces (approx. for call button)
Color	Green (for call button accent)

## 7. WARRANTY AND SUPPORT

Daytech is committed to providing reliable products and excellent customer service. This product comes with a full lifetime warranty and a money-back guarantee.

For any questions, concerns, or support needs, please contact Daytech customer service. We offer round-the-clock support to ensure your peace of mind when caring for your loved ones.

For more information or to contact support, please visit the official Daytech store or refer to the contact information provided with your purchase.

[Visit the Daytech Store](#)