

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony SU-WL855 Ultra Slim Wall-Mount Bracket Instruction Manual](#)

## Sony SUWL855

# Sony SU-WL855 Ultra Slim Wall-Mount Bracket

Model: SUWL855

## PRODUCT OVERVIEW

---

The Sony SU-WL855 Ultra Slim Wall-Mount Bracket is designed to provide a sleek and functional mounting solution for select Sony BRAVIA OLED and LED televisions. This bracket allows your TV to sit nearly flush against the wall, mimicking a piece of artwork, while also offering the flexibility to swivel the screen for optimal viewing from various angles. Its robust design ensures secure installation and easy access to TV ports when needed.



Image: Sony BRAVIA TV mounted flush to a wall, showcasing its ultra-slim profile.

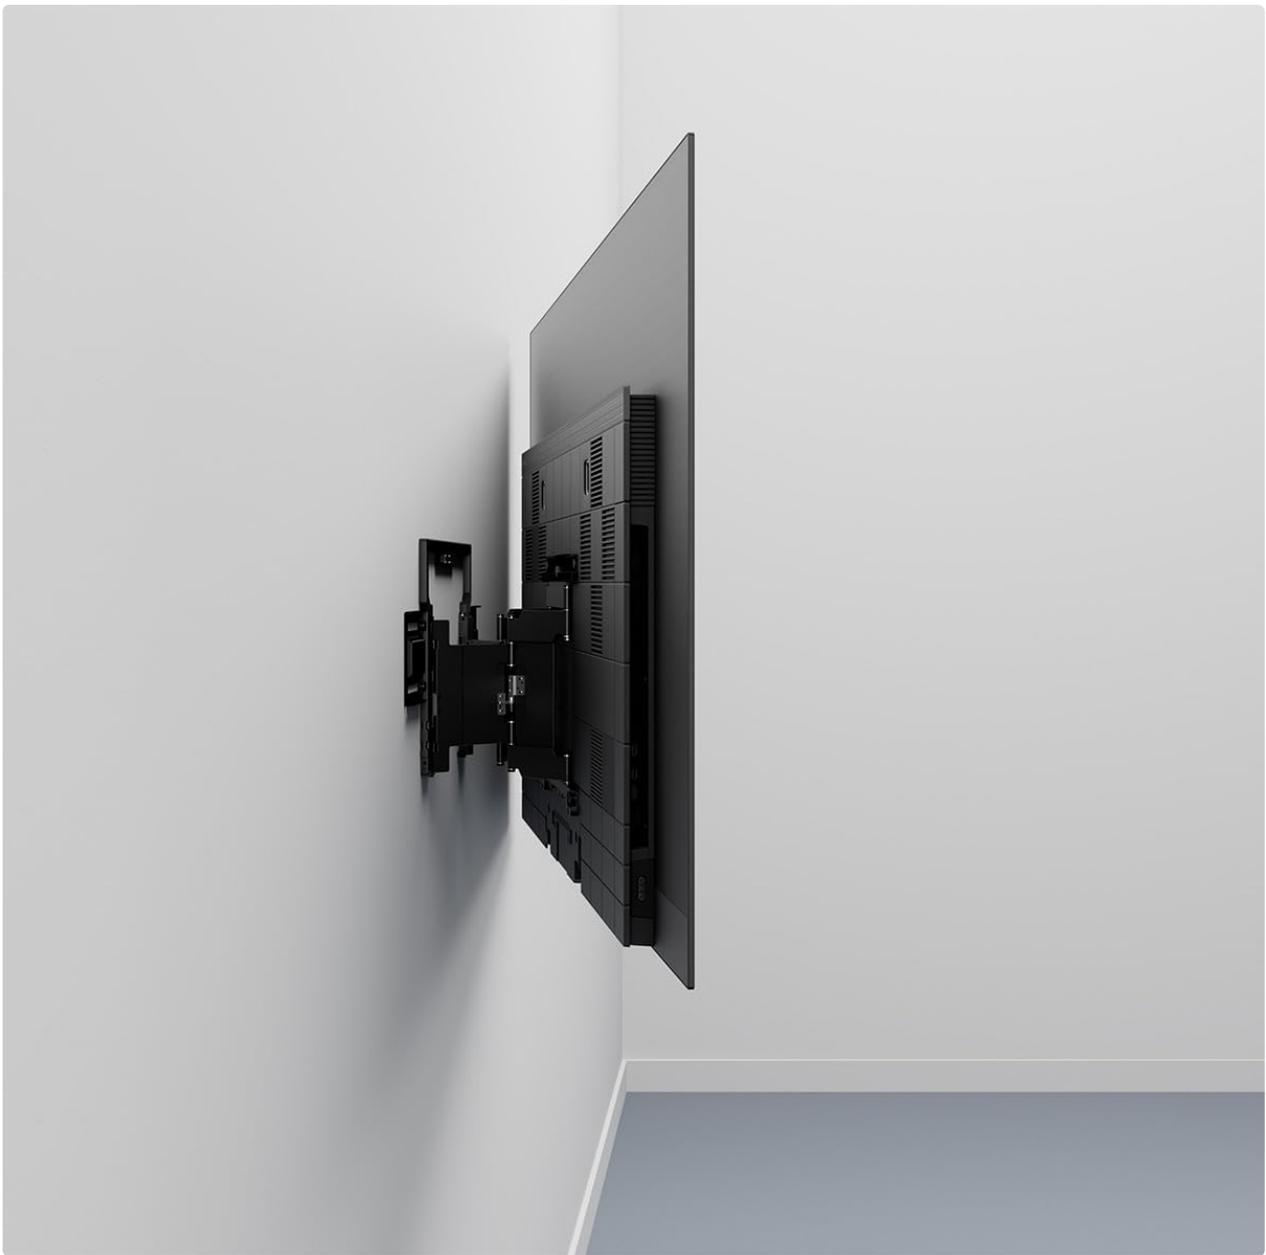


Image: Side view of the Sony TV extended and swiveled using the wall-mount bracket, demonstrating its adjustable functionality.

## WHAT'S IN THE BOX

---

The SU-WL855 Wall-Mount Bracket package includes the following components:

- WM1: Wall Mount Bracket (Main wall plate)
- WM2: TV Attachment Bars (2 pieces, attach to the TV)
- WM3: Cushions (4 pieces, for TV's lower back corners)
- WM4: Lateral Shift Bracket (For stud alignment)
- WA1: Wall Anchors (4 pieces, for concrete/brick walls)
- WS1: Washers (4 pieces)
- WS2: Lag Bolts (4 pieces, for securing to studs)
- M6L20: Screws (4 pieces, for attaching WM2 to TV)
- WT1: Cable Tie (1 piece, for cable management)



Image: All components of the SU-WL855 wall-mount bracket, clearly labeled for identification.

## COMPATIBLE MODELS

---

This wall-mount bracket is compatible with select Sony BRAVIA OLED and LED TVs, typically ranging from 55" to 77" class. Please verify your TV model's compatibility before installation.

- KD75X77L, KD65X77L, KD55X77L
- XR55X90L, XR65X90L, XR75X90L, XR65X93L
- XR55A80L, XR65A80L, XR77A80L, XR55A95L, XR65A95L, XR77A95L
- XR75X90K, XR65X90K, XR55X90K
- KD75X85K, KD65X85K, KD55X85K, KD75X80K, KD65X80K, KD55X80K
- XR65X95K, XR77A80K, XR65A80K, XR55A80K, XR48A90K, XR65A95K, XR55A95K
- XR77A80J, XR65A80J, XR55A80J, XR65A90J, XR55A90J
- XR65X95J, XR75X95J, XR75X90J, XR65X90J, XR55X90J
- KD75X85J, KD65X85J, KD55X85J, KD75X80J, KD65X80J, KD55X80J
- XBR48A9S, XBR55A8G, XBR65A8G, XBR55A9G, XBR65A9G, XBR77A9G
- XBR75X950H, XBR65X950H, XBR55X950H
- XBR75X800H, XBR65X800H, XBR55X800H
- XBR55A8H, XBR65A8H, XBR55X900H, XBR65X900H, XBR75X900H

## SETUP AND INSTALLATION

---

Installation requires two people for safety.

## Tools Required

- Level
- Power drill
- Screwdriver (Phillips head recommended)
- Stud finder (essential for drywall with studs)
- 13mm wrench
- 5.5mm drill bit
- 10mm drill bit (for wall anchors in concrete/brick)
- Hammer (for solid concrete or concrete block installation)
- Pencil

## Important Considerations Before Installation

- First, decide on which wall you wish to mount your TV.
- Do not install the Wall-Mount Bracket on wall surfaces where the corners or the sides of the TV protrude away from the wall surface.
- Do not install the TV over or under an air-conditioner.
- Be sure to install the TV on a wall that is both perpendicular and flat.
- We recommend you check the position of the TV in the viewing environment before drilling.

## Installation Steps (for Drywall with Wood Studs)

1. **Locate Studs:** Once you find the space on the wall you'd like to hang the TV, use your wall sensor (stud finder) to identify the studs that are either 16" or 24" apart. Mark the center of the studs.

Your browser does not support the video tag.

Video: Demonstrates using a stud finder to locate and mark wall studs for secure mounting.

2. **Position Lateral Shift Bracket (WM4):** Place the Lateral Shift Bracket (WM4) onto the wall, ensuring it is level. Mark the four screw locations that align with the identified studs.

Your browser does not support the video tag.

Video: Shows how to position the Lateral Shift Bracket (WM4) and mark the drill points, ensuring it is level.

3. **Drill Pilot Holes:** Drill pilot holes on the marked locations. Be sure to drill into the center of the wood stud. Pilot holes must be drilled 75 mm or 3 inches deep, using the 5.5 mm drill bit.

Your browser does not support the video tag.

Video: Illustrates drilling pilot holes into the wall studs.

4. **Install Lateral Shift Bracket:** Install the Lateral Shift Bracket (WM4) onto the wall using a wrench and the provided lag bolts (WS2) and spacers (WS1). Ensure the bracket is securely fastened. Use a level to confirm the bracket is perfectly horizontal.

Your browser does not support the video tag.

Video: Shows the installation of the Lateral Shift Bracket (WM4) and verifying its levelness.

5. **Prepare TV:** To prepare the TV for installation, first remove the four screws from the wall mount holes on the rear of the TV.

Your browser does not support the video tag.

Video: Demonstrates removing the screws from the back of the TV in preparation for attaching the TV attachment bars.

6. **Attach TV Attachment Bars (WM2):** Attach the WM2 bars into the back of the TV using the M6L20

screws previously removed from the TV. Ensure they are securely tightened.

Your browser does not support the video tag.

Video: Shows attaching the WM2 TV attachment bars to the back of the TV.

- 7. Attach Cushions (WM3):** Attach the WM3 cushions to the lower back corners of the TV. These help protect the TV and wall.



Image: WM3 cushions for TV protection.

- 8. Extend Wall Mount Bracket Arm:** Pull out the arm of the Wall Mount Bracket (WM1) to its fully extended position.

Your browser does not support the video tag.

Video: Shows extending the arm of the wall mount bracket.

- 9. Mount the TV:** With two people, carefully lift the TV. Brace the TV without grabbing the screen. Place the TV onto the Wall-Mount Bracket (WM1) by finding the top groove and sliding it in. Secure the wall mount bracket to the TV using the previously removed screws from the back of the TV.

Your browser does not support the video tag.

Video: Demonstrates lifting and mounting the TV onto the wall bracket, then securing it.

- 10. Connect Cables:** Plug in all necessary cords (power, HDMI, etc.) to the TV's ports. The swivel feature allows for easy access.

Your browser does not support the video tag.

Video: Shows connecting cables to the TV while it is mounted.

- 11. Position TV:** Gently push the TV back towards the wall until it fits flush. Your TV should now be wall-mounted and ready for viewing.

Your browser does not support the video tag.

Video: Final positioning of the TV flush against the wall.

## OPERATING THE WALL MOUNT

---

The SU-WL855 bracket offers both a flush-to-wall appearance and swivel functionality. To adjust the viewing angle, gently pull the TV away from the wall. The bracket allows for swiveling up to 21 degrees left or right, depending on your TV model and size. This feature provides flexibility for various seating arrangements and easy access to rear ports.

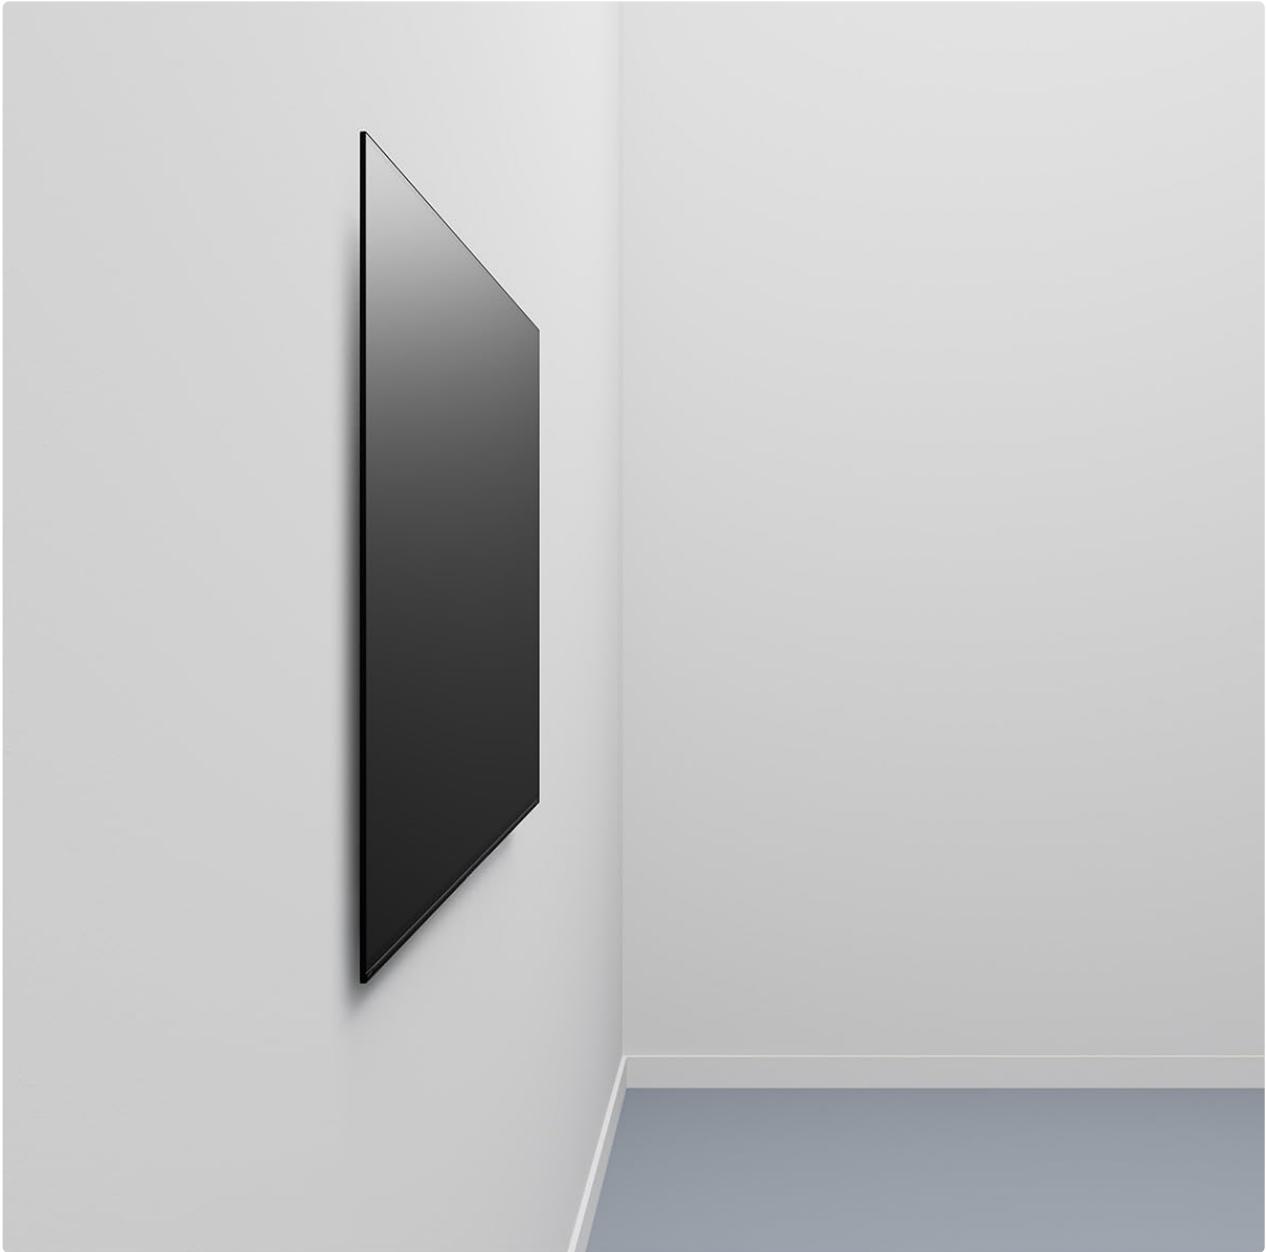


Image: Sony TV mounted flush to the wall, highlighting its minimal distance from the wall surface.

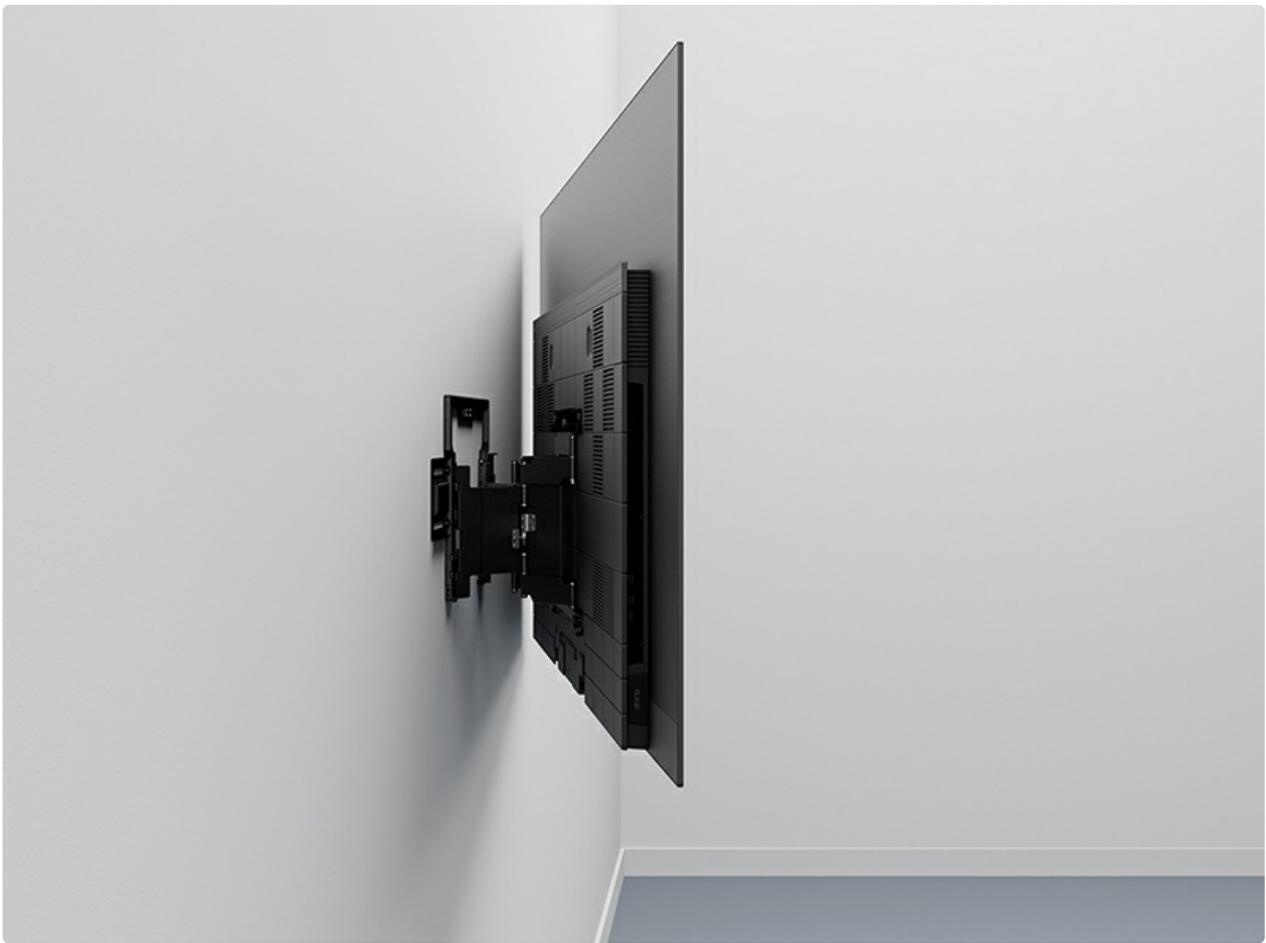


Image: The wall mount extended and swiveled, providing flexible viewing angles and access to TV ports.

## MAINTENANCE

---

To ensure the longevity and proper function of your wall mount, periodically check all screws and bolts for tightness. Dust the bracket regularly with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish. If the swivel mechanism feels stiff, consult a professional for lubrication or adjustment.

## TROUBLESHOOTING

---

- **TV not sitting flush:** Ensure all cables are properly routed and not obstructing the TV's movement. Check that the WM3 cushions are correctly placed.
- **Difficulty swiveling:** Verify that no cables are snagged or preventing movement. Ensure the TV is not pushed too far back against the wall before attempting to swivel.
- **Bracket feels loose:** Immediately re-tighten all lag bolts (WS2) and screws (M6L20). If the issue persists, professional inspection is recommended to ensure wall integrity and proper installation.

## SPECIFICATIONS

---

| Feature            | Detail                      |
|--------------------|-----------------------------|
| Product Dimensions | 36.22 x 17.91 x 3.07 inches |
| Item Weight        | 6.6 pounds                  |

|                      |                     |
|----------------------|---------------------|
| ASIN                 | B07P83HQMB          |
| Item Model Number    | SUWL855             |
| Mounting Type        | Wall Mount          |
| Movement Type        | Swivel              |
| Brand                | Sony                |
| Material             | Metal               |
| Color                | Black               |
| Maximum Tilt Angle   | 21 Degrees (Swivel) |
| Date First Available | April 15, 2019      |

## WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Sony website or contact Sony customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. Official Sony Support: [www.sony.com/electronics/support](http://www.sony.com/electronics/support)