

[Manuals.plus](#) /

› [Brondell](#) /

› Brondell Bidet Toilet Seat Non-Electric Swash Ecoset, Fits Elongated Toilets, White - Dual Nozzle System, Ambient Water Temperature - Bidet with Easy Installation S101 Elongated

Brondell Swash Ecoset

Brondell Swash Ecoset S101 Non-Electric Bidet Toilet Seat User Manual

Model: Swash Ecoset

Brand: Brondell

INTRODUCTION

The Brondell Swash Ecoset S101 Non-Electric Bidet Toilet Seat offers a refreshing and hygienic bathroom experience. Designed to fit elongated toilets, this bidet features a dual nozzle system for comprehensive cleaning and operates without electricity, making installation simple and eco-friendly. Enjoy ambient water temperature for a comfortable wash.

KEY FEATURES

- **Clean and Refreshing:** Experience a soothing, freshwater wash that leaves you feeling clean and rejuvenated. This economical bidet requires no electricity or batteries.
- **High-Quality Parts:** Enjoy dual nozzles for rear and front washes, a gentle closing seat, and sturdy, sittable lid.
- **Easy Installation:** This elongated bidet toilet seat measures 20.03" x 14.39" x 2.55" and can easily be self-installed in minutes—no plumbers necessary!
- **Versatile Style:** This bidet fits elongated toilets and looks great in any bathroom. The textured chrome dial accent adds an elegant touch to your new home spa experience.
- **Sustainable Living:** Products that help protect our planet's essential resources. From water-saving showers and lower-waste water filtration to bidets that help reduce toilet paper and energy use, we're helping you live more sustainably and it feels better already.

PACKAGE CONTENTS


Ensure all components are present before beginning installation:

- Brondell Swash Ecoseat (Bidet Toilet Seat)
- Mounting Plate
- Mounting Hardware
- Bidet Hose
- User Manual (PDF - refer to external link for full document)

SETUP AND INSTALLATION

Before installation, ensure your toilet is compatible with an elongated bidet seat. Measure your toilet bowl to confirm the correct fit.

Measure Before You Purchase

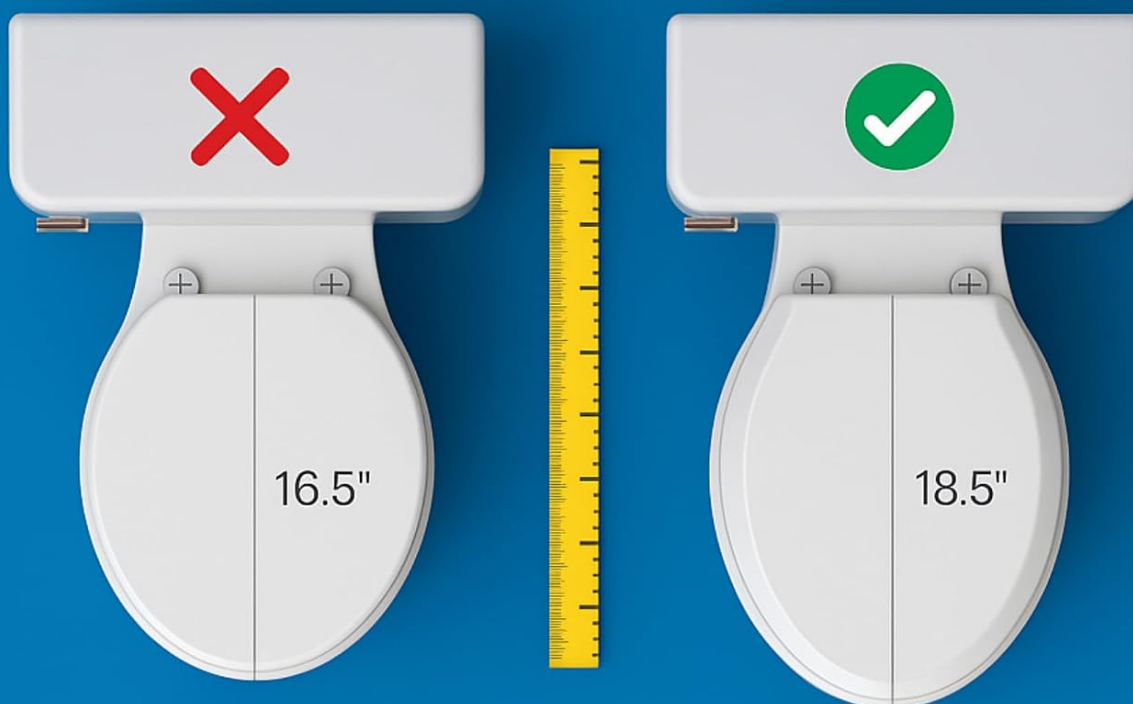

Current Selection for Purchase is Elongated

Image: Measure Before You Purchase - Ensure your toilet dimensions match the elongated bidet seat for proper fit.
The Brondell Swash Ecoseat is designed for easy DIY installation without the need for professional plumbing. Follow

these general steps:

1. **Turn off Water Supply:** Locate the water supply valve behind your toilet and turn it clockwise to shut off the water. Flush the toilet to empty the tank.
2. **Remove Existing Toilet Seat:** Unscrew the bolts holding your current toilet seat in place and remove the seat and lid.
3. **Install Mounting Plate:** Place the bidet's mounting plate over the toilet bowl holes. Adjust its position to ensure the bidet seat will align correctly. Secure it with the provided mounting hardware.
4. **Connect T-Valve:** Disconnect the existing water supply hose from the toilet tank. Install the provided T-valve to the fill valve underneath the toilet tank. Reconnect the original water supply hose to the bottom of the T-valve.
5. **Connect Bidet Hose:** Connect one end of the bidet hose to the side of the T-valve and the other end to the bidet seat's water inlet. Ensure all connections are hand-tightened first, then gently tighten with a wrench to prevent leaks.
6. **Attach Bidet Seat:** Slide the bidet seat onto the installed mounting plate until it clicks securely into place.
7. **Restore Water Supply:** Slowly turn the water supply valve counter-clockwise to restore water to the toilet and bidet. Check all connections for any leaks.

The bidet features a thin profile and does not require batteries or electricity for operation, making it a simple addition to your bathroom.

self-cleaning dual nozzles for front and rear washes



Image: Thin profile requires no batteries or electricity. Control your wash using the elegant chrome dial.

OPERATION

The Brondell Swash Ecoset S101 features a simple chrome dial for intuitive control of its dual nozzle system.

- **Dual Nozzle System:** The bidet is equipped with two nozzles, one for rear wash and one for front (feminine) wash.
- **Adjusting Water Pressure:** Rotate the chrome dial to increase or decrease the water pressure to your desired comfort level.
- **Self-Cleaning Nozzles:** The nozzles are designed to self-clean before and after each use, ensuring hygiene. This function is activated by turning the dial to a specific position, typically just before the main wash settings.

TROUBLESHOOTING

- CHECK BEFORE CONTINUING:**
- Make sure main water supply valve is open
 - Confirm there are no leaks from hoses or water supply

Problem	Possible Cause(s)	Solution(s)
Low Water Flow or Spray Pressure	1. Water supply valve not opened fully 2. Nozzle is dirty 3. External bidet filter	1. Check that the water supply valve at wall is fully open 2. Clean Nozzles 3. If you have an external bidet filter like SW44, check and replace if necessary
Nozzles do not Function Properly	1. Nozzles are dirty 2. Water pressure is too low 3. External bidet filter	1. Clean nozzles 2. Check water supply valve at wall to fully open 3. If you have an external bidet filter like SW44, check and replace if necessary
Water Leaks from Areas Other Than the Nozzles	1. Water leaking from the T-valve 2. Water leaking from the bidet hose connection	1. Make sure that the rubber gasket is inserted correctly into the T-Valve 2. Make sure that the bidet hose is correctly connected and tight. Check any rubber washers and do not overtighten

Image: Self-cleaning dual nozzles for front and rear washes.

MAINTENANCE

Regular cleaning of your bidet seat will ensure optimal performance and hygiene.

- **Nozzle Cleaning:** The dual nozzles have a self-cleaning function. Activate this by turning the control dial to the designated self-clean position.
- **General Cleaning:** Use a mild, non-abrasive cleaner and a soft cloth to wipe down the exterior of the bidet seat. Avoid harsh chemicals that could damage the finish.

TROUBLESHOOTING

If you encounter any issues with your Brondell Swash Ecoset, refer to the table below for common problems and solutions.



elongated fit



front & rear wash



self-cleaning nozzles



elegant chrome dial



simple, DIY installation

Image: Troubleshooting - Common problems, possible causes, and solutions.

SPECIFICATIONS

Attribute	Detail
Brand	Brondell
Model Number	Swash Ecoseat
Color	White
Material	Plastic

Style	S101
Shape	Elongated
Product Dimensions	20.03"L x 14.39"W
Item Weight	6.35 Pounds
Operation Mode	Manual
UPC	819911014026
Maximum Pressure	100 Pound per Square Inch
Batteries Required?	No

WARRANTY AND SUPPORT

The Brondell Swash Ecoset S101 comes with a 1-year limited manufacturer's warranty when purchased from an authorized seller.

For detailed instructions and further support, please refer to the official [User Manual \(PDF\)](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

