

[Manuals.plus](#) /

> [SONGMICS](#) /

> SONGMICS Ergonomic Office Chair OBN22BK User Manual

SONGMICS OBN22BK

SONGMICS Ergonomic Office Chair

Model: OBN22BK

INTRODUCTION

Thank you for choosing the SONGMICS OBN22BK Ergonomic Office Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new chair. Please read these instructions carefully before assembly and retain them for future reference.



Image: The SONGMICS OBN22BK ergonomic office chair, featuring a black mesh backrest and padded seat, with a five-star base and casters.


SAFETY INSTRUCTIONS

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or defective.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Do not expose the product to direct sunlight for prolonged periods.
- Avoid contact with sharp or pointed objects to prevent damage to the upholstery and mesh.
- The maximum static load capacity for this chair is 120 kg (264 lbs). Do not exceed this weight limit.
- Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- Keep children and pets away from the assembly area.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are included in your package:

- 1 x Office Chair (disassembled components)
- 1 x Assembly Kit (screws, tools)
- 1 x User Manual

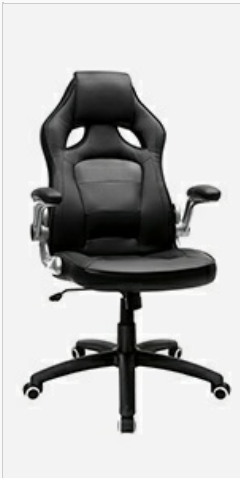

Chair Base




Gas Lift Cylinder



Casters



Seat Plate Mechanism

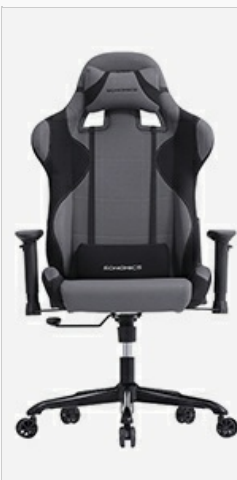

Armrests



Backrest



Screws and Tools

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your SONGMICS office chair. It is recommended to have a second person assist with some steps for easier assembly.

1. **Attach Casters to Base:** Insert each caster into the holes at the end of each leg of the five-star base until they click securely into place.

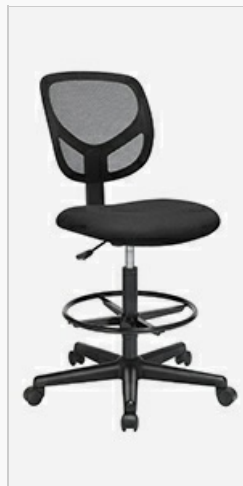


Image: Illustration showing casters being inserted into the chair base.

2. **Insert Gas Lift into Base:** Place the gas lift cylinder into the center hole of the assembled five-star base. Ensure it is seated firmly.

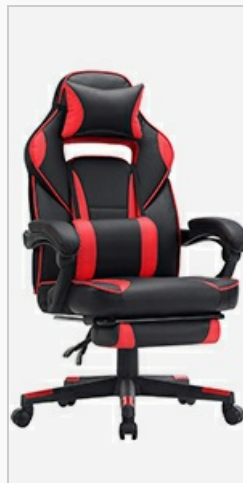


Image: Illustration showing the gas lift cylinder being placed into the center of the chair base.

3. **Attach Seat Plate to Seat:** Align the seat plate mechanism with the pre-drilled holes on the underside of the seat cushion. Secure it using the provided screws. Ensure the front of the seat plate faces the front of the seat.

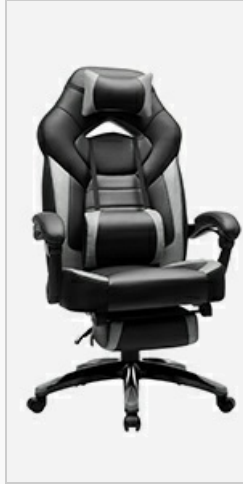


Image: Illustration showing the seat plate being screwed onto the underside of the seat cushion.

4. **Attach Armrests to Seat:** Secure the armrests to the sides of the seat cushion using the designated screws. Do not overtighten initially.
5. **Attach Backrest to Seat/Armrests:** Align the backrest with the mounting points on the seat and/or armrests. Secure with the remaining screws. Once all screws are in place, tighten all screws firmly.

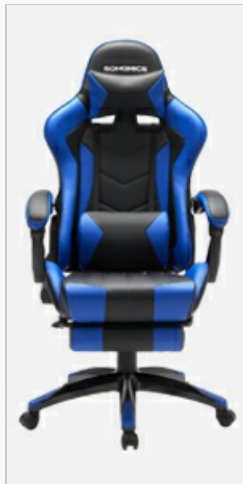


Image: Illustration showing the backrest being attached to the seat and armrest assembly.

6. **Place Assembled Seat onto Gas Lift:** Carefully place the assembled seat (with armrests and backrest attached) onto the gas lift cylinder. Press down firmly to ensure it is securely seated.

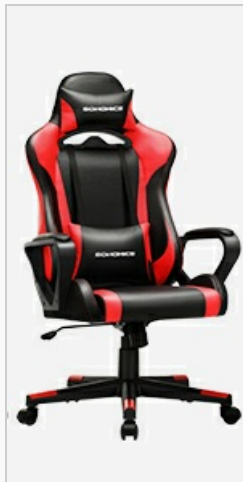


Image: Illustration showing the fully assembled top portion of the chair being placed onto the gas lift and base.

OPERATING INSTRUCTIONS

Your SONGMICS OBN22BK chair features several adjustment options to enhance your comfort and support.

1. Height Adjustment

To adjust the chair's height, locate the lever on the right side, underneath the seat. While seated, pull the lever upwards to raise the chair. To lower the chair, remain seated and pull the lever upwards. Release the lever at your desired height.

2. Tilt Mechanism and Tension Adjustment

The chair features a tilt mechanism that allows the seat and backrest to recline synchronously up to 15 degrees. To activate the tilt function, pull the same lever (on the right side, under the seat) outwards. Push the lever inwards to lock the chair in an upright position.

To adjust the tilt tension, rotate the round knob located underneath the front of the seat. Turn clockwise to increase tension (making it harder to recline) and counter-clockwise to decrease tension (making it easier to recline).



Image: Diagram illustrating the height adjustment lever and the tilt tension knob under the seat, along with the chair's recline range (90-105 degrees).

MAINTENANCE

- **Cleaning:** For general cleaning, wipe the chair with a soft, damp cloth. For spot cleaning, use a mild soap solution and a clean cloth, then wipe dry. Do not use harsh chemicals or abrasive cleaners.
- **Mesh Care:** The breathable mesh backrest can be gently wiped with a damp cloth. Avoid scrubbing or using sharp objects that could damage the mesh.
- **Caster Maintenance:** Periodically check the casters for accumulated dust, hair, or debris. Clean them to ensure smooth movement.
- **Screw Tightness:** Over time, screws may loosen. Regularly check all assembly screws (every 3-6 months) and retighten them to ensure the chair remains stable and safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not adjust height.	Gas lift cylinder is faulty or lever is not fully engaged.	Ensure the height adjustment lever is pulled completely. If the issue persists, the gas lift may need replacement. Contact support.
Chair is wobbly or unstable.	Screws are loose or parts are not fully assembled.	Check and tighten all assembly screws. Ensure the gas lift is fully inserted into the base and seat mechanism.
Casters do not roll smoothly.	Debris (hair, dust) caught in casters or casters are damaged.	Clean any debris from the caster wheels. If damaged, casters may need replacement.
Chair makes squeaking noises.	Loose connections or friction between parts.	Tighten all screws. Apply a small amount of silicone lubricant to moving parts or connections if necessary.

SPECIFICATIONS

Brand: SONGMICS

Model Number: OBN22BK

Color: Black

Material: Polypropylene Plastic, Foam, Nylon, Steel (as per A+ content)

Overall Dimensions (L x W x H): 58 x 60.5 x (96-104) cm (22.8 x 23.8 x (37.8-40.9) inches)

Seat Height (from floor): 43-51 cm (16.9-20.1 inches)

Seat Dimensions (L x W): 49 x 51 cm (19.3 x 20.1 inches)

Backrest Dimensions (L x H): 51 x 53 cm (20.1 x 20.9 inches)

Armrest Height (from seat): 21 cm (8.3 inches)

Armrest Height (from floor): 64-72 cm (25.2-28.3 inches)

Product Weight: 10 kg (22 lbs)

Max. Static Load Capacity: 120 kg (264 lbs)



Image: Detailed diagram showing the various dimensions of the SONGMICS OBN22BK office chair.

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your SONGMICS OBN22BK office chair, please contact SONGMICS customer support. While specific warranty details are not provided in this manual, standard return policies typically apply for purchases made through authorized retailers.

For more information or to explore other SONGMICS products, please visit the official [SONGMICS Store](#).