

[manuals.plus](#) /

› [Williams AV](#) /

› [Williams AV DLT 400 Digi-Wave 400 Digital Wireless Listening System Transceiver User Manual](#)

Williams AV DLT 400

Williams AV DLT 400 Digi-Wave 400 Digital Wireless Listening System Transceiver User Manual

Model: DLT 400

INTRODUCTION

The Williams AV DLT 400 Digi-Wave 400 is a versatile digital wireless listening system transceiver designed for a wide range of applications. This device facilitates clear and reliable communication for guided tours, language interpretation, intercom systems, and hearing assistance. Its robust design and advanced features ensure high-quality audio transmission and reception over distances up to 900 feet (274 meters).

This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your DLT 400 transceiver.

PRODUCT OVERVIEW



Figure 1: Front view of the Williams AV DLT 400 Transceiver. The device features an OLED display at the top, control buttons including power, microphone, menu, and navigation arrows, and the "WILLIAMSOUND" logo at the bottom.

The DLT 400 transceiver is a compact, handheld unit equipped with an OLED display for clear status indication and menu navigation. It features intuitive controls for managing audio, modes, and settings.

Key Components:

- **OLED Display:** Provides visual feedback on device status, battery level, mode, and settings.
- **Power Button:** Used to turn the device on and off.
- **Microphone Button:** Activates/deactivates the internal microphone or connected external microphone.
- **Navigation Buttons (Up/Down/Left/Right):** For menu navigation and adjusting settings.
- **Menu Button:** Accesses the device's settings menu.
- **3.5 mm TRRS Headphone Jack:** For connecting headphones or earphones.
- **3.5 mm Microphone Jack:** For connecting an external electret microphone.
- **USB-C Port:** Used for charging the internal battery and line input/output.
- **Internal Microphone:** Built-in microphone for convenient use.

SETUP

1. Charging the Device:

The DLT 400 features an internal rechargeable Lithium Polymer battery. Before first use, or when the battery is low, charge the device using the included charging pack (DW ACC PAC4) or a standard USB-C charger.

1. Connect the USB-C cable to the USB-C port on the DLT 400.
2. Connect the other end of the cable to the charging pack or a compatible USB power adapter.
3. The OLED display will indicate charging status. A full charge takes approximately 5 hours.
4. A fully charged battery provides up to 16 hours of talk time.

2. Powering On/Off:

- To power on: Press and hold the **Power** button until the OLED display illuminates.
- To power off: Press and hold the **Power** button until the display turns off.

3. Connecting Accessories:

- **Headphones:** Plug your 3.5 mm TRRS headphones into the headphone jack.
- **External Microphone:** Plug an electret microphone into the 3.5 mm microphone jack. The device supports adjustable gain for external microphones.

OPERATING INSTRUCTIONS

The DLT 400 supports various operating modes to suit different communication needs.

1. Mode Selection:

Use the **Menu** button and navigation arrows to select the desired operating mode:

- **Guided Tours:**
 - *One-way:* For a single guide transmitting to an audience.
 - *Two-way:* Allows audience participation or multiple tour guides.
- **Language Interpretation:** One or more interpreted languages can be transmitted to the audience (one-way).
- **Intercom:** Up to six individuals can speak simultaneously, with additional listeners.
- **Hearing Assistance:** Boosts audio for improved comprehension, ideal for individuals with hearing impairments.

2. Microphone Usage:

- Press the **Microphone** button to toggle the microphone (internal or external) on or off.
- Adjust microphone gain through the menu settings if using an external microphone.

3. Volume Adjustment:

Use the **Up** and **Down** navigation buttons to adjust the listening volume through the connected headphones.

4. Power Save Mode:

The device features an Auto Sleep Mode that activates after 5 minutes of no RF signal from compatible devices, conserving battery life.

MAINTENANCE

1. Cleaning:

- Wipe the device with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or strong chemicals.
- Avoid getting moisture into openings.

2. Battery Care:

- For optimal battery life, avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.
- Recharge the battery periodically if stored for a long time to prevent deep discharge.

3. Storage:

Store the DLT 400 in its original packaging or a protective case to prevent damage from dust, moisture, and physical impact.

TROUBLESHOOTING

If you encounter issues with your DLT 400, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Device does not power on.	Low or depleted battery.	Charge the device for at least 5 hours.
No audio from headphones.	Headphones not properly connected; Volume too low; Incorrect mode selected; No active signal.	Ensure headphones are fully plugged in. Increase volume. Verify the correct operating mode is selected. Check if the transmitting device is active.
Microphone not working.	Microphone muted; External microphone not connected properly; Gain too low.	Press the Microphone button to unmute. Ensure external microphone is fully plugged in. Adjust microphone gain in settings.
Poor audio quality or static.	Out of range; Interference; Low battery.	Move closer to the transmitting device. Check for sources of 2.4 GHz interference. Recharge the battery.
Device enters sleep mode unexpectedly.	No RF signal detected for 5 minutes.	Ensure the transmitting device is active and within range.

If the problem persists after trying these steps, please contact Williams AV customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	DLT 400
Battery Type	Lithium Polymer, 1800 mAH

Feature	Detail
Battery Life	Up to 16 hours talk time
Charge Time	Approx. 5 hours
Operating Frequencies	2.4 GHz (ISM band); 2402 – 2476 MHz FHSS
Audio Frequency Response	Intercom Mode: 100 – 7,200Hz; Other Modes: 100 – 11,500Hz
SNR	73 dB
THD	0.1 % (Default Volume, 1kHz)
Microphone Input	Internal microphone and 3.5 mm phone jack (electret bias, adjustable gain)
Line Input	USB-C, Adjustable level
Headphone Output	3.5 mm TRRS headphone jack; 25 mW, R 32 ohms
Audio Output (Line)	USB-C, Adjustable level
Range	Up to 900 ft (274 m)
RF Output	19 dBm Typical
Security	87 bit encryption, 87+128 bit Encryption, Encryption PIN, Lock for settings
Indicators	OLED
Charging Connectors	USB-C
Operating Temperature	14° to 113°F (-10° to 45°C)
Dimensions (W x H x D)	4.22" x 2.60" x 0.50" (10.72 cm x 6.60 cm x 1.27 cm)
Weight	3.3 oz (93.5 g)
Color	Black/Silver

WARRANTY AND SUPPORT

For detailed warranty information regarding your Williams AV DLT 400 transceiver, please refer to the warranty card included with your product or visit the official Williams AV website. Warranty terms and conditions may vary by region and product.

If you require technical assistance, have questions about product functionality, or need to arrange for service, please contact Williams AV customer support. Contact information can typically be found on the manufacturer's website or in the product packaging.

For the most up-to-date information and support resources, please visit: www.williamsav.com

Related Documents - DLT 400

	Williams AV Digi-Wave 400 Series DLT 400 DLR 400 Quick Setup Guide Quick setup guide for the Williams AV Digi-Wave 400 Series DLT 400 and DLR 400 wireless communication systems. Learn about terminology, modes, controls, and basic setup procedures.
	Williams AV Digi-Wave 400 Series Digital Transceiver and Receiver User Manual User manual for the Williams AV Digi-Wave 400 Series digital transceiver and receiver system. Learn about setup, operation, advanced features like interpretation and Q&A modes, troubleshooting, and specifications.
	Williams AV IR+ Infrared and Wi-Fi Assistive Listening System User Manual Comprehensive user manual and quick start guide for the Williams AV IR+ Infrared and Wi-Fi Assistive Listening System, covering setup, installation, configuration, operation, troubleshooting, specifications, and warranty for IR M1, IR E4, and IR A4 components.
	Williams AV IR Plus: Infrared and Wi-Fi Assistive Listening System User Manual Comprehensive user manual for the Williams AV IR Plus system, covering setup, operation, and troubleshooting of the IR M1 control center, IR E4 emitters, and IR A4 emitter arrays for enhanced hearing assistance and language translation.
	Williams Sound WIR RX22-4 SoundPlus 4-Channel Infrared Receiver User Guide Learn how to set up and operate the Williams Sound WIR RX22-4 SoundPlus 4-Channel Infrared Receiver for clear audio assistance. This guide covers installation, operation, safety, and specifications.
	Williams Sound WaveCAST Receiver WF R1 Installation and User Guide Official installation and usage guide for the Williams Sound WaveCAST Receiver WF R1, covering setup, Wi-Fi connection, app integration, charging, and regulatory compliance.


[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide Warranty

DLT 400 and DLR RCH Quick Start Guide Williams AV MAN 255D DLT400AIM DW SYS1AIM Digi Wave

AIM Advanced Interpretation Module System iQ cdn docs av iq instructions |||

Customer Service If you experience difficulty with your system, call Toll-Free for Customer Assistan ... e system up-and-running. Most features and customization options are not documented in this manual. **DLT 400**-AIM offers Advanced Interpretation Module and other features. For more information visit the...

lang:en score:51 filesize: 310.93 K page_count: 2 document date: 2023-05-25

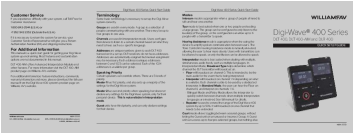

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide Warranty

DLT 400 and DLR RCH Quick Start Guide Williams AV Sound For additional information feature

instructions commands warranty more please the full user manual from Digi Wave system s 47659


DLTDR400UserGuide MAN 255 DLR400 QSG fullcompass common files av ampetronic 2020 03

soundpro content product documents williamsav 04

Customer Service If you experience difficulty with your system, call Toll-Free for Customer Assistan ... on what they need to hear, such as a specific language.

Addresses are unique numbers given to each **DLT 400** transceiver in a set up. DLR receivers do not have addresses. Addresses are automatically as...

lang:en score:49 filesize: 419.29 K page_count: 8 document date: 2019-12-17

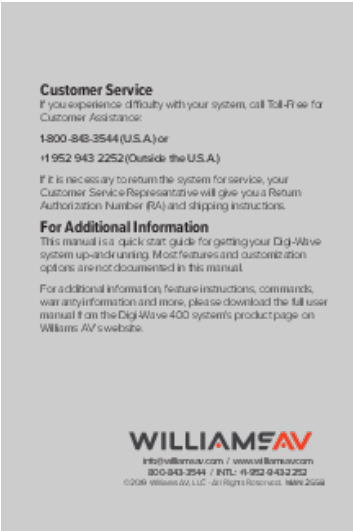

[\[pdf\]](#) Quick Start Guide Instructions Guide

DLT 400 and DLR RCH Quick Start Guide Williams AV MAN 255E web proacousticsusa media wysiwyg

|||

Digi-Wave 400 Series **DLT 400**, **DLT 400-AIM**, **DLT 400-ACM**, and DLR 400 QUICK SETUP GUIDE MAN 255E Digi-Wave 400 Series Quick Start Guide Controls and

Connectors Note: The DLR 400 RCH does not have a talk button or accept a microphone. Headphone and Microphone Jack Charging LED Volume Adjust Up and D...

lang:en score:45 filesize: 306.47 K page_count: 8 document date: 2024-06-04



DLR 400 ALK

Digi-Wave™ Digital, Alkaline Battery Receiver

QUICK SETUP GUIDE



MAN 267A

[\[pdf\]](#) Quick Start Guide Instructions Guide


DLR 400 ALK Quick Start Guide Williams AV Installation InstructionsWilliams Digi Wave Series Receiver Operates with Alkaline Batteries BlackWS DLR400ALK Assembly Instructionscdn adiglobaldistribution us pim Original 10059 WS Instructions |||

DLR 400 ALK Digi-Wave Digital, Alkaline Battery Receiver QUICK SETUP GUIDE

MAN 267A DLR 400 ALK Digital Receiver Operating Instructions The DLR 400 ALK

DLR receiver is compatible with Williams AV model **DLT 400** transceiver only. 1. One **DLT 400** assigned as the Master must be on. 2. Insert two A...

lang:en **score:44** filesize: 297.54 K page_count: 8 document date: 2019-10-09

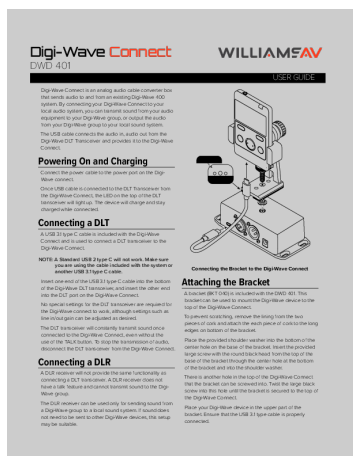[\[pdf\]](#) User Manual Guide

Digi Wave Connect User Guide Williams AV Manual MAN 277E DWD 401 williamsav 2020 07 |||

Digi-Wave Connect DWD 401 USER GUIDE Digi-Wave Connect is an analog audio cable converter box that ... f the bracket. Ensure that the USB 3.1 type cable is properly connected. CONNECT RoHS Made in USA **DLT 400** LINE IN 5VDC 1.2A AUDIO OUT DWD 401 Digi-Wave Connect Ports and Connections Connecting...


lang:en **score:44** filesize: 461.19 K page_count: 2 document date: 2021-11-24



[Williams AV Digi-Wave 400 Series DLT 400 DLR 400 Quick Setup Guide](#)

Quick setup guide for the Williams AV Digi-Wave 400 Series DLT 400 and DLR 400 wireless communication systems. Learn about terminology, modes, controls, and basic setup procedures.

lang:en score:43 filesize: 263.72 K page_count: 8 document date: 2021-08-06

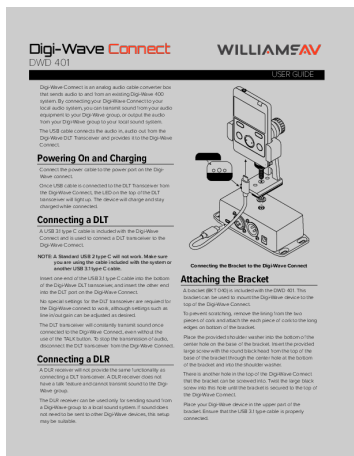

[\[pdf\] User Manual Guide](#)

Digi Wave Connect User Guide Williams AV ManualWilliams DWD 401 DLT 400 Series Audio Breakout Box with USB C to Cable and BKT 040 Mounting BracketWS DWD401 Manualcdn adiglobaldistribution us pim Original 10059 WS Manual |||

Digi-Wave Connect DWD 401 USER GUIDE Digi-Wave Connect is an analog audio cable converter box that ... f the bracket. Ensure that the USB 3.1 type cable is properly connected. CONNECT RoHS Made in USA **DLT 400** LINE IN 5VDC 1.2A AUDIO OUT DWD 401 Digi-Wave Connect Ports and Connections Connecting...

lang:en score:43 filesize: 461.19 K page_count: 2 document date: 2021-11-24



[Williams AV Digi-Wave 400 Series Digital Transceiver and Receiver User Manual](#)

User manual for the Williams AV Digi-Wave 400 Series digital transceiver and receiver system. Learn about setup, operation, advanced features like interpretation and Q&A modes, troubleshooting, and specifications.

lang:en score:41 filesize: 1.53 M page_count: 29 document date: 2023-06-08



[\[pdf\]](#) User Manual Instructions Guide

Digi Wave 400 User Manual Williams AV DigiWave Series Guide Sound DWS COM 6 PRO Pro Wireless Intercom System Full Compass Systems 84542 DigiWave400SeriesUserGuide fullcompass common files |||

Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400** DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling Instructions.....

lang:en **score:41** filesize: 1.24 M page_count: 17 document date: 2022-11-16



[\[pdf\]](#) User Manual Instructions Guide

Digi Wave 400 User Manual Williams AV DigiWave Series Guide DL210 NET 2 0 Loop Large Area Dual Channel Hearing Amplifier Full Compass Systems 89350 DigiWave400SeriesUserGuide fullcompass common files |||

Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400** DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling Instructions.....

lang:en **score:40** filesize: 1.25 M page_count: 17 document date: 2022-11-16



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV Safety Warnings and Recycling Instructions DLR ALK Differences System Overview RCH Controls Connectors DLT General Operation digiwave man en av ampetronic 2020 03

Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400** DLR 400 MAN 241G Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling Instructions

lang:en **score:39** filesize: 1.53 M page_count: 28 document date: 2021-03-19



[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

DLT 400 and DLR RCH Quick Start Guide Williams AV Installation InstructionsWilliams Digi Wave Series Rechargeable Receiver BlackUpload WS DLR400RCH AssemblyInstructionscdn adiglobaldistribution us pim Original 10056 Upload AssemblyInstructions InstructionsInstallation BlackWilliams Transciever AssemblyInstructionsUpload DLT400 ||| ||| Digi-Wave 400 Series DLT 400 and DLR 400 QUICK SETUP GUIDE MAN 255C Digi-Wave 400 Series Quick Start Guide Terminology Some basic terminology is necessary to set up the Digi-Wave system correctly. Groups are used in every mode. A group is a Digi-Wave 400 Series **DLT 400** and DLR 400 QUICK SETUP GUIDE MAN 255C Digi-Wave 400 Series Quick Start Guide Terminology Some basic terminology is necessary to set up the Digi-Wave system correctly. Groups are used in every mode. A group is a selection of people communicating with one another. There...

lang:en score:39 filesize: 263.72 K page_count: 8 document date: 2021-08-06



[\[pdf\]](#) Quick Start Guide Instructions Guide

DLR 400 ALK Quick Start Guide Williams AV MAN267 QSG williamsav 2020 04
DLR 400 ALK Digi-Wave™ Digital, Alkaline Battery Receiver QUICK SETUP GUIDE
MAN 267A DLR 400 ALK Digital Receiver Operating Instructions The DLR 400 ALK
DLR receiver is compatible with Williams AV model **DLT 400** transceiver only. 1. One **DLT 400** assigned as the Master must be on. 2. Insert two AA...

lang:en score:38 filesize: 297.54 K page_count: 8 document date: 2019-10-09



[\[pdf\]](#) User Manual Instructions Guide

Digi Wave 400 User Manual Williams AV Digital Transceiver and Receiver For simplicity throughout the rest of this manual DLT may be referred to as a The DLR RCH ALK when behavior both devices is same Combinations one or more s can used facilitate different events depending on what needs spoken heard Differences page 4 Sound Series Guide teltex content userguides
Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400**
DLR 400 MAN 241C Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling Instructions.....

lang:en score:37 filesize: 1.5 M page_count: 28 document date: 2020-03-30


[pdf] User Manual Instructions

Digi Wave 400 User Manual Williams AV AVThis product is designed to amplify sounds a high volume level which could potentially cause hearing damage if used improperly To protect your and v1v1williamsav 2020 04 MAN 241L DLT Manualwilliamsav and Williams Sound DW SYS3ACM 12 Person 00 — MPN SKU WIDWSYS3ACM0 UPC 707976001535v1v1v1williamsav Manualbhphotovideo lit files 1213799 707976001535Williams SYS2ACM 6 WIDWSYS2ACM0v1v1v1v1williamsav 1213799bhphotovideo 1208852 ||| ||| Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241L Digi-Wave 400 Series Contents Safety Warnings and Recycling Instructions . 3 System Overview .4 DLR 400 ALK Differences .4 DLT 400 Controls and Connectors . 5 DLR 40 ||| Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241L Digi-Wave 400 Series Contents Safety Warnings and Recycling Instructions . 3 System Overview .4 DLR 400 ALK Differences .4 DLT 400 Controls and Connectors . 5 DLR 40

Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241L Digi-Wave 400 Series Co ...

.....4 **DLT 400** Controls and Connectors.....


lang:en score:37 filesize: 6.19 M page_count: 66 document date: 2025-02-21

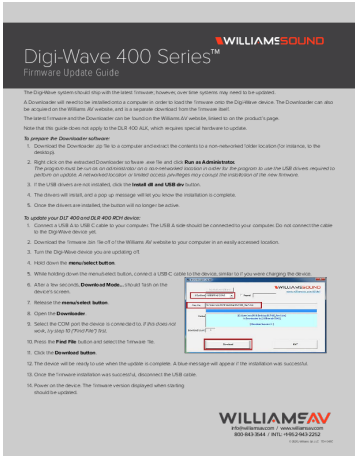

[pdf] Installation Guide Guide


Digi wave Firmware Guide Williams AV DigiWave400 FirmwareGuide williamsav 2020 04 Digi-Wave 400 Series™ Firmware Update Guide The Digi-Wave system should ship with the latest firmwa ... is complete. 5. Once the drivers are installed, the button will no longer be active. To update your **DLT 400** and DLR 400 RCH device: 1. Connect a USB A to USB C cable to your computer. The USB A side s...

lang:en score:37 filesize: 147.76 K page_count: 1 document date: 2020-01-23

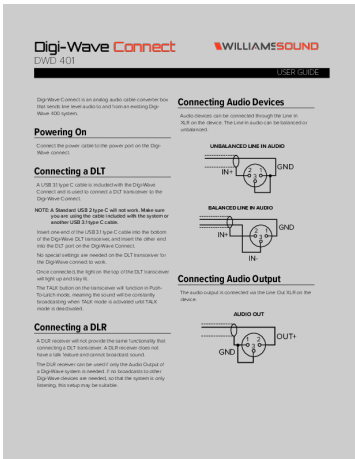

[pdf] Guide

Digi Wave Connect User Guide Williams AV MAN277B DigiWaveConnect williamsav 2020 07 Digi-Wave Connect DWD 401 USER GUIDE Digi-Wave Connect is an analog audio cable converter box that ... please see the full user manual on the Williams AV website. CONNECT RoHS 5VDC 1.2A Made in USA **DLT 400** LINE IN AUDIO OUT DWD 401 Digi-Wave Connect Ports and Connections info williamsav.com /... lang:en score:36 filesize: 393.78 K page_count: 2 document date: 2020-08-17

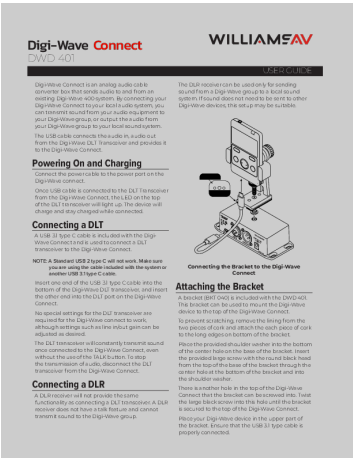


[pdf] Guide

Digi Wave Connect User Guide Williams AV 1091723 bhphotovideo lit files |||

Digi-Wave Connect DWD 401 USER GUIDE Digi-Wave Connect is an analog audio cable converter box that ... e upper part of the bracket. Ensure that the USB 3.1 type cable is properly connected. 5VDC 1.2A **DLT 400** LINE IN AUDIO OUT DWD 401

Digi-Wave Connect Ports and Connections Connecting Audio Devi...

lang:en score:36 filesize: 403.32 K page_count: 2 document date: 2023-09-26

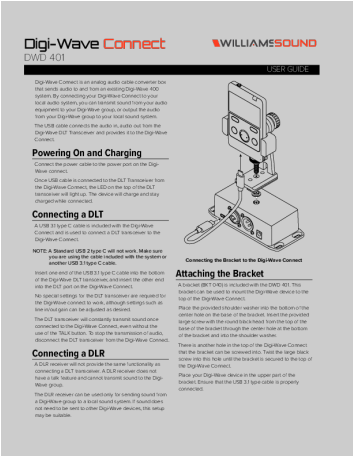

[pdf] Guide

Digi Wave Connect User Guide Williams AV MAN277C DigiWaveConnect williamsav 2020 07

Digi-Wave Connect DWD 401 USER GUIDE Digi-Wave Connect is an analog audio cable converter box that ... f the bracket. Ensure that the USB 3.1 type cable is properly connected. CONNECT RoHS Made in USA **DLT 400** LINE IN 5VDC 1.2A AUDIO OUT DWD 401 Digi-Wave Connect Ports and Connections Connecting...

lang:en score:35 filesize: 462.62 K page_count: 2 document date: 2020-10-06



[pdf] User Manual Instructions

Digi Wave 400 User Manual Williams AV MAN 241G DLT 4proacousticsusa media wysiwyg 4 srsLtd

AfmBOorvl6HVilG7gCukizGyQ0J7b1 ZT M7V1jU19I2xZ3A3QTtDBPh 4MAN

AfmBOooLzycReICeE6kBelFkJiPi5iW0b 6zO64lI95 srEDY2cNUVG Cproacousticsusa ||| ||| Digi-WaveTM

400 Series Digital Transceiver and Receiver USER MANUAL DLT 400 DLR 400 MAN 241G Digi-Wave

400 Series Digi-WaveTM 400 Series DLT 400 Digital Transceiver and DLR 400 Digital Receiver Contents

Safety Warnings and Recycling Instruc

Digi-WaveTM 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400**

DLR 400 MAN 241G Digi-Wave 400 Series Digi-WaveTM 400 Series **DLT 400** Digital

Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling

Instructions.....

lang:en score:35 filesize: 1.53 M page_count: 28 document date: 2021-03-19



[\[pdf\]](#) Quick Start Guide Instructions Guide

DLT 400 and DLR RCH Quick Start Guide Williams AV Digi Wave Series Full Compass SystemsMenu Navigation Buttons Power Button Press hold for power On Off quickly to navigate back a step when using the menu90735 DLT400QuickStartGuidefullcompass common files 90735 DLT400QuickStartGuide srsltid AfmBOorWvD5sYZm0nIAepWuHNP GyB Zm0t7KvdLEvXnla10H 9wDNyi |||

Digi-Wave 400 Series **DLT 400**, **DLT 400-AIM**, **DLT 400-ACM**, and **DLR 400 QUICK SETUP GUIDE MAN 255E** Digi-Wave 400 Series Quick Start Guide Controls and Connectors Note: The DLR 400 RCH does not have a talk button or accept a microphone. Headphone and Microphone Jack Charging LED Volume Adjust Up and D...

lang:en score:35 filesize: 306.48 K page_count: 8 document date: 2024-06-04



[\[pdf\]](#) User Manual Instructions Guide

Digi Wave 400 User Manual Williams AV DWS INT RCH Series Rechargeable Interpretation System for 4 Languages Plus FloorWS DWSINT54R Manualcdn adiglobaldistribution us pim Original 10059 WS FloorWilliams TGS 23 Tour Guide Professional Listening 1 and up to ListenersWS ManualWS DWSTGS234 ListenersWilliams PCS Personal Communication with 2 Transceivers Headset MicrophonesWS DWSPCS240 MicrophonesWilliams 3 Presenters 21 DWSINT44R COM PRO Wireless Intercom 8 ParticipantsWS DWSCOM8PR ParticipantsWilliams VIP 12 or More GuidesWS DWSTGSVIP GuidesWilliams DWSCOM840 ||| ||| Digi-WaveTM 400 Series Digital Transceiver and Receiver USER MANUAL DLT 400 DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-WaveTM 400 Series DLT 400 Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling In ||| Digi-WaveTM 400 Series Digital Transceiver and Receiver USER MANUAL DLT 400 DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-WaveTM 400 Series DLT 400 Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling In ||| Digi-WaveTM 400 Series Digital Transceiver and Receiver USER MANUAL DLT 400 DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-WaveTM 400 Series DLT 400 Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling In ||| Digi-WaveTM 400 Series Digital Transceiver and Receiver USER MANUAL DLT 400 DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-WaveTM 400 Series DLT 400 Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling In ||| Digi-WaveTM 400 Series Digital Transceiver and Receiver USER MANUAL DLT 400 DLR 400 MAN 241I-1122 Digi-Wave 400 Series Digi-WaveTM 400 Series DLT 400 Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling Instructions.....

lang:en score:35 filesize: 1.24 M page_count: 17 document date: 2022-11-16



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV WSDP3400RCHadorama col productManuals WSDP3400RCH

|||

Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241M

Digi-Wave 400 Series Co ...

.....4 **DLT 400** Controls and Connectors.....

lang:en **score:33** filesize: 6.29 M page_count: 66 document date: 2025-07-01



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV MAN241 DLT4 williamsav 2020 04

Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400**

DLR 400 MAN 241D Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital

Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling

Instructions.....

lang:en **score:33** filesize: 1.5 M page_count: 28 document date: 2020-05-19



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV MAN 241K williamsav 2020 04 |||

Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241K

Digi-Wave 400 Series Co ...

.....4 **DLT 400** Controls and Connectors.....

lang:en **score:33** filesize: 6.7 M page_count: 66 document date: 2024-07-02



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV v1williamsav 2021 03 MAN 241F DLT4 |||

Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400**
DLR 400 MAN 241F Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital
Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling
Instructions.....

lang:en **score:33** filesize: 1.53 M page_count: 28 document date: 2021-03-09



[\[pdf\]](#) Specifications Dimension Guide

DLT 400 Specifications Williams AV SpecificationsProduct specs Digi Wave Transceiver MCAT263D

DLT4 williamsav 2020 05 |||

SPECIFICATION DATA Digi-Wave **DLT 400 DLT 400** Transceiver Dimensions 4.22
W x 2.60 H x 0.50 D 107.3 mm x 66 mm x 12.6 mm Weight 3.3 oz 94 g including
battery Color Black/Silver Front/Back Case Material Black ABS plastic Battery type
Lithium Polymer with smart charge built into transceiver; 1800...

lang:en **score:32** filesize: 224.42 K page_count: 2 document date: 2021-10-15



[\[pdf\]](#) Quick Start Guide Guide Warranty Accessories Test Report

DLR 400 ALK Quick Start Guide Williams AV Digital Receiver AVThe receiver is compatible with model

DLT transceiver only 1 One assigned as the Master must be on 2 Insert two v1v1williamsav 2020 04

MAN 267C ALKwilliamsav |||

DLR 400 ALK Digital Receiver 2-Year Warranty Williams AV products are
engineered, designed and manuf ... eceiver Operating Instructions The DLR 400 ALK
DLR receiver is compatible with Williams AV model **DLT 400** transceiver only. 1. One
DLT 400 assigned as the Master must be on. 2. Insert two AAA batt...

lang:en **score:32** filesize: 279.49 K page_count: 2 document date: 2023-05-23




[pdf] User Manual Instructions

Digi Wave 400 User Manual Williams AV e83817b4985d45bef268eba454334de2 mediaplus co jp mp cms 2019 12 |||

Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL **DLT 400** DLR 400 MAN 241B Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling Instructions.....

lang:en score:32 filesize: 1.5 M page_count: 28 document date: 2019-12-11

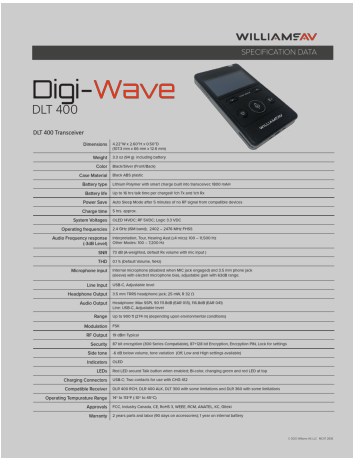


[pdf] Specifications Dimension Guide

DLT 400 Specifications Williams AV SpecificationsProduct specs Digi Wave Transceiver MCAT263E

DLT4 2 williamsav 2020 05 |||

SPECIFICATION DATA Digi-Wave **DLT 400 DLT 400** Transceiver Dimensions 4.22 W x 2.60 H x 0.50 D 107.3 mm x 66 mm x 12.6 mm Weight 3.3 oz 94 g including battery Color Black/Silver Front/Back Case Material Black ABS plastic Battery type Lithium Polymer with smart charge built into transceiver; 1800...

lang:en score:32 filesize: 316.26 K page_count: 2 document date: 2025-07-03

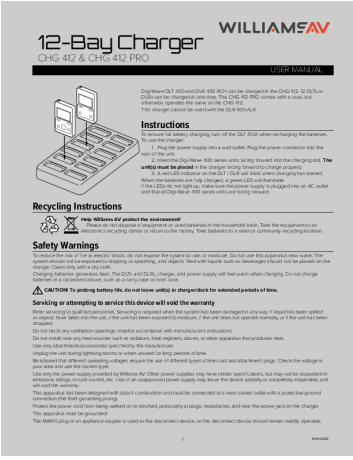

[pdf] User Manual Instructions

CHG 412 Manual Williams AV User ManualManuals Charger 12 Bay MAN 252B williamsav 2020 04 ||| |||

12-Bay Charger CHG 412 CHG 412 PRO USER MANUAL Digi-Wave DLT 400 and DLR 400 RCH can be charged in the CHG 412. 12 DLTs or DLRs can be charged at one time. The CHG 412 PRO comes wi 12-Bay Charger CHG 412 CHG 412 PRO USER MANUAL Digi-Wave **DLT 400** and DLR 400 RCH can be charged in the CHG 412. 12 DLTs or DLRs can be charged at one time. The CHG 412 PRO comes with a case, but otherwise operates the same as the CHG 412. This charger cannot be used with the DLR 400 ALK. Instruc...

lang:en score:31 filesize: 245.22 K page_count: 2 document date: 2022-03-08




[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV MAN 241H DLT 4 Index of files product 795 infotel ua |||

Digi-Wave™ 400 Series Digital Transceiver and Receiver **USER MANUAL DLT 400**
DLR 400 MAN 241H Digi-Wave 400 Series Digi-Wave™ 400 Series **DLT 400** Digital
Transceiver and DLR 400 Digital Receiver Contents Safety Warnings and Recycling
Instructions.....

lang:en **score:31** filesize: 1.51 M page_count: 30 document date: 2021-08-06

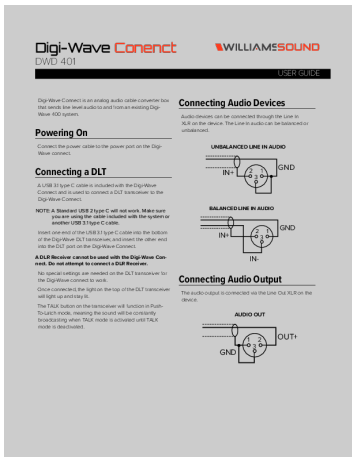

[\[pdf\]](#) Guide

Digi Wave Connect User Guide Williams AV The audio output is connected via the Line Out XLR on
device AUDIO OUT 1 2 3 GND MAN277 DigiWaveConnect williamsav 2020 07 |||

Digi-Wave Conenct DWD 401 USER GUIDE Digi-Wave Connect is an analog audio
cable converter box that ... please see the full user manual on the Williams AV
website. CONNECT RoHS 5VDC 1.2A Made in USA **DLT 400** LINE IN AUDIO OUT
DWD 401 Digi-Wave Connect Ports and Connections info williamsav.com /...

lang:en **score:31** filesize: 394.11 K page_count: 2 document date: 2020-07-07



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV DLT Transciever BlackWS DLT400 Manualcdn

adiglobaldistribution us pim Original 10125 WS |||

Digi-Wave 400 Series Digital Transceiver and Receiver **USER MANUAL MAN 241J**
Digi-Wave 400 Series Co ...

.....4 **DLT 400** Controls and
Connectors.....

lang:en **score:31** filesize: 1.53 M page_count: 29 document date: 2023-06-08



[\[pdf\]](#) User Manual Instructions

Digi Wave 400 User Manual Williams AV Wave™ Series ManualManuals Transceiver MAN 241M DLT 4 1
williamsav 2020 04 |||

Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241M
Digi-Wave 400 Series Co ...

.....4 **DLT 400** Controls and
Connectors.....

lang:en **score:30** filesize: 6.29 M page_count: 66 document date: 2025-07-01



[\[pdf\]](#) User Manual Specifications Datasheet Dimension Guide

DLT 400 Specifications Williams AV Product Data SheetWilliams Digi Wave Transciever BlackUpload WS
DLT400 ProductManualcdn adiglobaldistribution us pim Original 10056 Upload ProductManual |||

SPECIFICATION DATA Digi-Wave **DLT 400 DLT 400** Transceiver Dimensions 4.22
W x 2.60 H x 0.50 D 107.3 mm x 66 mm x 12.6 mm Weight 3.3 oz 94 g including
battery Color Black/Silver Front/Back Case Material Black ABS plastic Battery type
Lithium Polymer with smart charge built into transceiver; 1800...

lang:en **score:30** filesize: 224.42 K page_count: 2 document date: 2021-10-15




[\[pdf\]](#) User Manual Documentation

Digi Wave 400 User Manual Williams AV Download Documentation Firmware MAN 241J DLT 4 Spanish
williamsav 2023 09 |||

Serie Digi-Wave 400 Transceptor y receptor digital MANUAL DE USUARIO MAN
241J Serie DigiWave 400 C4

Controles y conectores **DLT**
400.....


lang:es **score:30** filesize: 2.99 M page_count: 55 document date: 2023-08-31

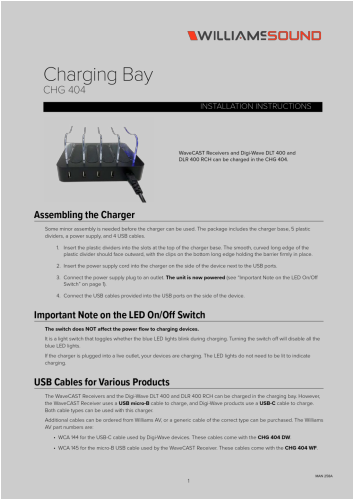

[pdf] User Manual Instructions

CHG 404 Manual Williams AV Installation Sound WF 4 Slot Charging Bay For WaveCAST Full Compass Systems 44158 CHG404InstallationManual fullcompass common files |||

Charging Bay CHG 404 INSTALLATION INSTRUCTIONS WaveCAST Receivers and Digi-Wave **DLT 400** and DLR 400 RCH can be charged in the CHG 404. Assembling the Charger Some minor assembly is needed before the charger can be used. The package includes the charger base, 5 plastic dividers, a power supply, an...
lang:en score:30 filesize: 208.87 K page_count: 2 document date: 2020-01-02

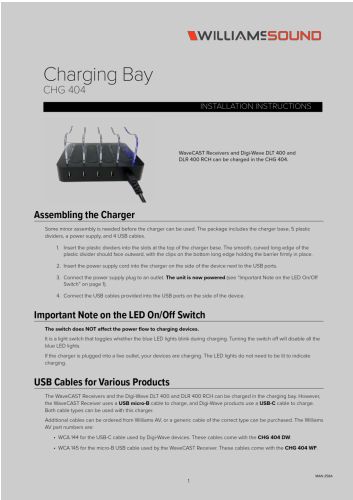

[pdf] User Manual Instructions

CHG 404 Manual Williams AV 86709 CHG404DWManualfullcompass common files CHG404DWManual86709 srsltld AfmBOor53np6ORLIEwb8jzNlq8pABiQ 0fRIAnU W9rmVaHzuzY4lxS6 CHG404DWManual86709

W9rmVaHzuzY4lxS6fullcompass AfmBOorDu d09AcUgHKw88Lhz06Mz1Wl6FflRxu9nlXdC0Om5Ze6 ype ypefullcompass AfmBOorRQbCKSsQLajYO4CBpknT3Nl7JltZ91v9BD4eZHm8bzFfXkgixd |||

Charging Bay CHG 404 INSTALLATION INSTRUCTIONS WaveCAST Receivers and Digi-Wave **DLT 400** and DLR 400 RCH can be charged in the CHG 404. Assembling the Charger Some minor assembly is needed before the charger can be used. The package includes the charger base, 5 plastic dividers, a power supply, an...
lang:en score:30 filesize: 221.07 K page_count: 2 document date: 2019-08-22




[pdf] User Manual Instructions

Digi Wave 400 User Manual Williams AV The communication system allows users to listen and talk one another wirelessly in a variety of scenarios A consists at least 1208851 bhphotovideo lit files |||

Digi-Wave 400 Series Digital Transceiver and Receiver USER MANUAL MAN 241L Digi-Wave 400 Series Co ...

.....4 **DLT 400** Controls and Connectors.....


lang:en score:29 filesize: 6.19 M page_count: 66 document date: 2025-02-21

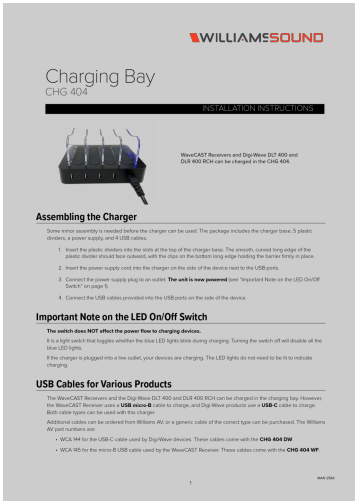

[pdf] User Manual Instructions

CHG 404 Manual Williams AV 2 Charging Bay info@williamsav williamsav co User res cloudinary iwh image upload q auto g center assets 1 26 MAN 2020 04

Charging Bay CHG 404 INSTALLATION INSTRUCTIONS WaveCAST Receivers and Digi-Wave **DLT 400** and DLR 400 RCH can be charged in the CHG 404. Assembling the Charger Some minor assembly is needed before the charger can be used. The package includes the charger base, 5 plastic dividers, a power supply, an... lang:en **score:28** filesize: 221.07 K page_count: 2 document date: 2019-08-22

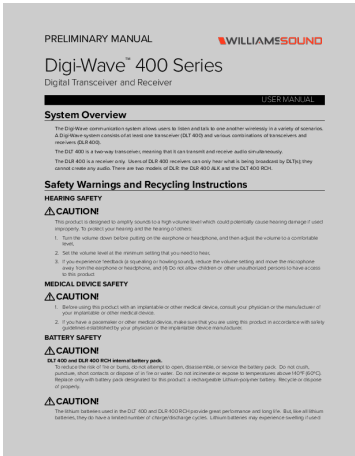

[pdf] User Manual Instructions

Digi Wave 400 User Manual Preliminary for Regulatory Only Williams AV Sound LLC DLT400 Portable Conference Transceiver CNMDLT400 dlt400

PRELIMINARY MANUAL Digi-Wave™ 400 Series Digital Transceiver and Receiver USER MANUAL System Overview The Digi-Wave communication system allows users to listen and talk to one another wirelessly in a variety of scenarios. A Digi-Wave system consists of at least one transceiver **DLT 400** and various... lang:en **score:28** filesize: 446.6 K page_count: 8 document date: 2019-08-23



[pdf] Specifications Dimension Guide Warranty

CHG 412 and PRO Specifications Williams AV See WILLIAMS Charger with Case 12 Bay for Digi Wave DLT 400 or DLR RCH MCAT 276D 1022 1 williamsav 2020 05 Attachments |||

SPECIFICATION DATA CHG 412 CHG 412 PRO 12-Bay Charger 12-bay charger for Digi-Wave **DLT 400** and DLR 400 RCH. CHG 412 / CHG 412 PRO Dimensions: 9 L x 7 W x 1.5 H 23 cm L x 17.8 cm W x 3.8 cm H Weight: 1.8 lbs 845 g Enclosure: Black, ABS plastic with metal base Power Supply Input: TFP 066, 90-240... lang:en **score:27** filesize: 451.61 K page_count: 2 document date: 2022-10-28

