

[Manuals.plus](#) /

› [Skullcandy](#) /

› Skullcandy Indy Evo Wireless Earbuds User Manual

Skullcandy Indy Evo (S2IVW-N744)

Skullcandy Indy Evo Wireless Earbuds User Manual

Model: Indy Evo (S2IVW-N744)

INTRODUCTION

Welcome to your Skullcandy Indy Evo Wireless Earbuds user manual. This guide provides detailed instructions for setting up, operating, maintaining, and troubleshooting your earbuds. The Indy Evo earbuds offer a true wireless audio experience with features designed for convenience and durability.

Key features include:

- Up to 30 hours of total battery life (6 hours in earbuds, 24 hours in charging case).
- Intuitive touch controls for media, calls, and voice assistant.
- IP55 sweat, water, and dust resistance.
- Built-in Tile™ technology for easy tracking.
- Three EQ modes: Music, Podcast, and Movie.

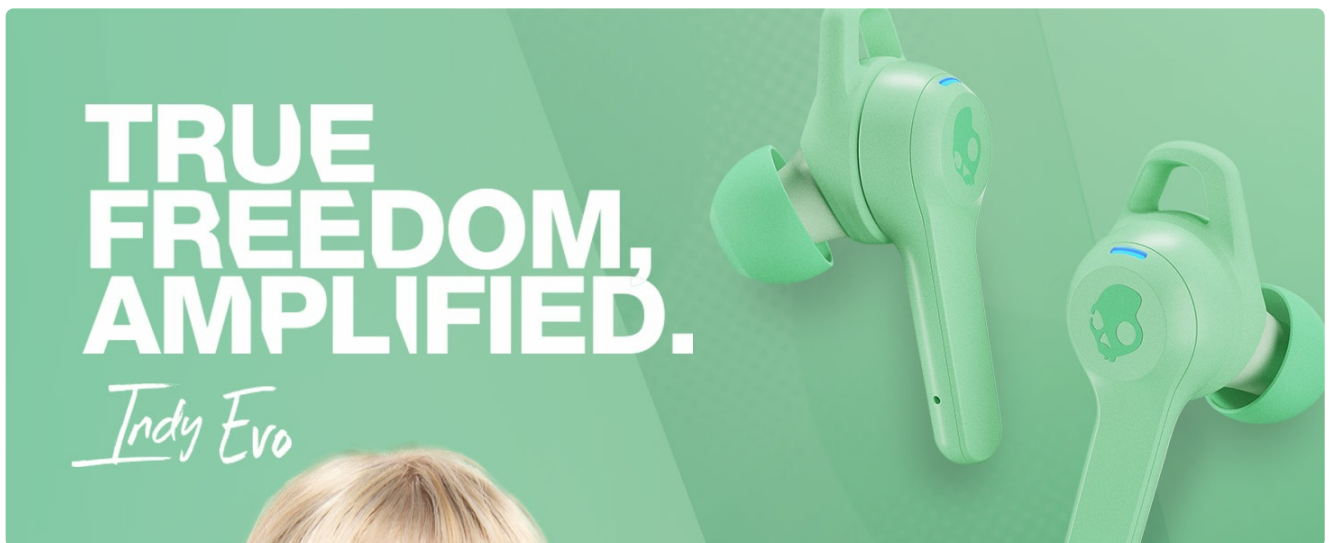


Image: Skullcandy Indy Evo earbuds and charging case, highlighting the product's freedom and amplification.

WHAT'S IN THE BOX

Your Skullcandy Indy Evo package includes the following items:

- True Wireless Earbuds (Left and Right)
- Charging Case
- Ear Gels (Small, Medium, Large)
- USB-C Charging Cable
- User Manual (this document)



***INCLUDED CONTENTS (PURE MINT COLORWAY SHOWN)**

Image: Included contents of the Skullcandy Indy Evo package, showing earbuds, charging case, USB-C cable, and various ear gel sizes.

SETUP

1. Charging Your Earbuds and Case

Before first use, fully charge your Indy Evo earbuds and charging case. The case provides additional charges for your earbuds on the go.

- **Total Playtime:** Up to 30 hours (6 hours in earbuds + 24 hours from charging case).
- **Rapid Charge:** A 10-minute charge provides approximately 2 hours of playtime.
- **Full Charge Time:** Approximately 1 hour for earbuds and case.

1. Place the earbuds into the charging case. Ensure they are seated correctly.

2. Connect the USB-C charging cable to the charging port on the case and to a power source.
3. The LED indicators on the case will illuminate to show charging status.





Image: Skullcandy Indy Evo earbuds and charging case, illustrating the product's design and charging indicators.

Image: Visual representation of the Indy Evo's battery life, showing 6 hours for earbuds and 24 hours for the charging case.

2. Initial Pairing with a New Device

1. Remove both earbuds from the charging case. They will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), open the Bluetooth settings.
3. Look for "Indy Evo" in the list of available devices and select it to connect.
4. Once connected, you will hear an audio prompt confirming successful pairing.

If you only want to use one earbud, either the left or right earbud can be used independently for calls or music.

OPERATING YOUR EARBUDS

Touch Controls

The Indy Evo earbuds feature intuitive touch controls on each earbud. These controls allow you to manage media playback, calls, and other functions without needing to access your connected device.

Control without your phone.

A simple series of touches control everything directly from your buds. Answer calls, skip tracks, adjust volume, activate an assistant, switch EQ modes, even turn on Ambient Mode to hear more of your surroundings—all without ever touching your device.

Image: Skullcandy Indy Evo earbuds, illustrating the convenience of controlling functions directly from the earbuds.

Indy Evo Touch Controls

Action	Left Earbud	Right Earbud
--------	-------------	--------------

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap	Single Tap
Volume Down	Double Tap	N/A
Volume Up	N/A	Double Tap
Track Back	Press & Hold (2s)	N/A
Track Forward	N/A	Press & Hold (2s)
Answer/End Call	Single Tap	Single Tap
Activate Voice Assistant	Triple Tap	Triple Tap
Switch EQ Mode	Triple Tap (after voice assistant)	Triple Tap (after voice assistant)
Ambient Mode On/Off	Press & Hold (4s)	Press & Hold (4s)

EQ Modes

The Indy Evo offers three preset Equalizer (EQ) modes to optimize your audio experience for different content:

- **Music Mode:** Balanced sound for general listening.
- **Podcast Mode:** Enhances vocals for clear dialogue.
- **Movie Mode:** Optimized for cinematic audio with enhanced bass and dynamics.

To switch between EQ modes, triple-tap either earbud. You will hear an audio prompt indicating the current mode.



Image: Feature summary for Indy Evo, highlighting solo bud use, EQ modes, and IP55 rating.

Ambient Mode

Ambient Mode allows you to hear your surroundings without removing your earbuds. This is useful for situations where you need to be aware of your environment, such as walking in a city or having a quick conversation. To activate or deactivate Ambient Mode, press and hold either earbud for 4 seconds.

Tile™ Technology

Your Indy Evo earbuds are equipped with Tile™ technology, allowing you to track them if they are misplaced. To use this feature:

1. Download the Tile app on your smartphone or tablet.
2. Follow the in-app instructions to activate Tile for your Indy Evo earbuds.
3. If an earbud is misplaced, use the Tile app to make it ring or view its last known location on a map.



Never lost with Tile.

Built-in Tile™ technology makes it easy to track down either earbud if you ever misplace them. Download the Tile app and follow the instructions to activate.

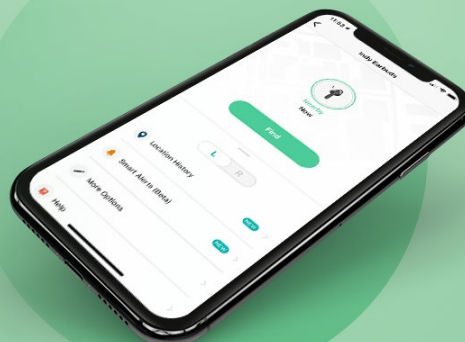


Image: Illustration of the Tile app interface on a smartphone, demonstrating how to locate misplaced Indy Evo earbuds.


MAINTENANCE

Cleaning Your Earbuds

Regular cleaning helps maintain sound quality and hygiene. Use a soft, dry, lint-free cloth to wipe the earbuds and charging case. For ear gels, you may gently remove them and clean with a mild soap solution, then rinse and dry thoroughly before reattaching.

Water and Dust Resistance

The Indy Evo earbuds are rated IP55, meaning they are resistant to sweat, light water splashes, and dust. This makes them suitable for workouts and outdoor activities. However, they are not designed for submersion in water. Ensure the charging port is dry before charging.

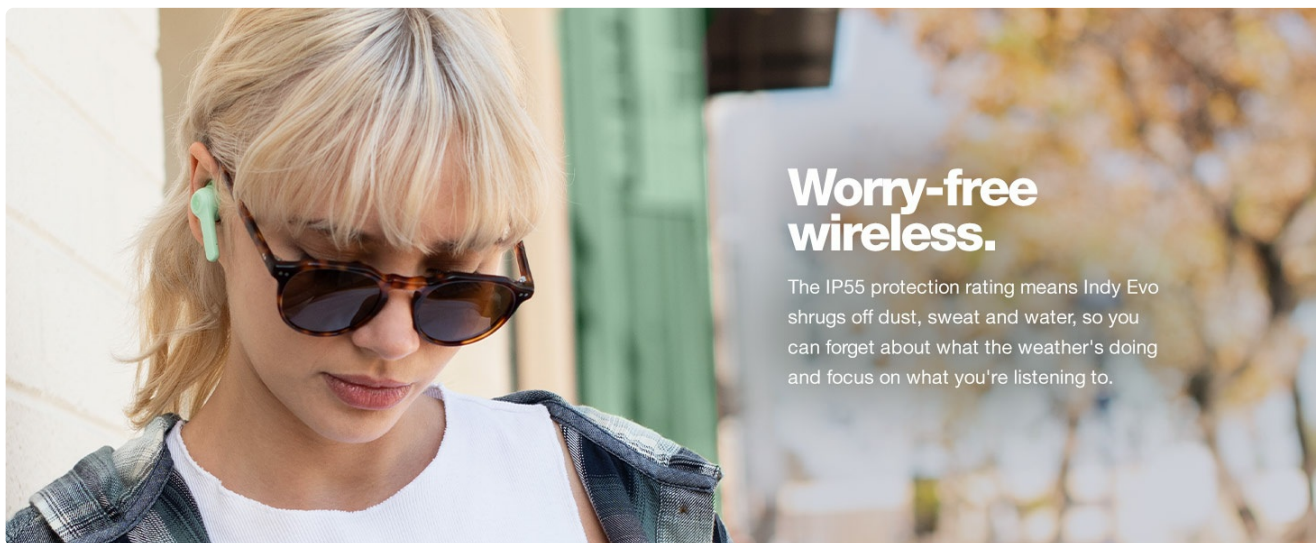

Worry-free wireless.

The IP55 protection rating means Indy Evo shrugs off dust, sweat and water, so you can forget about what the weather's doing and focus on what you're listening to.

Image: A user wearing Indy Evo earbuds, emphasizing their IP55 water and dust resistance for active use.

TROUBLESHOOTING

Common Connectivity Issues

- **Earbuds not connecting to each other:** If only one earbud is playing audio, or they are not syncing, a re-pairing cycle is often required.
- **Intermittent disconnections:** Ensure your device's Bluetooth is stable and that there are no major obstructions between your device and the earbuds.
- **Case draining battery unexpectedly:** If the charging case runs out of power while earbuds are inside, the earbuds may turn on and attempt to connect, potentially draining their battery. Ensure the case is charged.

Re-Pairing Cycle (Factory Reset)

If you experience persistent connectivity issues, performing a factory reset and re-pairing can resolve many problems:

1. **Disconnect Earbuds:** On your device, go to Bluetooth settings and "forget" or "unpair" "Indy Evo" from the list of connected devices.
2. **Turn Off Bluetooth:** Temporarily disable Bluetooth on your device.
3. **Power Off Earbuds:** Place both earbuds back into the charging case.
4. **Reset Each Earbud Individually:**
 - a. Remove one earbud from the case.
 - b. Press and hold the touch sensor on the earbud until it cycles through its power states (On, Pairing, Off). Release when it powers off.
 - c. Repeat this process for the other earbud.
5. **Re-Sync Earbuds:**
 - a. Remove both earbuds from the case simultaneously.
 - b. They should flash blue three times, indicating they are syncing with each other.
 - c. After syncing, the left earbud will enter pairing mode (indicated by a flashing light).
6. **Reconnect to Device:** Re-enable Bluetooth on your device and select "Indy Evo" from the available devices to pair.

Sound Quality Issues

If sound quality is poor or inconsistent, ensure the earbud tips match the size of your ear canals and that the earbuds are worn properly. Experiment with different ear gel sizes for an optimal fit and seal.

SPECIFICATIONS

Feature	Detail
Model Name	TW_INDY_EVO (S2IVW-N744)
Brand	Skullcandy
Connectivity Technology	Bluetooth 5.0
Wireless Communication Technology	Bluetooth
Battery Life (Earbuds)	Up to 6 Hours

Feature	Detail
Battery Life (Total with Case)	Up to 30 Hours
Charging Time	Approximately 1 Hour
Water Resistance Level	IP55 (Sweat, Water, Dust Resistant)
Noise Control	Sound Isolation
Headphones Jack	No Jack
Included Components	Charging Case, Ear Gels (S, M, L), True Wireless Earbuds, USB-C Charging Cable, User Manual
Material	Plastic
Item Weight	57 Grams (2.01 ounces)
Frequency Range	20 Hz - 20,000 Hz
Bluetooth Range	10 Meters
Impedance	32 Ohm
Special Features	Android Phone Control, Lightweight, Microphone Included, Water Resistant, iOS Phone Control

WARRANTY AND SUPPORT

Skullcandy products are designed for durability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Skullcandy website. Warranty terms typically cover manufacturing defects.

For further assistance, technical support, or to view frequently asked questions, please visit the official Skullcandy support page or their brand store:

[Visit the Skullcandy Store on Amazon](#)

When contacting support, please have your product model number (Indy Evo, S2IVW-N744) and proof of purchase available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question