

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Alecto](#) /
- › [Alecto DVM-64 Wireless Baby Monitor User Manual](#)

## Alecto DVM-64

# Alecto DVM-64 Wireless Baby Monitor User Manual

Model: DVM-64

## INTRODUCTION

The Alecto DVM-64 Wireless Baby Monitor provides a secure and reliable way to monitor your baby. This system includes a baby unit (camera) and a parent unit (monitor) with a large display, offering features such as night vision, two-way communication, temperature monitoring, and lullabies. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device.



Image: The Alecto DVM-64 baby monitor system, showing the white camera unit on the left and the parent monitor unit with a screen displaying a baby on the right.

## PACKAGE CONTENTS

---

Before you begin, please verify that all items are present in the package:

- 1x Baby Unit (Camera)
- 1x Parent Unit (Monitor)
- 2x Power Adapters
- Mounting Material (for camera)
- User Manual (in multiple languages)
- Illustrated Quick Start Guide
- General Safety Regulations





Image: All components included in the Alecto DVM-64 package, including the baby unit, parent unit, power adapters, mounting hardware, and various instruction manuals.

## SETUP

---

### 1. Charging the Parent Unit

Connect one of the provided power adapters to the parent unit and plug it into a power outlet. Allow the parent unit to fully charge before first use to ensure optimal battery life. The parent unit features a rechargeable battery for portable use.

### 2. Powering the Baby Unit (Camera)

Connect the second power adapter to the baby unit and plug it into a power outlet near your baby's crib or desired monitoring area. The baby unit requires continuous power to operate.

### 3. Positioning the Baby Unit

Place the baby unit on a flat, stable surface, or mount it to a wall for an optimal viewing angle. Ensure the camera has a clear, unobstructed view of your baby. The camera can be manually rotated and tilted to adjust the viewing angle.



Image: Multiple views of the Alecto DVM-64 camera unit, showing its front, back, side, and bottom with mounting holes.



## Einzigartige Bildqualität

Bildschirmgröße  
2.4" / 6,1 cm

## VOX Funktion

Elterneinheit schaltet sich  
ein wenn Geräusche  
wahrgenommen werden



Image: The Alecto DVM-64 camera unit mounted on a wall, demonstrating its flexible placement options.

### 4. Positioning the Parent Unit

Place the parent unit in a convenient location where you can easily monitor your baby. The parent unit features a built-in kickstand for upright positioning. Ensure it is within the operational range of the baby unit.



Image: A side view of the Alecto DVM-64 parent unit, highlighting its integrated kickstand for stable placement.

## 5. Powering On

Once both units are connected to power, press and hold the power button on each unit until the indicator lights illuminate. The units should automatically connect. If they do not, refer to the troubleshooting section.

## OPERATING INSTRUCTIONS

---

### Basic Monitoring

The parent unit's 2.4-inch (6.1 cm) color screen provides a clear video feed from the baby unit. The monitor automatically switches to night vision mode in low-light conditions, ensuring clear images even in darkness.

## Temperaturwiedergabe mit Alarm



## Erweiterbar mit dem DVM-64C

Bis zu 4 Kameras können kombiniert und verbunden werden

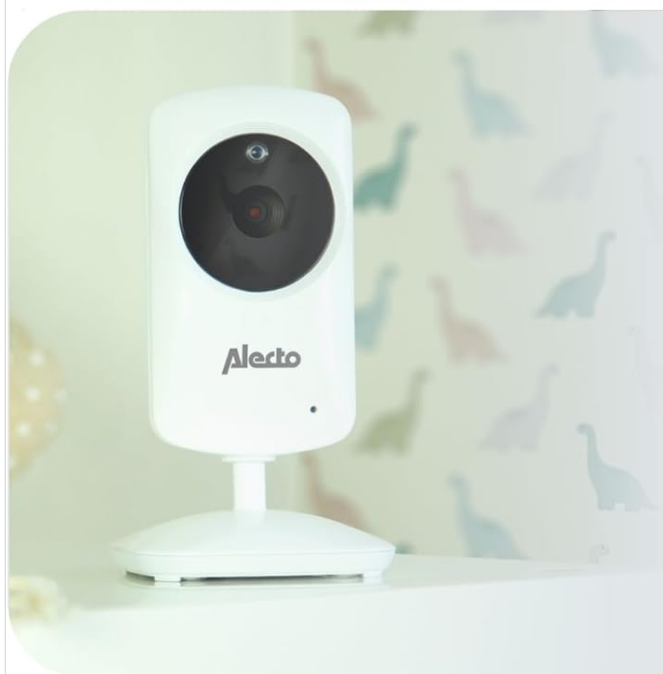


Image: The Alecto DVM-64 parent unit displaying a clear image of a baby on its 2.4-inch screen, illustrating the screen quality.

### **VOX Function (Voice Operated Exchange)**

The VOX function conserves battery life by keeping the parent unit's screen off until sound is detected from the baby unit. When your baby makes a sound or cries, the screen will automatically activate. The sensitivity of the VOX function can be adjusted through the parent unit's menu.



# ABMESSUNGEN

Image: The Alecto DVM-64 parent unit in a hand, illustrating the VOX function where the screen activates upon detecting sound.

## Two-Way Talk (Intercom Function)

Press and hold the microphone button on the parent unit to speak to your baby through the baby unit's speaker. Release the button to hear your baby's sounds again.

## Lullabies

The DVM-64 includes 8 integrated lullabies that can be played from the baby unit to soothe your baby. Access and control the lullabies through the parent unit's menu.

## Temperature Monitoring

The parent unit displays the temperature of the baby's room, as measured by the baby unit. You can set an alarm to be notified if the temperature goes outside a predefined range.





- Babyeinheit
- Elterneinheit
- Adapter 2x
- Montagematerial
- Anleitung DE/EN/NL/FR/ES/IT/PL
- Schnellstartanleitung bebildert
- Allgemeine Sicherheitsvorschriften

# LIEFERUMFANG

Image: The Alecto DVM-64 parent unit showing the room temperature display on its screen, with an icon indicating temperature monitoring.

## Range and Connectivity

The DVM-64 offers a secure and interference-free connection. The operational range is up to 50 meters indoors and up to 300 meters outdoors (line of sight). An out-of-range warning will alert you if the connection is lost.



## Große Reichweite

Bis zu 50m in Innenräumen  
und 300m im Außenbereich

## Einfache Wandmontage

Für jedes Kinderzimmer  
geignet



Image: The Alecto DVM-64 camera unit with a Wi-Fi signal icon, illustrating its long range capabilities of up to 50m indoors and 300m outdoors.

### Multi-Camera Support

The Alecto DVM-64 system is expandable, allowing you to connect up to four DVM-64C cameras to a single parent unit. The parent unit can automatically scan and display feeds from connected cameras every 6 seconds.



Image: A visual representation showing the Alecto DVM-64 system's ability to connect up to four cameras to one parent unit, with a collage of multiple camera placements.

## MAINTENANCE

### Cleaning

To clean the baby unit and parent unit, use a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure the devices are powered off and unplugged before cleaning.

### Battery Care (Parent Unit)

To prolong the life of the parent unit's rechargeable Lithium-polymer battery:

- Avoid fully discharging the battery frequently.
- Charge the unit regularly, even if not in constant use.
- Store the unit in a cool, dry place if not used for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No image/sound on parent unit	Units are out of range or not powered on.	Ensure both units are powered on and within range. Check power adapters are securely connected.
Poor image quality	Low light conditions (night vision should activate), interference, or camera lens is dirty.	Ensure night vision is enabled. Move units away from other electronic devices. Clean the camera lens gently.
Parent unit battery drains quickly	Battery not fully charged, or VOX function is off.	Fully charge the parent unit. Enable VOX function to conserve battery.
No two-way talk function	Microphone button not pressed or held correctly.	Ensure you are pressing and holding the microphone button on the parent unit while speaking.

## SPECIFICATIONS

---

Feature	Detail
Model Number	DVM-64
Brand	Alecto
Video Resolution	1080p
Color	White
Dimensions (L x W x H)	6.6 x 6.6 x 11.8 cm (Camera Unit)
Weight	295 grams
Wireless Technology	Wi-Fi
Power Input	5V DC
Battery (Parent Unit)	Lithium-polymer (rechargeable, up to 10 hours standby)
Screen Size	2.4 inches / 6.1 cm
Indoor Range	Up to 50 meters
Outdoor Range	Up to 300 meters (line of sight)
Special Features	Night Vision, Two-Way Talk, Temperature Display with Alarm, 8 Lullabies, VOX Function, Adjustable Sensitivity, Expandable to 4 Cameras (DVM-64C)

Feature	Detail
Manufacturer	Lenco GmbH
Country of Origin	China

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included in your product package or visit the official Alecto website. Keep your proof of purchase for any warranty claims.

Alecto Baby is committed to providing reliable products and support. For further assistance, please contact Alecto customer service.

