

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moukey](#) /

› [Moukey MWm-5 Dynamic Karaoke Microphone Instruction Manual](#)

Moukey MWm-5

Moukey MWm-5 Dynamic Karaoke Microphone Instruction Manual

Brand: Moukey

Model: MWm-5 (MK0121)

INTRODUCTION

The Moukey Dynamic Karaoke Microphone is engineered for clear vocal reproduction, featuring a unidirectional and cardioid pickup pattern. This design effectively captures your voice while minimizing background noise, ensuring your performance or speech is heard with clarity. Its robust metal construction makes it both lightweight and durable, suitable for various applications.

Equipped with a non-slip mesh head, the microphone is designed to prevent accidental slips from surfaces, eliminating the need for additional stands in many settings. It offers broad compatibility with a 3.5mm to 6.35mm (1/4") TS connector, allowing connection to karaoke machines, amplifiers, mixers, PA systems, and speakers that feature a MIC input jack. A generous 13-foot (4-meter) cable provides ample freedom of movement, making it ideal for diverse vocal uses from live stage performances to casual karaoke sessions.

WHAT'S IN THE BOX

- 1x Dynamic Microphone
- 1x 13.2ft/4m Audio Cable
- 1x 6.35mm(1/4") TS Connector



Image: The package contents laid out, showing the Moukey dynamic microphone, a long audio cable, and a 6.35mm (1/4") TS connector.

SETUP

- Connect the Microphone:** Insert the XLR end of the provided audio cable firmly into the base of the Moukey Dynamic Microphone.
- Connect to Audio Device:** Insert the 6.35mm (1/4") TS connector end of the audio cable into the MIC input jack of your compatible audio device (e.g., karaoke machine, amplifier, mixer, PA system, or speaker).
Important: Ensure your device has a dedicated MIC input jack. AUX and LINE IN jacks are not suitable for this microphone.
- Power On:** Locate the ON/OFF switch on the microphone handle and slide it to the 'ON' position.

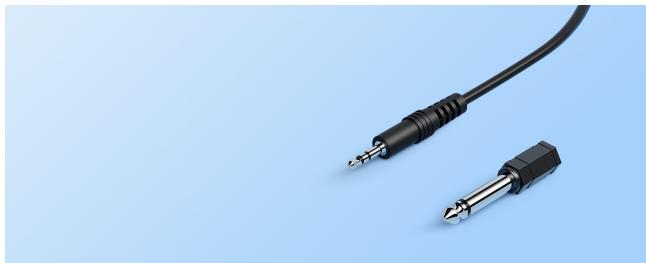


Image: The Moukey microphone with its detachable cable and 6.35mm (1/4") TS connector, illustrating the connection points.



Image: A visual representation of the microphone's compatibility with multiple audio devices, highlighting the 6.35mm (1/4") TS connector.

OPERATING INSTRUCTIONS

- Power On/Off:** Use the slide switch on the microphone handle to turn the microphone ON or OFF.
- Optimal Sound Pickup:** For best sound quality and to utilize the cardioid pickup pattern effectively, speak or sing directly into the top mesh head of the microphone. Avoid speaking into the sides or back to minimize unwanted background noise.
- Adjust Volume:** Adjust the microphone volume on your connected audio device. The microphone itself does not have volume controls.

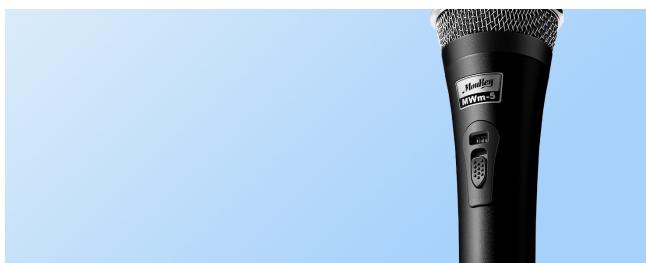


Image: A detailed view of the microphone's handle, highlighting the simple ON/OFF slide switch for easy operation.

Video: A short promotional video from Moukey demonstrating the microphone in use during a party setting, showcasing its ease of use for singing.

PRODUCT SPECIFICATIONS

Feature	Specification
Impedance	600 Ohms
Microphone Form Factor	Handheld
Item dimensions L x W x H	9.76 x 4.65 x 2.8 inches

Power Source	Corded Electric
Material	Metal
Signal-to-Noise Ratio	70 dB
Hardware Platform	Karaoke Machine
Number of Channels	1
Frequency Response	18 KHz
Item Weight	11.3 ounces
Model Name	MWm-5
Connectivity Technology	XLR
Connector Type	XLR
Special Feature	Non-slip Design, Noise Reduction, Lightweight
Compatible Devices	Amplifier, Audio Mixer, Karaoke Machine, PA System, Speaker
Color	black
Polar Pattern	Unidirectional

Image: A visual display of the microphone's technical specifications, including its dynamic type, 600 Ohm impedance, 50-18000Hz frequency response, and cardioid polar pattern.

Image: The microphone's physical dimensions are clearly marked, indicating its length, width, and the 13.5-foot (4-meter) cable length.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the microphone body. Do not use liquid cleaners or solvents.
- **Storage:** Store the microphone in a dry, cool place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharp bends or kinks in the cable to prevent internal damage. Coil the cable loosely when storing.

TROUBLESHOOTING

- **No Sound:**
 - Ensure the microphone's ON/OFF switch is in the 'ON' position.
 - Verify that the audio cable is securely connected to both the microphone and the audio device's MIC input.
 - Check the volume settings on your audio device and ensure it is not muted.
- **Distorted Sound:**
 - Reduce the microphone volume on your audio device.
 - Ensure you are not speaking too close to the microphone's mesh head, which can cause clipping.
- **Background Noise:**
 - Ensure you are speaking directly into the top of the microphone, utilizing its cardioid pickup pattern.

- Minimize ambient noise in your environment.

WARRANTY AND SUPPORT

This Moukey microphone comes with a 12-month warranty. For any support inquiries or warranty claims, please refer to the contact information provided on your product packaging or visit the official Moukey website.