

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NOXARTE](#) /

› [NOXARTE 36 Inch Crystal Ceiling Fan User Manual](#)

NOXARTE SDD0115-3

NOXARTE 36 Inch Crystal Ceiling Fan User Manual

Model: SDD0115-3 | Brand: NOXARTE

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your NOXARTE 36 Inch Crystal Ceiling Fan. This modern fandelier combines the elegance of a crystal chandelier with the functionality of a ceiling fan, featuring LED dimmable lighting, remote and app control, and a reversible motor for year-round comfort.



Figure 1: NOXARTE 36 Inch Crystal Ceiling Fan with included remote control and smartphone app interface.

2. SAFETY INFORMATION


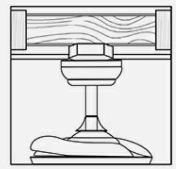
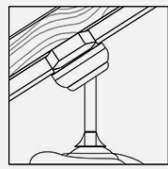

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power is disconnected at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes.
- The mounting structure must be capable of supporting the fan's weight (approximately 21.4 pounds).
- Do not bend fan blades when installing, balancing, or cleaning the fan.
- Keep hands, feet, and other objects clear of the rotating fan blades.
- This product is designed for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

SPACE RECOMMENDATION

<p>Our modern fan with light comes with 4 retractable fan blades to save space. Recommended rooms up to 75 to 144 sq.ft. Suitable for dining room, living room, kitchen island, bedroom, entryway, and more.</p>	<p>Use long downrod for high or angled ceiling less than 22°.</p> <p>Use short downrod for flat and less than 9 feet ceiling.</p> <p>NOTE: For longer downrod or angled ceiling greater than 22°, please contact us.</p>	<p>2 Different Size Downrod</p> <p>Crystal ceiling fan with light base comes with 2 downrods for your need 5" and 10".</p>
--	--	--

Figure 2: Exploded view of the NOXARTE 36 Inch Crystal Ceiling Fan components.

Item	Description	Quantity
1	Crystal Ball	19 pcs
2	Instruction Manual	1
3	Canopy	1
4	Fan Motor Base	1
5	Light Shade	1
6	Remote Control	1
7	Adapter Cover	1
8	Spare Parts	As needed
9	Mounting Bracket	1
10	Long Downrod (10")	1
11	Short Downrod (5")	1
12	Hardware Bag	1

4. SPECIFICATIONS

Feature	Detail
Brand	NOXARTE
Model Number	SDD0115-3

Feature	Detail
Color	Chrome
Fan Design	Ceiling Fan (Fandelier)
Power Source	Hardwire
Style	Modern
Product Dimensions (Extended)	36" Diameter
Product Dimensions (Retracted)	16" Diameter
Lampshade Dimensions	D16" x H8"
Ceiling Canopy Dimensions	D5.9" x H2.3"
Total Height (with 5" rod)	21"
Total Height (with 10" rod)	25.7"
Room Type	Bedroom, Living Room, Dining Room, Kitchen Island, Entryway
Special Feature	Dimmable LED, Retractable Blades, Reversible Motor
Wattage	72 watts (LED)
Number of Blades	4 (Retractable)
Voltage	120 Volts
Control Method	Remote Control, APP Control, Wall Switch (light only)
Motor Type	Silent DC Motor
Recommended Room Size	75 to 144 sq.ft.
Item Weight	21.4 pounds

CEILING FAN SIZE



CRYSTAL CEILING FAN INFORMATION

Material: Crystal lampshade, acrylic clear blades, stainless steel lamp body.
Diameter 36" when extended and 16" when closed.

Number of blades: 4

Light source: Dimmable 72 watts LED patch

Voltage: 110V-120V

Mounted Type: Downrod (5" & 10")

Function: 6 Wind Speeds; Timing; Reversible Function; LED dimmable; Remote Control; DC Silent Motor.

Use Space: Recommended rooms up to 75 to 144 sq. ft.

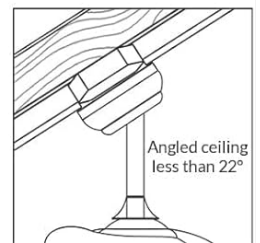
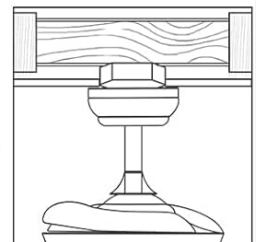


Figure 3: Detailed dimensions of the ceiling fan and its components.

5. SETUP AND INSTALLATION

The NOXARTE Crystal Ceiling Fan is designed for easy installation. All necessary parts for assembly and installation are included. For detailed visual guidance, installation videos can be provided upon request from NOXARTE customer service.

5.1 Downrod Selection

The package includes two downrods: 5 inches and 10 inches, offering flexibility for various ceiling heights. Use the 5-inch downrod for flat ceilings or ceilings less than 9 feet high. Use the 10-inch downrod for higher or angled ceilings (less than 22 degrees). For angled ceilings greater than 22 degrees, please contact customer service for assistance.



MUTE MOTOR

Timer function (2h auto-off) will bring great convenience to your home life.

Upgrade Ceiling Fan

Ordinary Ceiling Fan



DC Copper Motor

Figure 4: Downrod selection guide for various ceiling types.

5.2 Wiring and Mounting

Follow the detailed wiring diagrams and mounting instructions provided in the included User Guide (PDF). Ensure all electrical connections are secure and comply with local codes. The fan motor base and sturdy base are designed for secure ceiling attachment.

CHANDELIER CEILING FAN DETAIL

Display product details in many ways, retractable design, 36 inch ceiling fan and chandelier 2 in 1.



Figure 5: Key components of the fandelier, including the retractable blades and silent DC motor.

6. OPERATING INSTRUCTIONS

6.1 Lighting Control

The integrated 72-Watt LED light strip offers versatile lighting options:

- **Dimmable Brightness:** Adjust the light intensity from dim to bright using the remote control or app.
- **Color Temperature:** Choose from three light colors: warm white (2700K), natural light (4500K), and cool white (6000K).
- **Wall Switch:** The light can be turned on/off using a standard wall switch.

LED DIMMABLE

Brightness can be adjusted from weak to strong



Figure 6: LED Dimmable feature showcasing different light color temperatures.

6.2 Fan Operation


The fan features a silent DC motor and retractable blades for efficient air circulation.

- **6 Fan Speeds:** Select from six different fan speeds to suit your comfort needs.
- **Two-Way Rotation (Reverse Motor):****Downward Airflow:** Ideal for summer, providing a cooling effect.**Upward Airflow:** Ideal for winter, circulating warm air downwards to improve heating efficiency.
- **Timer Function:** Set timers for automatic fan shut-off.
- **Sleep Mode:** A quiet mode for undisturbed rest.



The image shows a ceiling fan with a crystal chandelier-style light fixture. The fan blades are tilted downwards. Below the fan, blue arrows illustrate the air being pushed down towards the bed below. The background is a light blue gradient.

DOWNWARD AIRFLOW
Improve air flow efficiency cool,
refreshing comfort



The image shows the same ceiling fan with a crystal chandelier-style light fixture. The fan blades are tilted upwards. Below the fan, orange arrows illustrate the air being pulled up and then circulating back down. The background is a light orange gradient.

UPWARD AIRFLOW
Reverse Wind, circulate airflow
upwards for cold days

Figure 7: Illustration of downward airflow (summer) and upward airflow (winter) modes.

SPEED WIND TO MEET YOUR NEEDS



Copper core motor
stronger wind

Upgrade
Ceiling Fan



Ordinary
Ceiling Fan



1-2 Wind Speeds

Suitable for sleeping



3-4 Wind Speeds

Good for work and entertainment



5-6 Wind Speeds

Enjoy hot summer

Figure 8: Fan speed recommendations for various comfort levels.

6.3 Control Methods

Your fandelier can be controlled via the included remote control or a dedicated mobile application.

- **Remote Control:** Provides full control over light (on/off, dimming, color change) and fan (on/off, speed, direction, timer, night mode).
- **APP Control:** Offers advanced features including time settings, 6 fan speeds, 3-color light adjustments, sleep mode, and timers.
- **Wall Switch:** Can turn the light on/off.



WALL SWITCH
Only for light control



REMOTE CONTROL
For light and fan



APP CONTROL
For light and fan

Figure 9: Available control methods for the NOXARTE ceiling fan.

6.4 Remote Control Instructions

REMOTE CONTROL INSTRUCTIONS



Here is a quick way to check the fandelier:

1. Turn off the wall switch for about 1 minute to run out the power in the fandelier, and get the remote ready.
2. Then turn on the switch again. The lights will on with a short double beep sound. (Per your reply, your fandelier works in this step.)
3. Long press the "SET UP" key within 5 seconds once the light is on. Signal will be matched with the light blinking for one time.
4. Then try to control the fan with the remote, see if the fan works accordingly.

Figure 10: Remote control layout and button functions.

Quick Way to Check the Fandelier:

1. Turn off the wall switch for about 1 minute to run out the power in the fandelier, and get the remote ready.
2. Then turn on the switch again. The lights will turn on with a short double beep sound. (Your fandelier works in this step.)
3. Long press the "SET UP" key within 5 seconds once the light is on. Signal will be matched with the light blinking for one time.
4. Then try to control the fan with the remote, see if the fan works accordingly.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.

- **Crystal Care:** Gently wipe crystal components with a soft, lint-free cloth.
- **Blade Inspection:** Periodically check that all screws on the motor housing and blades are tight.

8. TROUBLESHOOTING

If you encounter issues with your NOXARTE ceiling fan, refer to the following common solutions:

Problem	Possible Cause	Solution
Fan does not operate	No power, loose wiring, remote not paired.	Check circuit breaker. Ensure all connections are secure. Re-pair remote control (refer to Section 6.4).
Light does not turn on	No power, LED driver issue, wall switch off.	Check power supply. Ensure wall switch is on. If LED driver is suspected, contact customer service.
Remote control not working	Batteries dead, remote not paired.	Replace remote batteries. Re-pair remote control (refer to Section 6.4).
Fan wobbles	Loose mounting, unbalanced blades.	Ensure mounting bracket is securely fastened. Check that all blade screws are tight.

For issues not listed here, or if troubleshooting steps do not resolve the problem, please contact NOXARTE customer service.

9. WARRANTY AND SUPPORT

NOXARTE offers a **12-month guarantee on accessories** for your ceiling fan. We are committed to providing high-quality after-sales service.

If you experience any issues with accessories or lamp body damage after purchase, please do not hesitate to reach out to us. Our customer support team is available to assist you with any questions or concerns.

For further assistance, please visit the [NOXARTE Store on Amazon](#) or contact us directly through the platform.