Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- BONTEC /
- > BONTEC Tilting TV Wall Mount Instruction Manual

BONTEC B08J2G8SWG

BONTEC Tilting TV Wall Mount Instruction Manual

Model: B08J2G8SWG

1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your BONTEC Tilting TV Wall Mount. This mount is designed for most 26-65 inch LCD, LED, OLED, 4K Flat, and Curved Screen TVs, supporting VESA patterns up to 400x400mm and a maximum weight capacity of 121 lbs (55 kg).

The BONTEC TV wall mount offers a low-profile, slim design that projects just 30mm from the wall, providing a clean and modern appearance. It features a 10-degree downward tilt for optimal viewing angles and reduced glare, enhancing your viewing experience and minimizing neck or eye strain. Constructed from premium cold-rolled steel with a durable black powder-coated finish, it ensures strong and secure support for your television.



Figure 1: Overview of the BONTEC Tilting TV Wall Mount components.

2. SAFETY INFORMATION

WARNING: Failure to read and follow these instructions may result in serious personal injury, property damage, or voiding of your warranty.

- Always ensure the wall structure can safely support the combined weight of the mount and the television.
- Do not exceed the maximum weight capacity of 121 lbs (55 kg).
- Verify your TV's VESA pattern and weight are compatible with this mount before beginning installation.
- Use appropriate safety gear, including eye protection, during installation.
- If drilling into wood studs, ensure the drill bit size is correct to prevent splitting.
- If drilling into concrete or brick, use the provided concrete anchors and ensure the drill bit is suitable for masonry.
- Never attempt to install the mount or lift the TV alone if it is too heavy. Seek assistance.

• Keep all small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Please check the package contents against the list below to ensure all parts are present and undamaged.

- TV Wall Mount (Wall Plate and TV Brackets)
- Mounting Hardware Kit (various screws, washers, spacers for TV and wall)
- Spirit Level
- Cable Management Ties (5x)
- Instruction Manual (this document)

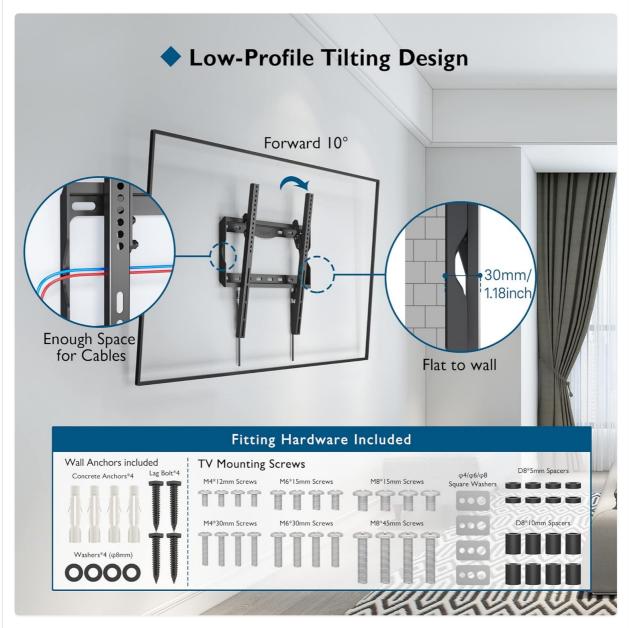


Figure 2: Included fitting hardware for installation.

4. SPECIFICATIONS

Feature	Specification
Compatible TV Sizes	26 - 65 inches
Maximum Weight Capacity	121 lbs (55 kg)
VESA Compatibility	75x75mm to 400x400mm (e.g., 400x400, 400x300, 400x200, 300x300, 300x200, 200x300, 200x200, 200x100, 100x100, 75x75)
Mounting Type	Wall Mount
Movement Type	Tilt
Maximum Tilt Angle	10 Degrees (downward)
Wall Distance (Low Profile)	30mm (1.18 inches)
Material	Alloy Steel
Item Weight	2.99 pounds



Figure 3: VESA compatibility and dimensions.

5. SETUP AND INSTALLATION

The BONTEC TV wall mount is designed for quick and easy installation. Please follow these steps carefully.

5.1. Pre-Installation Checks

- 1. **Verify TV Compatibility:** Ensure your TV's VESA pattern and weight are within the mount's specifications (refer to Section 4).
- 2. **Identify Wall Type:** Determine if you are mounting to wood studs or a concrete/brick wall. Different hardware is provided for each.
- 3. **Locate Mounting Position:** Choose a suitable location on your wall, considering viewing height and stud/wall integrity.

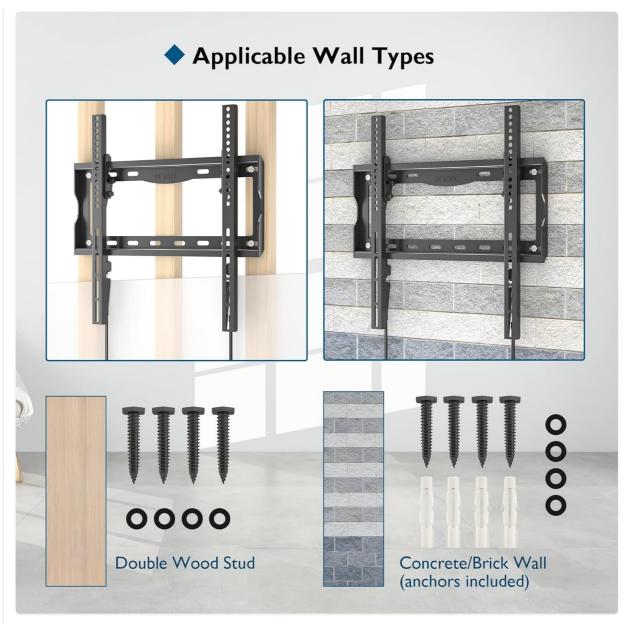


Figure 4: Applicable wall types and corresponding hardware.

5.2. Attaching TV Brackets to TV

Attach the two vertical TV brackets to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure the mounting hooks on the brackets are facing inward, towards the center of the TV, as shown in the correct installation method diagram below.



Figure 5: Correct installation method for TV brackets (hooks facing inward).

5.3. Mounting the Wall Plate

- 1. **Mark Drill Holes:** Hold the wall plate against the wall at your desired height. Use the included spirit level to ensure it is perfectly horizontal. Mark the drill hole locations through the plate's mounting holes.
- 2. **Drill Holes:** Drill pilot holes at the marked locations. For wood studs, use a smaller drill bit than the lag bolts. For concrete/brick, use a masonry drill bit and insert the plastic anchors flush with the wall surface.
- 3. **Secure Wall Plate:** Attach the wall plate to the wall using the lag bolts (for wood studs) or concrete anchors and screws (for concrete/brick). Tighten all screws securely.

5.4. Hanging the TV

Carefully lift the television with the attached brackets and hook them onto the wall plate. The simple 3-step installation design allows the TV to be fixed automatically. Pull the buckle to release the TV in seconds if required.

5.5. Cable Management

Utilize the provided cable management ties to neatly organize and secure your TV cables, preventing

tangles and maintaining a clean aesthetic. The mount's design provides enough space for cables behind the TV.

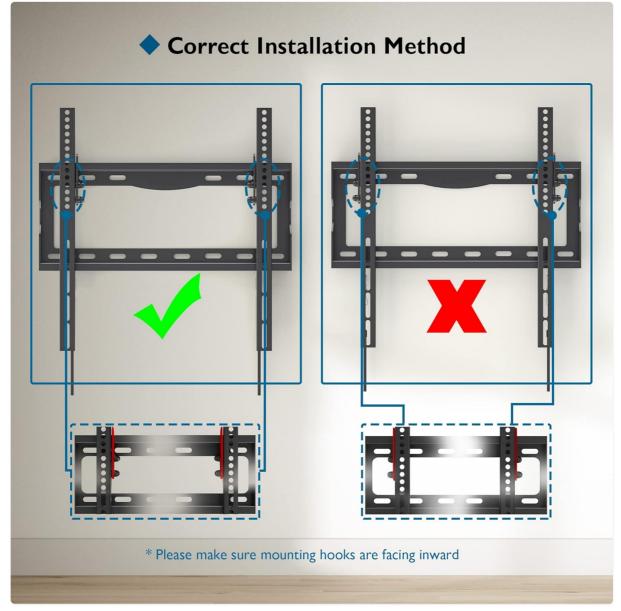


Figure 6: Ultra-slim design for a neat appearance.

5.6. Installation Video

For a visual guide, please refer to the official BONTEC installation video:

Video 1: Official BONTEC TV Wall Mount Installation Guide. This video demonstrates the step-by-step process for installing the BONTEC TV wall mount, including attaching brackets, mounting the wall plate, and hanging the TV.

6. OPERATING INSTRUCTIONS

The BONTEC Tilting TV Wall Mount allows for easy adjustment of your TV's viewing angle.

6.1. Tilting Your TV

This mount features a 10-degree downward tilt capability. To adjust the tilt, gently push the bottom of your

TV forward or backward until you achieve the desired angle. This feature helps reduce glare from lights or windows and provides a more comfortable viewing experience.

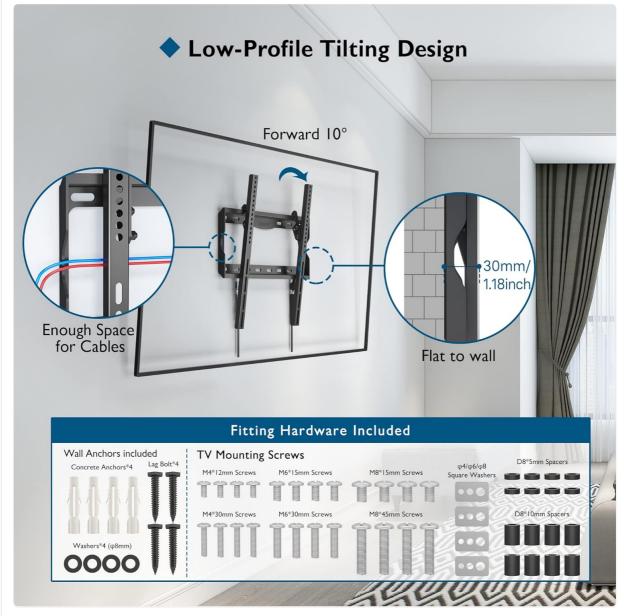


Figure 7: Tilting mechanism for optimal viewing.

7. MAINTENANCE

To ensure the longevity and safe operation of your BONTEC TV wall mount, follow these simple maintenance guidelines:

- **Regular Checks:** Periodically (e.g., every 6-12 months) inspect all mounting screws and connections to ensure they remain tight and secure.
- **Cleaning:** Clean the mount with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- Dust Removal: Gently dust the mount and surrounding areas to prevent dust buildup.

8. TROUBLESHOOTING

If you encounter any issues with your BONTEC TV wall mount, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
TV is not level after installation.	The wall plate may not be perfectly horizontal. Remove the TV, re-check the wall plate with the spirit level, and adjust as necessary before re-hanging the TV.
Mount feels loose or unstable.	Mounting screws may not be fully tightened. Carefully re-tighten all screws securing the wall plate to the wall and the TV brackets to the TV. Ensure appropriate anchors were used for your wall type.
TV does not fit the mount.	Verify your TV's VESA pattern and weight against the specifications in Section 4. Ensure the TV brackets are correctly attached to the TV with hooks facing inward.
Difficulty tilting the TV.	Check for any obstructions behind the TV. Ensure the tilt mechanism is not overtightened (if applicable, though this model is designed for easy tilt).
Cables are messy or pinched.	Utilize the provided cable management ties to secure cables neatly. Ensure cables are not caught between the mount and the wall or TV.

9. WARRANTY AND SUPPORT

BONTEC products are manufactured with quality and reliability in mind. For specific warranty information regarding your BONTEC Tilting TV Wall Mount (Model B08J2G8SWG), please refer to the warranty card included with your purchase or visit the official BONTEC website. For technical support, replacement parts, or any other inquiries, please contact BONTEC customer service through their official channels. You can visit the BONTEC Store on Amazon for more information:BONTEC Store

© 2024 BONTEC. All rights reserved.

Related Documents - B08J2G8SWG




BONTEC CT135B TV Wall Mount Installation Instructions

Comprehensive installation guide for the BONTEC CT135B TV Wall Mount, covering unpacking, safety information, parts list, and step-by-step assembly for flat and curved screens on various wall types.



BONTEC CT128 TV Wall Mount Installation Manual

Comprehensive installation manual for the BONTEC CT128 TV Wall Mount, covering unpacking, safety, parts, compatibility, and step-by-step mounting instructions for flat and curved TVs on various wall types.

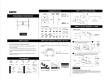

BONTEC 118MB TV Wall Mount Installation Guide

This document provides comprehensive installation instructions and troubleshooting guidance for the BONTEC 118MB TV Wall Mount. Designed for most 37-82 inch LED, LCD, Plasma, Flat, and Curved TVs, it details safety precautions, required tools, parts list, step-by-step assembly, wall mounting procedures for wood studs and concrete, TV bracket attachment, hanging, removal, adjustment, and common solutions to installation issues.



BONTEC 116SB-v02 TILT TV Wall Mount Installation Manual

Comprehensive installation manual for the BONTEC 116SB-v02 TILT TV Wall Mount, detailing parts list and step-by-step instructions for wood stud and concrete wall mounting.



BONTEC CT139M TV Wall Mount Installation Guide

Comprehensive installation instructions for the BONTEC CT139M TV Wall Mount, covering unpacking, safety, compatibility checks, and step-by-step mounting procedures for various wall types and TV sizes.



BONTEC CT137B-v02 TV Wall Mount Installation Guide

Comprehensive installation instructions for the BONTEC CT137B-v02 TV Wall Mount. Learn how to safely and securely mount your TV to the wall, including parts list, safety warnings, compatibility checks, and step-by-step assembly.