Ninja CFP201

Ninja DualBrew System CFP201 User Manual

Model: CFP201 | Brand: Ninja

Introduction

The Ninja DualBrew Grounds & Pods Hot & Iced Coffee Maker delivers Classic, Rich, and Over Ice brews from your favorite coffee grounds or coffee pods that never taste watered down. Customize your brew with 9 grounds sizes from single cup, to travel mug, to full carafe and 4 pod sizes from 6 to 12 oz. Plus, it features Delay Brew and Keep Warm Functions. Compatible with K cup coffee pods and & 12 cup drip coffee maker.
This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your Ninja DualBrew System.

Important Safeguards

Please read all instructions before using your Ninja DualBrew System. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, injury, or damage to the appliance.

- Always ensure the appliance is properly assembled before use.
- Do not operate any appliance with a damaged cord or plug.
- Do not immerse the appliance in water or other liquids.
- Keep hands and cords away from hot surfaces.
- This appliance is for household use only.

What's Included

Your Ninja DualBrew System CFP201 package includes the following components:

- Ninja DualBrew Hot & Iced Coffee Maker
- 12-Cup Glass Carafe
- Ninja Smart Scoop
- Paper Filter Kit
- K-Cup Pod Adapter

- 60-oz. Removable Water Reservoir



Figure 1: Included Components. This image displays the main coffee maker unit, the glass carafe, the Ninja Smart Scoop, the paper filter kit, the K-Cup pod adapter, and the removable water reservoir, all laid out on a light background.

Setup

1. **Unpack and Clean:**
   Remove all packaging materials and accessories. Wash the carafe, removable water reservoir, and K-Cup pod adapter in warm, soapy water. Rinse thoroughly and dry all parts.
2. **Position the Appliance:**
   Place the coffee maker on a clean, dry, and level surface. Ensure there is adequate clearance around the unit for proper ventilation.
3. **Fill Water Reservoir:**
   Remove the 60-oz. water reservoir from the side of the unit. Fill it with fresh, filtered water up to the MAX fill line. Place the reservoir back onto the unit, ensuring it is securely seated.



Figure 2: Filling the Removable Water Reservoir. This image shows a person filling the clear 60-oz water reservoir directly from a kitchen faucet, highlighting its easy-to-handle design.

4. **Initial Clean Cycle:**
   Before first use, run a full carafe clean cycle with water only. This primes the system and removes any manufacturing residue. Refer to the "Maintenance & Cleaning" section for detailed instructions on running a clean cycle.

Operating Instructions

Brewing with Coffee Grounds

1. **Prepare the Grounds Basket:**
   Slide the brew basket lever to the "Grounds" position. Insert a paper filter into the brew basket. Use the Ninja Smart Scoop to add your desired amount of coffee grounds. Refer to the brew size chart for recommended amounts.



Figure 3: Preparing Coffee Grounds. This image shows a hand using the included Ninja Smart Scoop to add ground coffee into a paper filter within the brew basket, ready for brewing.

2. **Select Brew Size:**
   Place your mug or carafe under the brew spout. Use the dial on the control panel to select your desired brew size (e.g., Sm Cup, Cup, XL Cup, Travel Mug, XL Travel Mug, ¼ Carafe, ½ Carafe, ¾ Carafe, Full Carafe).
3. **Choose Brew Style:**
   Press the "Brew Style" button to cycle through Classic, Rich, or Over Ice options. The selected style will illuminate on the display.



Figure 4: Brew Style Options. This image illustrates the visual difference between Classic, Rich, and Over Ice coffee brews, demonstrating the versatility of the machine.

4. **Start Brewing:**
   Press the "START BREW" button to begin the brewing process. The display will show the progress.

Brewing with K-Cup Pods

1. **Insert Pod Adapter:**
   Slide the brew basket lever to the "Pods" position. Insert the K-Cup Pod Adapter into the brew chamber until it clicks into place.
2. **Insert K-Cup Pod:**
   Lift the handle and insert a K-Cup pod into the adapter. Close the handle firmly until it punctures the pod.

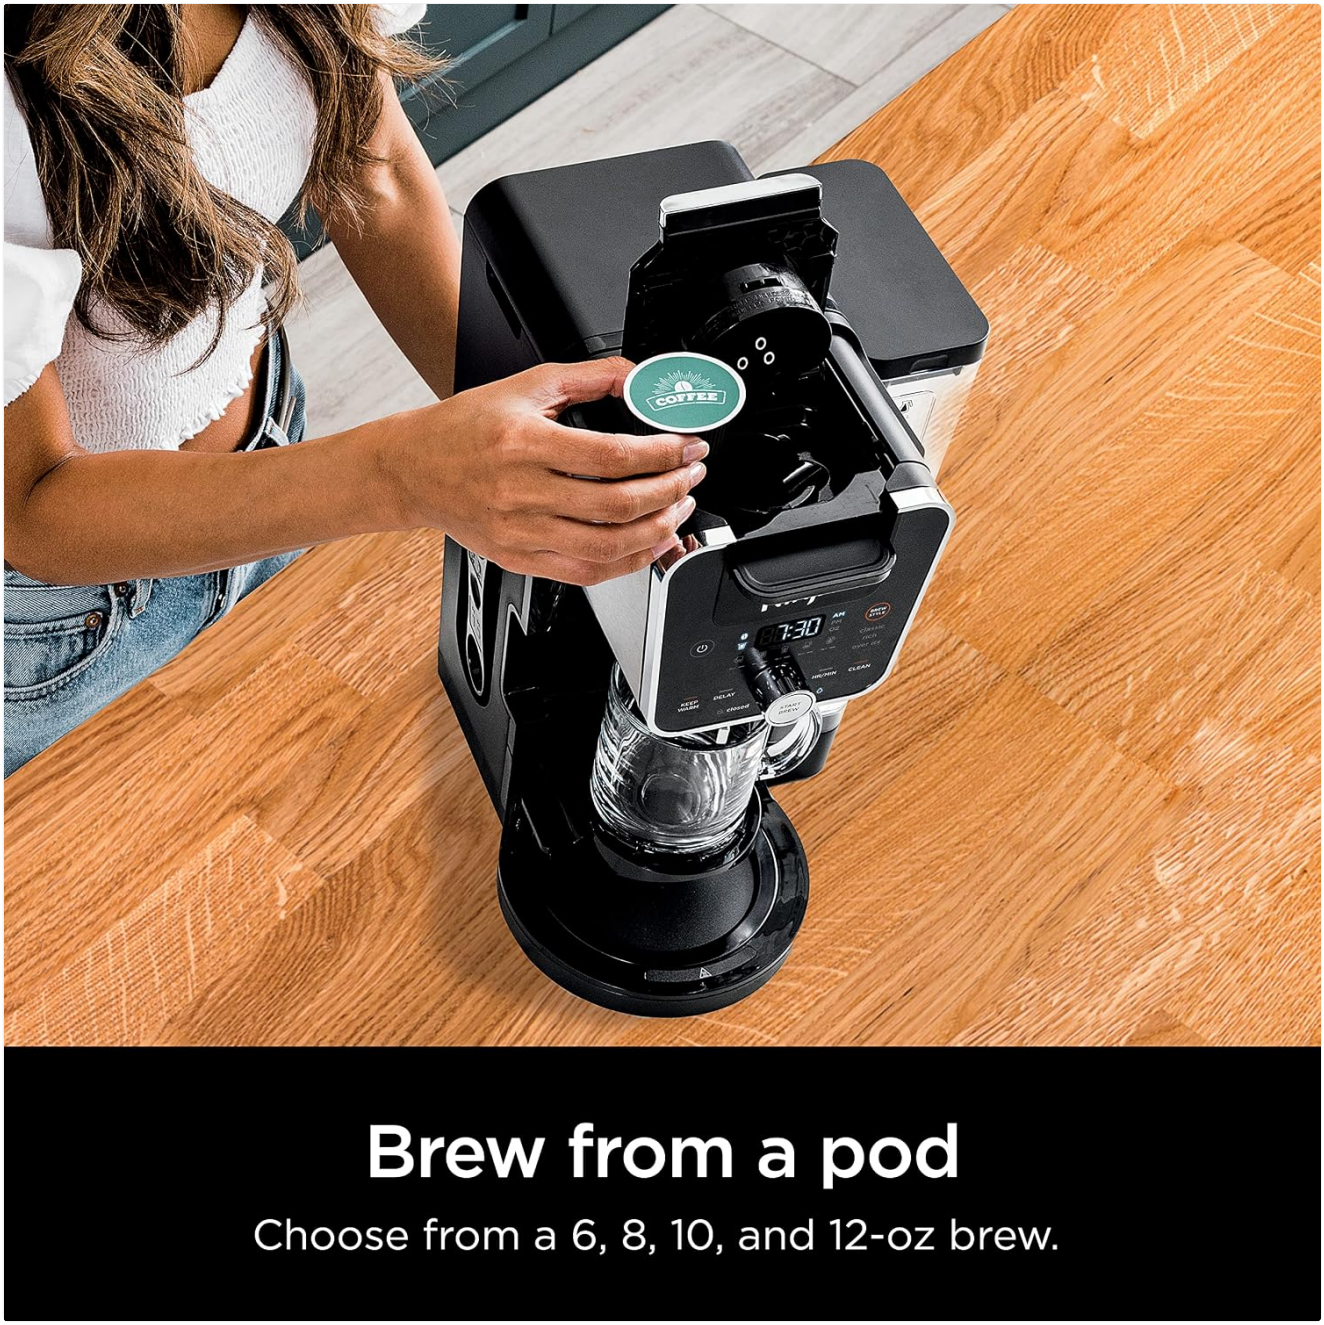


Figure 5: Brewing from a Pod. This image shows a hand placing a K-Cup pod into the designated adapter on the coffee maker, illustrating the ease of single-serve brewing.

3. **Select Brew Size & Style:**
   Place your mug under the brew spout. Use the dial to select your desired brew size (6, 8, 10, or 12 oz.). Choose your brew style (Classic, Rich, or Over Ice) using the "Brew Style" button.
4. **Start Brewing:**
   Press the "START BREW" button. The machine will automatically adjust to the pod brewing settings.

Delay Brew & Keep Warm Functions

- **Delay Brew:**
  Prepare your coffee (grounds or pod) and fill the water reservoir. Press the "DELAY" button. Use the HR/MIN buttons to set the desired start time. Press "START BREW" to activate the delay brew. The machine will brew at the set time.
- **Keep Warm:**
  The adjustable warming plate automatically activates when brewing a carafe and keeps coffee warm for up to 4 hours. To turn off, press the "KEEP WARM" button.



Figure 6: Control Panel Functions. This image provides a detailed view of the coffee maker's control panel, showing the various buttons and the digital display for setting brew options, delay brew, and keep warm functions.

Maintenance & Cleaning

Regular cleaning ensures optimal performance and extends the life of your Ninja DualBrew System.

- **Daily Cleaning:**
  After each use, wash the carafe, brew basket, K-Cup pod adapter, and water reservoir with warm, soapy water. These parts are also top-rack dishwasher safe.
- **Descaling (Clean Cycle):**
  The "CLEAN" indicator light will illuminate when descaling is needed. Fill the water reservoir to the "CLEAN" line with descaling solution (or white vinegar). Place the carafe on the warming plate. Press the "CLEAN" button to start the cycle. The cycle takes approximately 72 minutes. Once complete, run 2-3 full carafe cycles with fresh water to rinse the system thoroughly.
- **Exterior Cleaning:**
  Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Troubleshooting

Problem	Possible Cause	Solution
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; wrong brew style selected.	Adjust the amount of coffee grounds/pod size. Select a different brew style (e.g., "Rich" for stronger coffee).
"CLEAN" light is illuminated.	Appliance needs descaling.	Run a full descaling cycle as described in the "Maintenance & Cleaning" section.
Water is not dispensing.	Water reservoir is empty or not seated correctly; unit is clogged.	Ensure reservoir is filled and properly seated. Run a clean cycle to clear any mineral buildup.
Coffee overflows from the carafe/mug.	Incorrect brew size selected for the vessel; carafe/mug not positioned correctly.	Select a brew size appropriate for your vessel. Ensure the carafe/mug is centered under the brew spout.

Specifications

Brand: Ninja

Model Name: CFP201

Color: Black

Product Dimensions: 11.18"D x 9.09"W x 15.4"H

Item Weight: 9.02 pounds

Voltage: 120V

Coffee Input Type: Grounds and Pods

Filter Type: Paper

Special Features: Programmable, Removable Tank, Thermal, Auto Clean Function, Water Filter

Included Components: Coffee Maker, 12-Cup Glass Carafe, Ninja Smart Scoop, Paper Filter Kit, K-Cup Pod Adapter

Warranty & Support

For warranty information and further support, please refer to the official documentation provided with your product or visit the manufacturer's website.
You can also find additional resources here:

- User Guide (PDF)
- User Manual (PDF)

© 2025 Ninja. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question