

SIFENE AMR518F

SiFENE Juicer Machine User Manual

Model: AMR518F

Brand: SIFENE

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the SiFENE Juicer Machine. Retain this manual for future reference.

- **Safety Lock System:** The juicer is equipped with a safety lock arm and a juicer cover safety lock. The appliance will only operate when all parts are correctly assembled and locked into place. Do not attempt to force the juicer to operate if it is not properly secured.
- **Overload Protection:** The juicer features an overload protection system that automatically shuts off the motor if it overheats due to power surges, incorrect assembly, or prolonged overuse. If this occurs, unplug the unit, allow it to cool down for at least 30 minutes, and ensure proper assembly before restarting.
- **Power Supply:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the appliance.
- **Cleaning:** Always unplug the juicer from the power outlet before cleaning or disassembling. Do not immerse the motor base in water or any other liquid.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.

Safety Protection System

Safety Lock Arm

Juicer cover Safety Lock

Overloaded Protection System

The Juicer could not operate unless all parts have been assembled correctly



Figure 1.1: Illustration of the SiFENE Juicer's Safety Protection System, highlighting the safety lock arm, juicer cover safety lock, and the internal overloaded protection system. This system ensures the juicer only operates when correctly assembled, preventing accidents and motor damage.

2. PRODUCT OVERVIEW

The SiFENE Centrifugal Juicer Machine is designed for efficient juice extraction from various fruits and vegetables. It features a powerful motor, a wide feed chute, and a cold extraction system to maximize juice yield and nutrient retention.



Figure 2.1: The SiFENE Juicer Machine, showcasing its sleek design and a glass filled with freshly extracted green juice, demonstrating its primary function.

Key Features:

- **Powerful 800W Motor:** Delivers efficient juicing performance.
- **3.2-inch Wide Feed Chute:** Accommodates whole fruits and vegetables, reducing prep time.
- **Cold Extraction Technology:** Minimizes heat buildup to preserve vitamins and minerals.
- **Three Speed Settings:** Optimized for different types of produce.
- **Easy to Clean:** Detachable, dishwasher-safe parts for convenient maintenance.

3.2" Big Mouth Large Feed Chute

For Whole Fruits and vegetables



Without Pre-Cutting



Save Effort



Figure 2.2: The 3.2-inch wide feed chute, designed to accept whole fruits and vegetables, significantly reducing the need for pre-cutting and saving preparation time.

Cold Extraction System

With Cold Extraction Technology and an stainless steel precision mesh filter, you'll avoid damage to vitamins and minerals from heat and processing.



Figure 2.3: The Cold Extraction System, featuring a stainless steel precision mesh filter, designed to minimize heat and processing damage, thereby preserving the vitamins and minerals in your juice.

3. SETUP AND ASSEMBLY

Before first use, wash all detachable parts thoroughly. Ensure the juicer is placed on a stable, flat, and dry surface.

1. Place the motor base on a stable surface.
2. Align the juice collector (main body) with the motor base and gently press down until it clicks into place.
3. Insert the stainless steel filter basket firmly into the juice collector.
4. Place the juicer cover on top, ensuring it aligns with the grooves.

5. Secure the safety lock arm by lifting it and locking it into the corresponding slots on the juicer cover. You should hear a click, indicating it is securely fastened.
6. Place the pulp container under the pulp spout and the juice cup under the juice spout.
7. Insert the food pusher into the feed chute.

The juicer is now ready for operation.

4. OPERATING INSTRUCTIONS

The SiFENE Juicer features a control knob with three speed settings and a pulse function.



3 Speed Modes

Cold Extraction System

1 Soft Fruit&Veg



2 Hard Fruit&Veg



P Highest Speed

Figure 4.1: The control knob of the SiFENE Juicer, illustrating the three speed modes (1 for soft fruits, 2 for hard fruits) and the 'P' (Pulse) setting for maximum power.

Speed Settings:

- **'0' (Off):** The juicer is off.
- **'1' (Low Speed):** Ideal for soft fruits and vegetables such as oranges, strawberries, watermelon, grapes, and tomatoes. This setting operates at approximately 12000-15000 RPM.
- **'2' (High Speed):** Suitable for harder fruits and vegetables like apples, carrots, celery, pears, pineapple, and cucumbers. This setting operates at approximately 12000-18000 RPM.
- **'P' (Pulse/Highest Speed):** Provides a burst of maximum power (1000W) for tougher ingredients or to clear blockages. The 'P' setting is momentary; the knob will spring back to '0' when released.

Juicing Process:

1. Ensure the juicer is properly assembled and the safety lock arm is secured.
2. Plug the juicer into a grounded electrical outlet.
3. Wash fruits and vegetables thoroughly. For best results, remove large seeds or pits from fruits like peaches or plums. The 3.2-inch wide chute allows for whole fruits and vegetables, minimizing the need for pre-cutting.
4. Turn the control knob to the desired speed setting ('1' or '2') based on the produce type. For a quick burst of power, use the 'P' setting.
5. Slowly feed the produce into the feed chute using the food pusher. Do not push too hard or too fast, as this can reduce juice yield or strain the motor.
6. The fresh juice will flow into the juice cup, and the pulp will collect in the pulp container.
7. Once juicing is complete, turn the control knob to '0' and unplug the appliance.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your SiFENE Juicer. All removable parts are designed for easy cleaning.

Safe and BPA Free

All removable parts
are dishwasher safe



Easy to Clean

Brush included ensure
360 angle cleaning

Figure 5.1: Demonstrates the ease of cleaning the SiFENE Juicer, showing removable parts on a drying rack and the filter basket being rinsed. All removable parts are BPA-free and dishwasher safe for convenience.

Cleaning Steps:

1. **Unplug:** Always unplug the juicer from the power outlet before disassembling or cleaning.
2. **Disassemble:** Unlock the safety arm, remove the juicer cover, filter basket, juice collector, pulp container, and food pusher.
3. **Rinse Immediately:** Rinse all removable parts under running water to prevent pulp from drying and sticking.
4. **Wash:** All detachable parts are dishwasher-safe (top rack recommended). For hand washing, use warm, soapy water and the included professional cleaning brush to thoroughly clean the mesh filter. The brush

helps remove stubborn pulp from the fine mesh.

- 5. **Wipe Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
- 6. **Dry:** Ensure all parts are completely dry before reassembling or storing the juicer.

6. TROUBLESHOOTING

If you encounter issues with your SiFENE Juicer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not properly assembled; Safety lock not engaged; Power cord not plugged in; Overload protection activated.	Ensure all parts are correctly assembled and the safety lock arm is securely fastened. Check if the power cord is firmly plugged into a working outlet. If the motor stopped due to overheating, unplug and let it cool for 30 minutes before restarting.
Motor stops during operation.	Overload protection activated; Too much produce fed at once; Hard ingredients causing strain.	Unplug the unit and allow it to cool down for 30 minutes. Reduce the amount of produce fed at one time. For hard ingredients, use speed '2' or the 'P' (Pulse) setting.
Low juice yield or excessive pulp.	Incorrect speed setting; Filter basket clogged; Produce pushed too quickly.	Use the appropriate speed setting for the produce (Speed '1' for soft, '2' for hard). Clean the filter basket thoroughly. Feed produce slowly and steadily.
Vibration or loud noise.	Improper assembly; Juicer not on a flat surface; Damaged filter basket.	Ensure all parts are correctly assembled and securely locked. Place the juicer on a stable, flat surface. Inspect the filter basket for any damage; replace if necessary.

7. SPECIFICATIONS

Detailed technical specifications for the SiFENE Juicer Machine, Model AMR518F.



Figure 7.1: Dimensions of the SiFENE Juicer Machine: approximately 15.7 inches (40cm) in height, 7.5 inches (19cm) in width, and 11.8 inches (30cm) in depth.

Specification	Detail
Brand	SIFENE
Model Name	AMR518F
Color	Gray
Product Dimensions	11.81"D x 10.63"W x 15.35"H
Item Weight	7.93 pounds


Specification	Detail
Maximum Power	1000 Watts (Peak)
Rated Power	800 Watts
Voltage	120 Volts
Number of Speeds	3 (Low, High, Pulse)
Controller Type	Knob
Blade Material	Stainless Steel
Special Features	3.2" Wide Chute, Easy to Clean, Overheat Protection, Whole Fruit Processing, Cold Extraction Technology
Capacity	800 Milliliters (Juice Cup)
Product Care Instructions	Hand Wash Only (for certain parts), Dishwasher Safe (removable parts)
UPC	712679918080



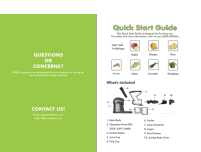
8. WARRANTY AND SUPPORT

The SiFENE Juicer Machine is designed for durability and performance. For specific warranty details, please refer to the product packaging or contact SiFENE customer support.

- Warranty Coverage:** The product typically includes a warranty period for the motor and spare parts. Please check your purchase documentation for the exact duration and terms.
- Customer Support:** For any questions, technical assistance, or warranty claims, please contact SiFENE customer support through the retailer where you purchased the product or visit the official SiFENE website for contact information.


Related Documents

	<p>SIFENE BIG MOUTH MAX JE2105 Juicer User Manual</p> <p>Comprehensive user manual for the SIFENE BIG MOUTH MAX JE2105 juicer, covering product specifications, safety precautions, operating instructions, maintenance, troubleshooting, and juice recipes.</p>
---	--

	<p>SiFENE AMR516 Big Mouth Classic Juicer User Manual</p> <p>Comprehensive user manual for the SiFENE AMR516 Big Mouth Classic juicer, covering product specifications, safe usage, operation, maintenance, troubleshooting, and juice recipes.</p>
	<p>SiFENE Whole Juicer Quick Start Guide</p> <p>Get started quickly with your SiFENE Whole Juicer. This guide covers assembly, operation, safety tips, and what's included for your cold press juicer.</p>
	<p>SiFENE Juicer Quick Start Guide</p> <p>A quick start guide for the SiFENE juicer, covering assembly, usage, and tips to prevent clogging. Includes product components and operating button functions.</p>

Documents - SiFENE – AMR518F

Warranty



2-4 Years Limited Warranty

Motor: 4-year warranty.
Normal accessories: 2-year warranty.
With lifelong technical support and 24/7 customer service

Your purchase comes with a 100% satisfaction guarantee from SiFENE

SiFENE supports free replacement for any problems or refund for any dissatisfaction under warranty. We will take care of all quality-related issues with a replacement or full refund including any return shipping costs. If your product is defective and under warranty, please contact us at Email: support@sifene.com

More SiFENE Products

If you're happy with this juicer, the line doesn't stop here. Check out <https://sifene.com/> for a line of all our beautiful and thoughtfully designed appliances. They might be right at home in your kitchen, too!

[\[pdf\]](#) Catalog

512 SiFENE Centrifugal Juicer Machine 800W High Yield with 3 2 in Wide Feed Chute Stainless Steel Non BPA Silver AMR518F The Home Depot021a0640 5fac 40c3 84bf 569869153678images thdstatic catalog Images 02 021a0640 569869153678 DepotSiFENE Dual Slow Masticating Vegetable and Fruit Juice Maker Squeezer Machines Recipes Included JS3304 56986915367882606437 8211 419a b915 237b301d1ee1images 82 82606437 237b301d1ee1 Extractor Easy to Clean Red 237b301d1ee10a3fd038 fc7c 4307 bbd6 e90034dfa418images 0a 0a3fd038 e90034dfa418 Rapid Large for Whole Veg Juicing JE2106 e90034dfa41889622a68 8e12 48ba a8fd effe5e6988e1images 89 89622a68 effe5e6988e1 ||| ||| |||

...

lang: score:7 filesize: 1.27 M page_count: 1 document date: 2025-01-10