

[manuals.plus](#) /› [Pamapic](#) /› [Pamapic Patio Heater Model 8692 Instruction Manual](#)

Pamapic 8692

Pamapic Patio Heater Instruction Manual

MODEL: 8692

1. Important Safety Information

Please read and understand all safety warnings and instructions before assembling, operating, or servicing this patio heater. Failure to follow these instructions may result in fire, explosion, serious injury, or death.

- **Outdoor Use Only:** This heater is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Ventilation:** Ensure adequate ventilation. Do not obstruct the flow of combustion and ventilation air.
- **Clearance to Combustibles:** Maintain minimum clearances from combustible materials. Refer to the specifications section for exact distances.
- **Children and Pets:** Keep children and pets away from the heater, especially during operation. The surface of the heater can become very hot.
- **Tip-Over Protection:** The heater is equipped with a safety valve that automatically shuts off the gas supply if the unit is tilted beyond 45 degrees.
- **Flameout Protection:** The heater includes a flameout protection system that will shut off the gas if the flame extinguishes unexpectedly.
- **Propane Tank:** Use only a 20 lb (9.1 kg) propane cylinder (not included) with an OPD (Overfill Protection Device) valve.
- **Leak Check:** Always perform a leak check on all gas connections before initial use and after each propane tank change.

FLAMEOUT PROTECTION

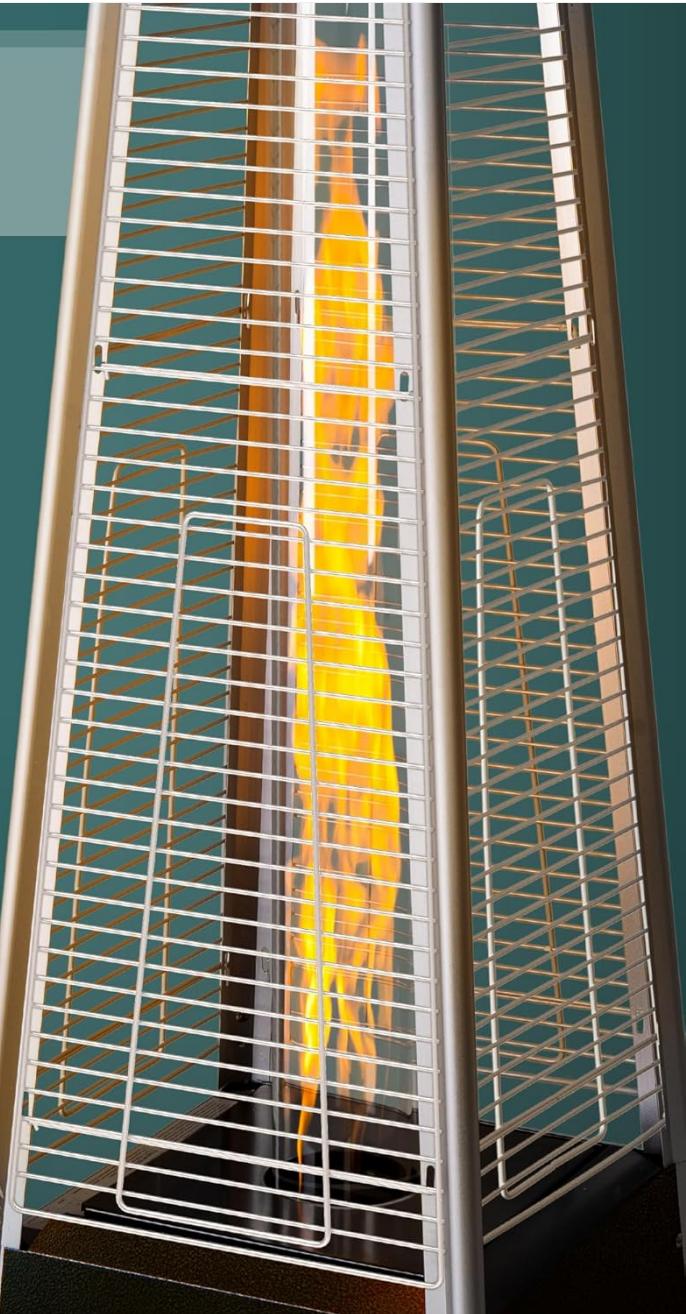


Image: Diagram showing flameout protection and safety certifications (CSA US) for the patio heater, emphasizing safety features.

Automatically shuts off
when tilted over
45 degrees.

45°

Flameout
Protection

Protection
Against
Dumping

Anoxic
Protection



UNIQUE SAFETY DESIGN

Image: Illustration of the heater's unique safety design, demonstrating how it automatically shuts off when tilted over 45 degrees, protecting against dumping and anoxic conditions.

2. Package Contents

Carefully unpack all components and ensure all parts are present before beginning assembly. Refer to the packaging list for a complete inventory.

- Heater Base Assembly
- Pyramid Frame Sections
- Quartz Glass Tube
- Reflector Hood
- Wheels (pre-attached or for assembly)
- Hardware Pack (screws, nuts, washers)
- Instruction Manual

- Protective Cover



Image: The Pamapic Pyramid Patio Heater shown alongside its custom-fit protective cover, highlighting the included accessory.

3. Assembly Instructions

Assembly typically requires two people and a Phillips head screwdriver (not included). Follow the detailed diagrams provided in your physical manual for specific steps.

1. **Unpack Components:** Remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present against the package contents list.
2. **Assemble Base:** Attach the base panels and secure them with the provided hardware. Ensure the wheel assembly (if separate) is correctly installed for easy mobility.
3. **Install Propane Tank Housing:** Secure the housing for the propane tank within the base structure.
4. **Mount Burner Assembly:** Carefully attach the burner assembly to the top of the base structure, ensuring all gas lines are correctly routed and secured.

5. **Insert Glass Tube:** Gently slide the quartz glass tube into the central column, ensuring it is seated properly and securely.
6. **Attach Pyramid Frame:** Assemble the pyramid frame sections around the glass tube and secure them to the base and burner assembly.
7. **Install Reflector Hood:** Place the reflector hood on top of the heater, securing it with the designated fasteners.
8. **Final Checks:** Double-check all connections and hardware to ensure they are tight and secure.



Image: The Pamapic Pyramid Patio Heater, showcasing its full assembled form with the flame tube visible, in a hammered bronze finish.

4. Setup and Propane Connection

- 1. Positioning:** Place the heater on a firm, level surface in an outdoor area with adequate ventilation. Ensure it is away from combustible materials as per safety guidelines.
- 2. Install Propane Tank:** Open the access door on the side of the heater base. Place a 20 lb (9.1 kg) propane cylinder (not included) into the tank housing.
- 3. Connect Regulator:** Connect the regulator hose to the propane tank valve. Turn the coupling nut clockwise until it is fully tightened. Do not overtighten.
- 4. Perform Leak Check:**
 - Mix a solution of equal parts liquid dish soap and water.
 - Ensure the heater control knob is in the "OFF" position.
 - Turn on the propane tank valve slowly.
 - Apply the soap solution to all gas connections (regulator to tank, hose to burner assembly).
 - If bubbles appear, there is a leak. Immediately turn off the propane tank valve and tighten the connection. Repeat the leak check. Do not operate the heater if a leak persists.
5. Close the access door.

5. Operating Instructions

- 1. Before Lighting:** Ensure the propane tank valve is fully open.
- 2. Lighting the Heater (Pulse Ignition):**
 - Push in and turn the control knob to the "LOW" position.
 - Press and hold the igniter button repeatedly until the pilot flame ignites. You may need to hold the control knob in for 10-15 seconds after ignition to allow the thermocouple to heat up.
 - Once the pilot is lit, release the igniter button. Continue to hold the control knob in for another 10-15 seconds, then slowly release it. The pilot flame should remain lit.
 - If the pilot does not light or goes out, repeat the process.
- 3. Adjusting Heat:** Once the pilot is lit, turn the control knob from "LOW" to "HIGH" to adjust the heat output to your desired level. The variable heat setting allows for precise temperature control.
- 4. Shutting Down:**
 - Turn the control knob to the "OFF" position.
 - Close the valve on the propane tank.
 - Allow the heater to cool completely before moving or covering.



| 15 feet diameter heat range

| Higher heat resistance | Highly rust resistance

Image: The Pamapic Pyramid Patio Heater in operation, illuminating and warming an outdoor patio area where people are gathered, demonstrating its use.

6. Maintenance and Storage

- **Cleaning:** Ensure the heater is completely cool before cleaning. Wipe exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Glass Tube:** Clean the quartz glass tube periodically with a glass cleaner to maintain optimal flame visibility.
- **Inspection:** Regularly inspect the hose and connections for any signs of wear, cuts, or leaks. Replace damaged parts immediately.
- **Storage:** When not in use for extended periods, disconnect the propane tank and store it in a well-ventilated outdoor area. Cover the heater with the provided protective cover to shield it from weather elements.
- **Windy Conditions:** In extremely windy weather, it is recommended to move the heater to a sheltered location or indoors (without the propane tank) to prevent damage or tipping.

7. Troubleshooting

Problem	Possible Cause	Solution
Heater will not light	Propane tank empty or valve closed Gas pressure low Air in gas line Igniter not sparking Pilot light not staying lit	Check propane level, open tank valve fully. Ensure regulator is properly connected and tank valve is fully open. Purge air by attempting to light several times. Check igniter electrode for damage or obstruction. Hold control knob in longer after pilot ignition to allow thermocouple to heat.
Low heat output	Low propane level Control knob setting too low	Replace or refill propane tank. Adjust control knob to a higher setting.
Flame goes out during operation	Low propane pressure Strong wind Tip-over sensor activated	Check propane tank level and connections. Relocate heater to a more sheltered area. Ensure heater is on a stable, level surface.

8. Specifications

Brand: Pamapic

Model Number: 8692

Product Dimensions: 23"D x 23"W x 89"H (58.4 cm D x 58.4 cm W x 226 cm H)

Item Weight: 61.7 pounds (28 kg)

Fuel Type: Propane

Heat Output: 48,000 BTU

Special Feature: Overheat Protection, Tip-Over Protection, Flameout Protection

Color: Hammered Bronze

Indoor/Outdoor Usage: Outdoor Only

UPC: 196852884414

PRODUCT DIMENSIONS


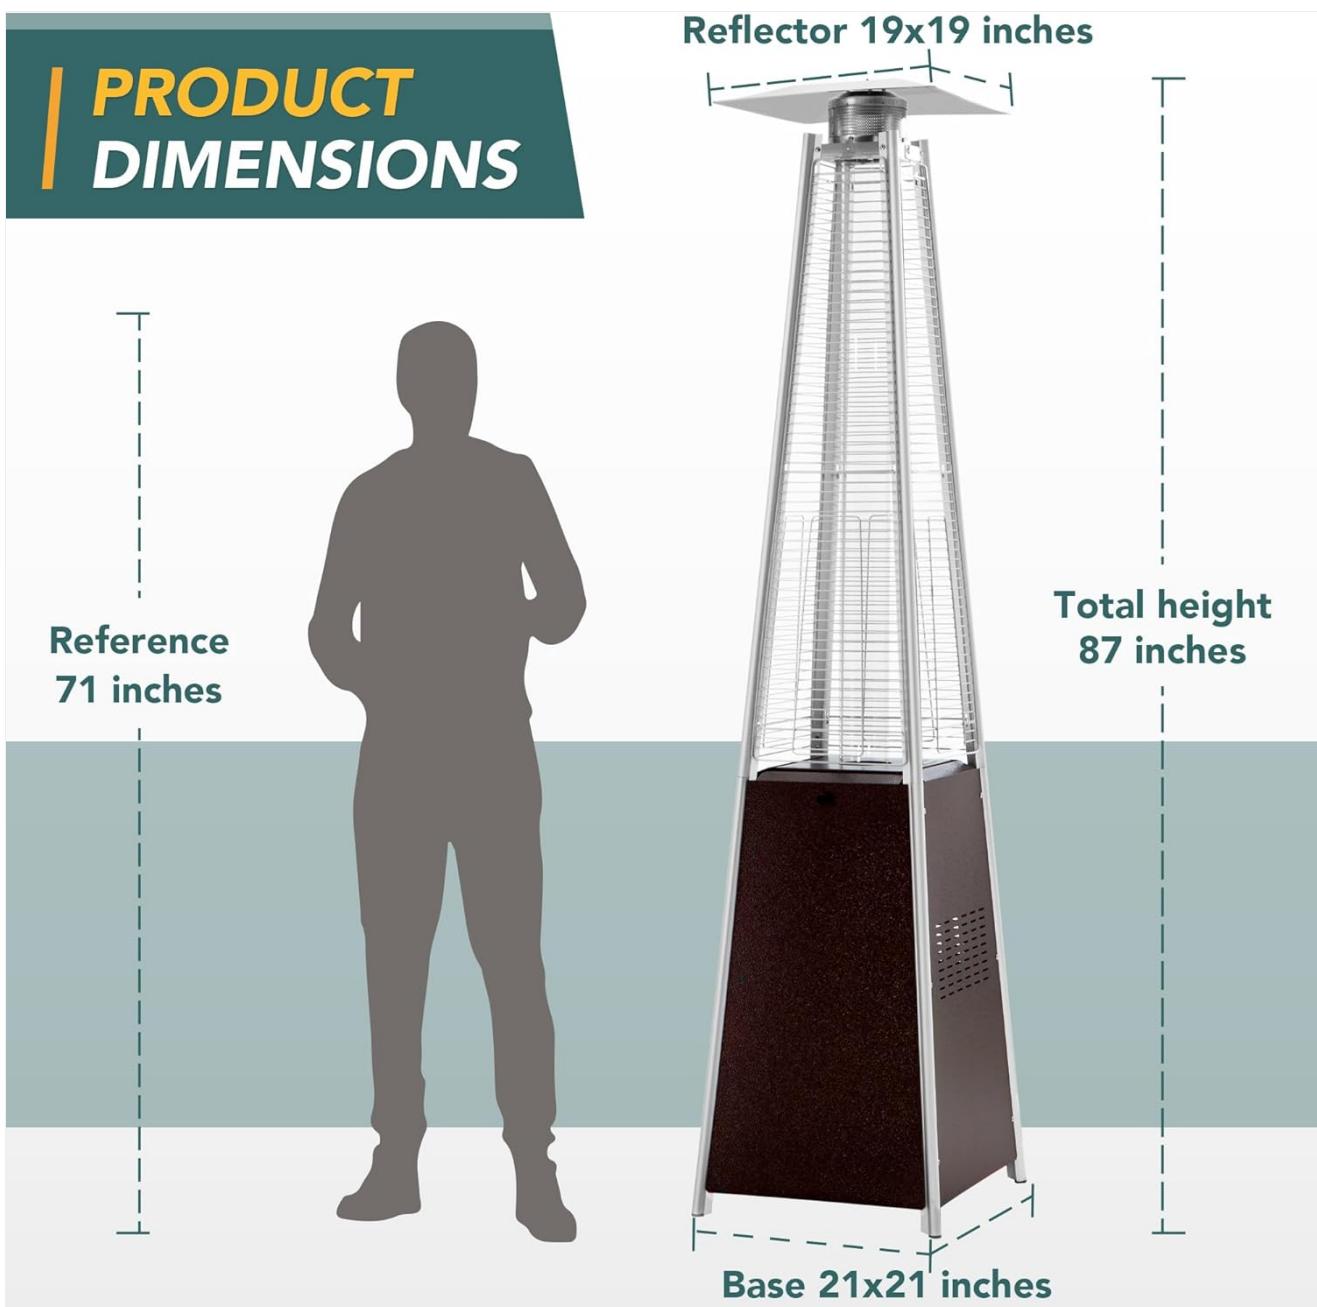


Image: A diagram illustrating the key dimensions of the patio heater, including total height (87 inches), reflector size (19x19 inches), and base size (21x21 inches).



Easy to move

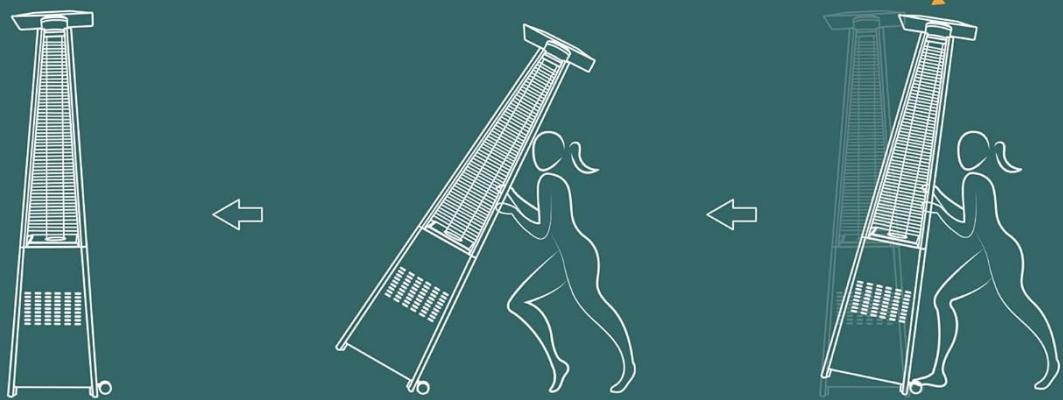

**| SMOOTH
WHEELS**

Image: A detailed view of the smooth wheels integrated into the heater's base, demonstrating the ease of movement for repositioning the unit.

9. Warranty and Customer Support

For warranty information, replacement parts, or technical assistance, please contact Pamapic customer support. Refer to your product packaging or the Pamapic official website for the most current contact details. It is recommended to retain your proof of purchase for any warranty claims.

	<p>Pamapic Pyramid Patio Heater Instruction Manual - Safety, Assembly, Operation</p> <p>Comprehensive instruction manual for the Pamapic Pyramid Patio Heater. Includes safety precautions, installation guide, operation instructions, parts list, assembly steps, and troubleshooting tips for your patio heater.</p>
	<p>Pamapic Outdoor Heater Instruction Manual - Model NCZH-G-ZZPC06</p> <p>Comprehensive instruction manual for the Pamapic Outdoor Patio Heater (Model #NCZH-G-ZZPC06). Includes safety guidelines, assembly instructions, operation procedures, maintenance tips, troubleshooting, and warranty information.</p>
	<p>PAMAPIC Patio Fire Pit Owner's Manual</p> <p>This manual provides instructions for the assembly, operation, and maintenance of the PAMAPIC Patio Fire Pit. It includes safety precautions, hardware lists, assembly steps, and troubleshooting tips.</p>
	<p>Pamapic Patio Chaise Lounge Set Owner's Manual - Assembly and Safety Guide</p> <p>Official owner's manual for the Pamapic Patio Chaise Lounge Set. Includes safety precautions, assembly instructions, parts list, and warranty information for your outdoor furniture.</p>
	<p>PAMAPIC JHB-1500R Infrared Heater User Manual and Warranty</p> <p>Comprehensive user manual and warranty certificate for the PAMAPIC JHB-1500R Infrared Heater, covering installation, operation, safety, and maintenance.</p>
	<p>Pamapic Pyramid Patio Heater Instruction Manual - Safety, Assembly, Operation</p> <p>Comprehensive instruction manual for the Pamapic Pyramid Patio Heater. Includes safety precautions, installation guide, operation instructions, parts list, assembly steps, and troubleshooting tips for your patio heater.</p>