

DOG CARE TC08BL2

DOG CARE Dog Training Collar Instruction Manual

Brand: DOG CARE | Model: TC08BL2

INTRODUCTION

This manual provides comprehensive instructions for the DOG CARE Dog Training Collar with Remote (Model TC08BL2). Designed for effective and humane dog training, this system offers multiple modes including beep, vibration, and adjustable shock levels. It is suitable for training up to two dogs simultaneously and features a security keypad lock to prevent accidental operations. Please read this manual thoroughly before use to ensure proper setup, operation, and maintenance of your training collar system.

PRODUCT OVERVIEW



The DOG CARE Dog Training Collar system, featuring a remote transmitter and two receiver collars.

The DOG CARE Dog Training Collar system consists of a handheld remote transmitter and two rechargeable receiver collars. The remote allows for control over various training modes and levels, while the collars deliver the selected stimuli to your dogs. The system is designed for ease of use and durability, with water-resistant collars suitable for outdoor training.

KEY FEATURES

- **Dual Dog Training:** Train two dogs simultaneously with a single remote. Easily switch between channels to manage each dog's training needs independently.

TRAIN 2 DOGS WITH 1 REMOTE

Suitable for Families with 2 Dogs



The system allows for training two dogs with one remote, ideal for multi-pet households.

- **Three Safe Training Modes:** Choose from beep, vibration, and adjustable shock modes to suit your dog's temperament and training requirements.

3 TRAINING MODES

Beep / Vibration / Static



Three distinct training modes: Beep, Vibration, and Static (Shock), provide versatile training options.

- **Security Keypad Lock:** Prevents accidental activation of training modes, ensuring safe and controlled training sessions.

LONG-LASTING BATTERY LIFE

Stay ON Long, Charge FULL Quickly



The security keypad lock feature on the remote prevents unintended corrections.

- **Intuitive Operation:** Simplified static levels (10 levels) make it easier to find the appropriate intensity for effective training.
- **Long-lasting Battery Life:** Both the remote and receiver collars are rechargeable, offering extended use for consistent training. Receiver battery lasts up to 15 days.

ONE-HANDED OPERATION

Easy to Use, Convenient to Carry



Enjoy extended training sessions with the long-lasting rechargeable batteries in both the remote and collars.

- **Adjustable Collar Size:** Suitable for dogs ranging from 15-pound to 100-pound, ensuring a comfortable and secure fit.
- **Water-Resistant Collars:** Designed to withstand splashes and light rain, allowing for outdoor training in various conditions.

SAFETY INFORMATION

This product is intended for use with dogs only. Do not use on humans or other animals. Ensure the collar is properly fitted to avoid discomfort or skin irritation. Do not leave the collar on your dog for more than 12 hours per day. Always start with the lowest stimulation level and gradually increase if necessary, observing your dog's reaction. Avoid using the maximum shock level initially.

SETUP GUIDE

1. **Charge Devices:** Fully charge both the remote transmitter and the receiver collars before first use. Use the provided USB charging cable. An indicator light will show charging status.
2. **Power On:** Turn on the remote transmitter and each receiver collar. Refer to the device's specific power button location.
3. **Pairing (if necessary):** If the remote and collars are not pre-paired, follow the instructions in the included quick start

guide to pair them. Typically, this involves holding a button on the collar while the remote is in pairing mode.

4. **Fit the Collar:** Place the receiver collar around your dog's neck. Ensure the contact points touch the dog's skin. The collar should be snug enough for the contact points to make reliable contact, but not so tight as to restrict breathing or cause discomfort. You should be able to fit one or two fingers between the collar and your dog's neck.
5. **Adjust Contact Points:** For dogs with thicker coats, ensure the contact points are long enough to penetrate the fur and make contact with the skin. Silicone caps are provided to dull the sensation if needed.

OPERATING INSTRUCTIONS

The remote transmitter provides control over the training modes and intensity levels. Familiarize yourself with the buttons and display before beginning training.


- **Selecting a Dog (for 2-dog system):** Use the channel switch on the remote to select which dog's collar you wish to activate (Dog 1 or Dog 2).
- **Training Modes:**
 - **Beep Mode:** Press the "Beep" button to emit an audible tone from the collar. This is often used as a warning or a positive reinforcement signal.
 - **Vibration Mode:** Press the "Vibration" button to activate a vibration on the collar. The intensity of the vibration can be adjusted.
 - **Static (Shock) Mode:** Press the "Shock" button to deliver a static stimulation. The intensity level (1-10) can be adjusted using the level dial on the remote. Always start at the lowest effective level.
- **Adjusting Static Level:** Rotate the dial on the remote to select the desired static stimulation level from 1 to 10.
- **Keypad Lock:** Utilize the security keypad lock feature on the side of the remote to prevent accidental button presses. Slide the lock switch to the locked position when not actively training.

MAINTENANCE

- **Charging:** Recharge the remote and collars when the battery indicator shows low power. Avoid overcharging.
- **Cleaning:** Regularly clean the collar and contact points with a damp cloth. Ensure the contact points are free of dirt or debris to maintain proper function.
- **Storage:** Store the training system in a cool, dry place when not in use.
- **Water Resistance:** While the collars are water-resistant, they are not designed for prolonged submersion. Avoid exposing them to heavy rain or swimming.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not responding to remote.	Low battery on remote or collar; devices not paired; out of range.	Charge both devices. Re-pair the remote and collar. Ensure devices are within operational range.
No stimulation/vibration/beep.	Collar not fitted correctly; contact points not touching skin; level set too low.	Adjust collar fit to ensure contact. Check contact point length for dog's fur. Increase stimulation level gradually.
Collar turns off automatically.	Power-saving feature.	This is a normal function to conserve battery. Power on the collar daily before use.

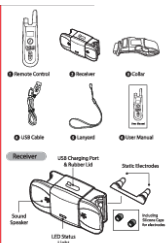

IV. Setting Up

1. Charge the devices respectively for 2 hours and above.

Remote Control: Charge the device until the battery icon on the display indicates full bars.



Receiver: Charge the device until the red LED turns green. The display on the Receiver will indicate full bars as well.



2. Match the Remote Control to the Receiver: "You may skip this step because the unit is already paired by factory setting."

2.1. Connect the Receiver to a power source via the USB cable; matching mode can only be activated during charging.

2.2. Press and hold Channel Switch/Match Button for 5 secs. The Receiver will vibrate and beeps indicate the Match is complete. You will see "Y" for subsequent number in the Channel Display if matching is successful.



Adding multiple Receivers:


2.3. Connect your additional Receiver to a power source. Press and hold Channel Switch/Match Button for 5 secs (repeat steps 2.1 and 2.2). The Channel Display will show the subsequent number of the new Receiver.

Note: Connect only 1 Receiver at a time; do not connect all simultaneously, or the Receiver will match all Receivers into a single channel.



3. Removing all Matched Receivers:

Press and hold Static Level Regulator Activation Button and Beep Button simultaneously for 8 secs. The Channel Display will default to "Y". Note: Make sure all Receivers you want remove have power and in the effective range, so that Receivers could receive the remote command.

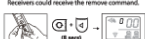

4. Configuring Static Levels:

Press and hold Static Level Regulator Activation Button and simultaneously make Static Level Regulator until the digit on the screen reaches a suitable strength.



Recommended Static Level strength starts from "10". This is the minimum sensation your dog can feel. The right static level goes down to individual bark which you should find out from your dog's responses. The sensitivity to static depends on your dog's size and weight, amount of fur, and even skin condition.

IV. Training Modes

1. Vibration Mode:

Press Vibrate Button, and the Receiver will vibrate once; hold the button and the vibration persists.



2. Sound Mode:

Press Beep Button, and the Receiver will give a "beep" sound; hold the button and the "beep" sound persists.



3. Static Simulation Mode:

Press the Static Button, and the Receiver will give a Static Simulation to the wares.



Do not hold the button as it is not recommended to have pressing shock to your dog. The static, however, will cut off in 4 secs automatically to prevent unnecessary harm to your pet.

4. Switching Channel:

Press the Channel Switch Button to choose which Receiver you want to control if you matched more than one Receiver.




V. Wearing the Receiver Collar


1. Thread the collar through the Receiver.




2. If your dog has thick fur, please separate the fur at the electrodes with a comb to enable them to reach the skin.

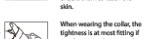

3. When wearing the collar, the tightness is at most fitting if one finger can be inserted underneath.

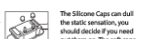

4. The Silicone Caps can dull the static sensation; you should decide if you need just them on. The soft caps also protect your dog from direct contact with metal electrodes, which in some cases will cause discomfort to some dogs.

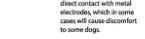

VI. Training Tips

1. Reward your dog with food will usually help to achieve the best result.

2. Do not use the device on dogs aged below 6 months, old, pregnant, easily frightened, aggressive, in heat, old, and dogs not in best of health.

3. Use verbal commands first, and supplement with a corrective stimulus only as needed. Be consistent with your verbal commands, using the same words every time. Work with your pet on one behavior at a time to avoid confusion and frustration. Use as little stimulus as possible and only to reinforce verbal commands when necessary. Do not over correct your dog.

4. For example, use the beeps as warning by pressing Beep Button. The dog will become conditioned to the beep preceding the corrective stimulus and will soon learn to recognize the beep as a warning along with your verbal command.

5. Do not rely on this product solely to train your dog. Some dogs will not respond to this product. We cannot guarantee the effectiveness of this or any trainer on your dog.

6. If your dog shows signs of growling, snarling, biting or aggression while using the collar, discontinue use immediately and contact a professional trainer for advice.

7. If you want to test the product, please use professional testing apparatus. Do not test with hands, so as to avoid accidental injury.

8. If red water on the charging port, please wipe it dry before charging.

9. Beware that interference from the environment can cause the product to not work properly. Examples are places with high voltage facilities, communication towers, thunderstorms, large

10. In addition, not store unnecessarily.

11. Regarding you and the product:

1. It is strictly prohibited to open the Receiver in any situation. Doing so will void the product warranty.

2. Please use Remote Control and Receivers from the complete set, do not use other product to match with the Receiver.

3. If you want to test the product, please use professional testing apparatus. Do not test with hands, so as to avoid accidental injury.

4. If red water on the charging port, please wipe it dry before charging.

5. Beware that interference from the environment can cause the product to not work properly. Examples are places with high voltage facilities, communication towers, thunderstorms, large

6. In addition, not store unnecessarily.

[DOG CARE TC01 Dog Training Collar User Manual](#)

User manual for the DOG CARE TC01 Dog Training Collar, detailing product overview, package contents, setup instructions, training modes, wearing the receiver collar, training tips, important notices, troubleshooting, operating environment, maintenance, terms of use, FCC statements, and product specifications.

- interference, and causing unnecessary damage.
6. Both Remote and Receiver have automatic power saving mode. They will enter sleep mode if idle for 20 mins.
7. The included collar is a basic accessory and is not necessarily suitable for all types of dog breeds. Any collar not wider than 24mm and not thicker than 5mm, made of soft material, can be a replacement for the current collar.

Regarding well being of your dog:

1. The Receiver collar is not a regular collar and not recommended to put on a leash to walk your dog. Doing so during pulling may hurt the dog due to protruding electrodes on the Receiver.
2. Do not put the collar on for over 12 hours, it may cause rashes or discomfort to your dog's skin.
3. Do not allow children, or anyone who has little to no experience with training dogs, to handle this training kit.
4. In order to guarantee normal driving function, please insert the waterproof rubber lid over the charging port.
5. Static stimulation is not a pleasant experience for any dogs. Furthermore it's hard way to train a dog. Always praise and encourage your dog for good behavior. Note: With Anti Misoperation design, Static function sleep cut-off after 4 sec, this is a precaution designed to prevent unintentional long period of the function, and potential animal abuse.

III. Troubleshooting

1. Remote Control / Receiver turns out of power quickly; not charging.
Make sure the charger and Remote Control / Receiver is securely connected.
2. Remote Control does not respond.
Recharge the Remote Control.
Check the keypad lock, unlock the Remote.
Match Remote Control to the Receiver again.
3. Receiver does not respond.
Make sure the Receiver has been matched.
Check your Remote, make sure the Receiver is in the correct channel.
Check your Remote, make sure both devices have enough power.
4. Static Stimulation Mode has no effect on my dog.
Make sure the Receiver is working and the electrodes touching the dog's skin.
Try increase the strength of the Static.
5. The training mode fails to sync up even in short distance.
Make sure there is no strong signal interference in your surrounding. The Remote's range could fluctuate subjects to obstacles, electromagnetic field, or even stormy weather.
6. Receiver Beeps, Vibrates, sending Static by itself constantly or occasionally.
Make sure no button of Remote has been pressed or gotten stuck.
Match Receiver to the Remote Control again.
7. Remote Control / Receiver fails to match.
Make sure the Receiver is connected to a power source and in charging mode while you match.

X. Operating Environment & Maintenance

Do not use the product in the circumstances as follow:

1. Do not operate the devices under temperature of 104°F and above, doing so in such high temperature will decrease the performance of the batteries.
2. Do not use the Remote during swimming. This could lead to water seeping in causing damage to the controller.
3. Do not use the set in places with strong electromagnetic interference. This will greatly compromise the performance of the product.
4. Avoid dropping the device on hard surface or inflect excessive force on them.
5. Avoid using the device in environment flooded with corrosive chemical, this may lead to color degrading, deforming, or cracking of exterior of the device.

Maintenance

1. When not in use, please wipe clean both the Remote and Receiver with mild detergent. Turn off the Remote, lock the keypad, put on the rubber lid on the Receiver's charging port, and store the set in a cool dry place.
2. During cleaning, wipe with soft cloth and mild detergent. Do not use hard brushes which may scratch the surface of the device.
3. If the Receiver has gotten dirty, remove the charging port rubber lid secured and wash it thoroughly. Note: Do not submerge the Receiver into water for long period of time, even though it is waterproof.
4. If found residues around the charging port's rubber lid, you should wipe it clean to prevent water from seeping in.
5. If the Remote fell into water, pick it up quickly and turn off the power. Dry it with cloth as much as you can and let it out to dry. It should resume function normally once the moisture is dried out.

IX. Terms of Use & Limitation of Liability

1. Use of this product means you accept all the terms and conditions.
2. This product is a professional dog training device. You are not recommended to use this product if your dog is clever and less than 8 lbs in weight. If you're not sure whether the product is suitable for your pet dog, please consult a professional handler or contact us.
3. This product is a professional dog training device and should not be used for other purposes. Please do not violate local laws in using this product.
4. We bear no liability for any direct or indirect losses caused by use or misuse of this product; all risks in using this product shall be borne by user.
5. Please contact the dealer for parts warranty, goods return or exchange. We provide only technical support.
6. We reserve the right to alter the terms, conditions and notices of this product offered.

VI. FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



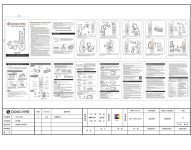

XII. Product Specification

Model	EC11
Package Dimension	8.0" x 3.14"
Collar's Dimension	21.8" x 0.83"
Receiver's Casing	ABS material; Rain resistant; Anti-scratch design
Receiver's Casing	Non-waterproof; Keep away from water
Remote / Receiver's Battery	400mAh
Charging Voltage	5C 3V/300mAh
Remote / Receiver Charging Time	Full Charge at 2-3 hrs
Charging Port	Micro USB
Remote Power	100dB
Operating Environment	0°C-40°C, 0-90%RH
Remote / Receiver Storage Time	Remote: 60 days Receiver: 40 days
Remote to Receiver's Signal Range Distance	400ft
Receiver's Battery Spec Distance	100ft

WELL-D SD Dog Training System EC11 User Manual

Comprehensive user manual for the WELL-D SD Dog Training System, model EC11. Learn about setup, collar fitting, training modes (vibration, sound, static), pairing, troubleshooting, safety guidelines, and product specifications.

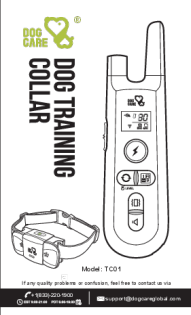

	<p>Dog Care TC01 Dog Training Collar User Manual</p> <p>User manual for the Dog Care TC01 Dog Training Collar, providing instructions on setup, training modes, matching the remote to the receiver, troubleshooting, and product specifications.</p>
	<p>DOG CARE TC05 Dog Training Collar User Manual and Guide</p> <p>Comprehensive user manual for the DOG CARE TC05 Dog Training Collar, covering setup, operation, training modes, troubleshooting, and safety guidelines.</p>
	<p>DOGCARE TC01 PRO Dog Training System User Manual</p> <p>User manual for the DOGCARE TC01 PRO dog training system and collar. Includes safety guidelines, quick start, setup, training modes (static, vibration, beep), pairing, troubleshooting, and technical specifications. Learn to use your dog training device effectively and responsibly.</p>
	<p>DogCare EDGE Ultrasonic Dog Trainer UT02 User Guide</p> <p>Comprehensive user guide for the DogCare EDGE Ultrasonic Dog Trainer (Model UT02), detailing its features, operation, safety instructions, and troubleshooting for effective dog training.</p>