

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Normcore](#) /

› [Normcore Manual Coffee Grinder V2 Instruction Manual](#)

### Normcore V2 - 38mm Stainless Steel Burr

# Normcore Manual Coffee Grinder V2 Instruction Manual

Model: V2 - 38mm Stainless Steel Burr | Brand: Normcore

## INTRODUCTION

---

Thank you for choosing the Normcore Manual Coffee Grinder V2. This high-quality hand grinder features a durable stainless steel 38mm conical burr, adjustable settings, and a robust unibody design, making it ideal for various brewing methods including Aeropress, Espresso, Pour Over, and French Press. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your grinder.



*The Normcore Manual Coffee Grinder V2, showcasing its sleek black design and handle.*

## PRODUCT FEATURES

- **New Two-Segment Unibody Design:** Cut from a single block of aluminum alloy, with a widened chamber access for easier bean loading.
- **Fixed Thumb Silicone Band:** Allows for a secure grip and reduced pressure during grinding, enhancing comfort and stability.
- **Stainless Steel Rolling Bearings:** Features a centralized steel shaft and ball bearings for smooth, stable, and consistent grinding.

- **38mm Stainless Steel Conical Burr:** Designed for precision grinding across a wide range of settings, from espresso to French press.

## PACKAGE CONTENTS

---

Upon unboxing your Normcore Manual Coffee Grinder V2, you should find the following items:

- Normcore Manual Coffee Grinder V2 (Main Unit)
- Grinder Handle
- Carrying Case
- Cleaning Brush
- Air Blower



*The Normcore Manual Coffee Grinder V2 and its accessories neatly packed in the carrying case.*

Your browser does not support the video tag.

*Official unboxing video of the Normcore V2 Grinder, showing all included items and initial setup.*

## SETUP AND INITIAL USE

1. **Unpack:** Carefully remove all components from the carrying case.

2. **Assemble Handle:** Attach the grinding handle to the top shaft of the grinder. Ensure it is securely fitted.
3. **Adjust Grind Size:**
  - Unscrew the bottom catch cup.
  - Locate the grind adjustment dial at the bottom of the main grinder body.
  - Turn the dial clockwise for a finer grind and counter-clockwise for a coarser grind. The V2 features 24 clicks per rotation, offering precise adjustments.
  - Refer to the table below for recommended starting grind settings.
4. **Load Beans:** Open the top lid and pour your desired amount of whole coffee beans into the grinding chamber. The widened chamber access facilitates easier loading.



*Close-up of the internal grind adjustment dial, showing fine and coarse indicators.*



*Exploded view illustrating the main components of the Normcore V2 grinder, including the burr, shaft, and adjustment mechanism.*

## OPERATING INSTRUCTIONS

### Grinding Coffee

1. Ensure the grind size is set according to your brewing method.
2. Hold the grinder firmly with one hand, utilizing the fixed thumb silicone band for stability.
3. Turn the handle clockwise to begin grinding. The stainless steel rolling bearings ensure a smooth and efficient grinding experience.
4. Continue grinding until all beans have passed through the burrs and collected in the bottom catch cup.
5. Unscrew the catch cup to access your freshly ground coffee.

### Recommended Grind Settings (Starting Points)

Brew Method	Grind Size	Clicks from Zero (Approx.)
Espresso	Very Fine	5-8 clicks

Brew Method	Grind Size	Clicks from Zero (Approx.)
Aeropress	Fine to Medium-Fine	8-12 clicks
Pour Over	Medium	12-18 clicks
French Press	Coarse	18-24 clicks

*Note: "Clicks from Zero" refers to turning the adjustment dial clockwise until it stops (zero point), then counting clicks counter-clockwise. Optimal settings may vary based on bean type and personal preference.*

Your browser does not support the video tag.

*A demonstration of grinding coffee beans with the Normcore V2 grinder and preparing espresso.*

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures consistent performance and extends the life of your grinder. It is recommended to clean the grinder after every few uses, or when changing coffee bean types.

### 1. Disassembly:


- Remove the grinding handle.
- Unscrew the bottom catch cup.
- Carefully remove the inner burr and central shaft assembly by turning the adjustment dial counter-clockwise until it detaches.

### 2. Cleaning:

- Use the provided cleaning brush to remove any residual coffee grounds from the burrs, shaft, and internal chamber.
- For stubborn grounds, use the air blower to dislodge particles.
- Do not wash the burrs or internal components with water, as this can lead to rust and damage. Wipe exterior with a damp cloth if needed.

### 3. Reassembly:

- Align the inner burr and central shaft assembly with the main body and screw it back in by turning clockwise until it is secure.
- Reattach the bottom catch cup and the grinding handle.

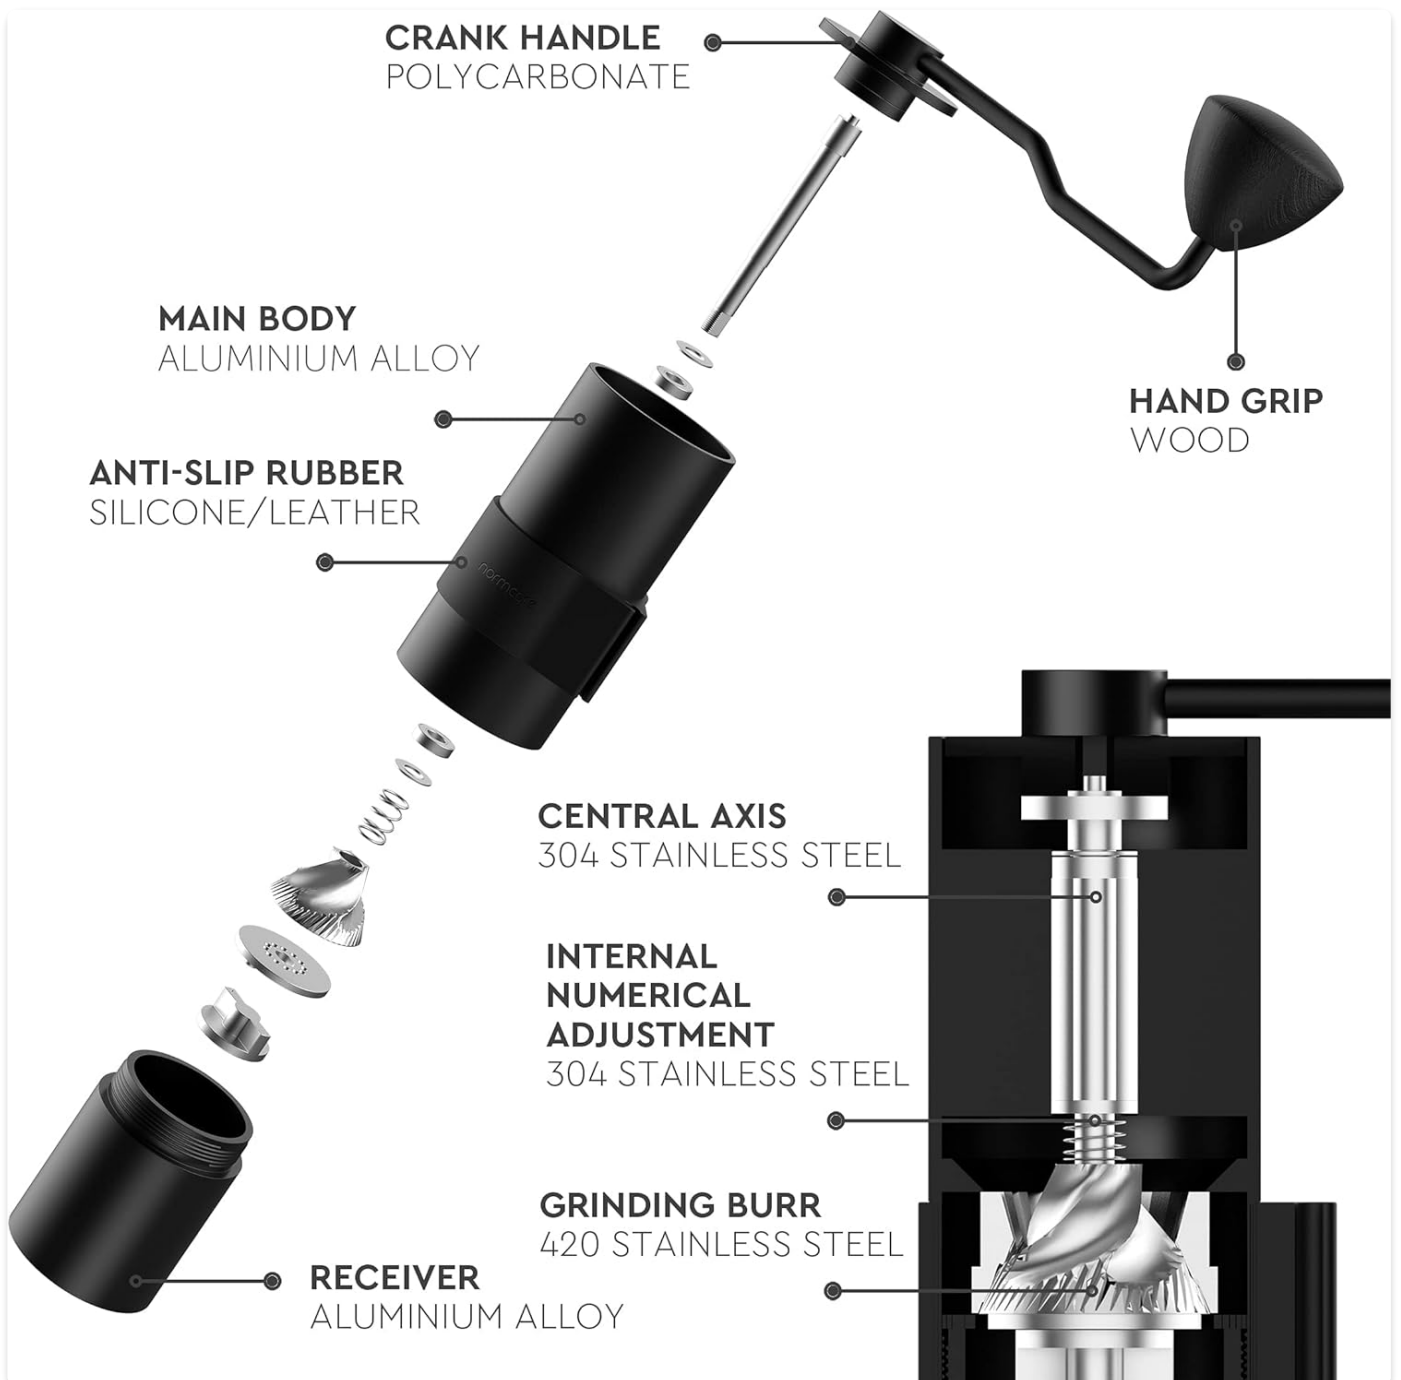

*All components of the Normcore V2 grinder disassembled for thorough cleaning.*

## TROUBLESHOOTING

### **Grinder is difficult to turn or jammed:**

This usually indicates that the grind setting is too fine for the beans being used, or there might be a foreign object. Try adjusting to a coarser setting. If the issue persists, disassemble and check for obstructions.

### **Inconsistent grind size:**

Ensure the burrs are clean and free of old coffee residue. Verify that the central shaft is stable and not wobbling. The stainless steel rolling bearings are designed for stability, but excessive force or improper assembly can affect consistency.

### **Static electricity causing grounds to stick:**

Static can be common with coffee grinders. A common tip is to add a very small drop of water (or mist) to the whole beans before grinding. This can significantly reduce static cling. Alternatively, gently tap the grinder before opening the catch cup.

## SPECIFICATIONS

<b>Brand</b>	Normcore
<b>Model Number</b>	V2 - 38mm Stainless Steel Burr
<b>Color</b>	Black
<b>Material</b>	Aluminum (Body), Stainless Steel (Burr, Shaft)
<b>Item Weight</b>	14.4 ounces (approx. 0.9 lbs)
<b>Product Dimensions</b>	0.2 x 0.2 x 6.5 inches
<b>Grind Adjustment</b>	Internal, 24 clicks per rotation
<b>Burr Type</b>	38mm Conical Stainless Steel (420 Stainless Steel)
<b>Bearings</b>	Stainless Steel Rolling Bearings

## WARRANTY AND SUPPORT

Normcore stands behind the quality of its products. For any warranty claims, technical support, or inquiries regarding your Normcore Manual Coffee Grinder V2, please visit the official Normcore store on Amazon or contact their customer service directly. Keep your proof of purchase for warranty validation.

[Visit the Normcore Store](#)