ADVWIN 1

ADVWIN Electric Standing Desk User Manual

Model: 1

Product Overview

The ADVWIN Electric Standing Desk is a height-adjustable workstation designed to promote a healthier work environment by allowing seamless transitions between sitting and standing positions. It features a robust motor system for smooth and quiet operation, a smart memory control panel for personalized height settings, and a sturdy construction for reliable performance in home or office settings.



Image: The ADVWIN Electric Standing Desk, featuring a walnut desktop and black frame, set up in a bright room with a laptop, coffee cup, and decorative items. This image showcases the desk's aesthetic and functional integration into a modern workspace.



Image: A diagram illustrating the product dimensions. The desktop measures 140cm x 60cm, and the height is adjustable from 72cm to 115cm. The base width is adjustable from 90cm to 120cm.

Setup and Assembly

This section provides step-by-step instructions for assembling your ADVWIN Electric Standing Desk. It is recommended to have two people for assembly. Ensure all parts are present before beginning.

Package Contents:

- Desktop (2 pieces)
- Legs (2 pieces)
- Crossbar/Frame components
- Control Panel
- Motor and connecting rod
- Power adapter and cables

- Hardware (screws, bolts, tools)

Note: The desk top and legs may arrive in separate packages.

Assembly Steps:

1. **Step 1: Assemble the Desk Legs and Feet.** Attach the feet to the bottom of each leg column using the provided screws. Ensure they are securely fastened.



Image: Illustration showing the attachment of the desk feet to the vertical leg columns.

2. **Step 2: Connect the Crossbar.** Extend the adjustable crossbar to the desired width and connect it between the two leg columns. Secure with screws.



Image: Illustration depicting the crossbar being installed between the two desk legs, allowing for width adjustment.

3. **Step 3: Install the Motor and Connecting Rod.** Attach the motor to one leg and insert the connecting rod through the crossbar to the other leg. Ensure the rod is fully engaged on both sides for proper synchronization.



Image: Illustration depicting the motor and the hexagonal connecting rod being installed into the desk frame.

4. **Step 4: Attach the Control Box.** Mount the control box to the underside of the desk frame.

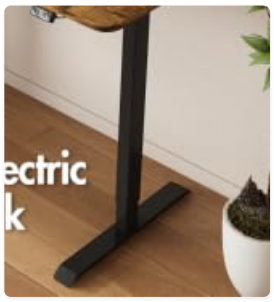


Image: Illustration of the control box being mounted to the underside of the desk frame.

5. **Step 5: Connect Cables.** Plug the motor cable and control panel cable into the control box.



Image: Illustration showing the connection of the motor and control panel cables to the main control box.

6. **Step 6: Attach the Desktop.** Carefully place the desktop onto the assembled frame. Align the pre-drilled holes and secure the desktop to the frame using the provided screws.



Image: Illustration of the desktop being placed and secured onto the assembled desk frame.

7. **Step 7: Install the Control Panel.** Mount the control panel to the front edge of the desktop using the designated screws.

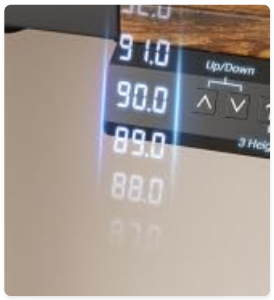


Image: Illustration showing the control panel being mounted to the front edge of the desk.

8. **Step 8: Connect Power.** Plug the power adapter into the control box and then into a wall outlet.



Image: Illustration of the power adapter being connected to the control box and then to a power outlet.

Operating Instructions

Your ADVWIN Electric Standing Desk is equipped with an intuitive control panel for easy height adjustment and memory functions.

Control Panel Functions:



Image: A detailed view of the multifunction control panel, showing the LED display, up/down buttons, memory presets (1, 2, 3), and a memory setting key (M).

- **Up/Down Buttons (▲ / ▼):**Press and hold to raise or lower the desk to your desired height. The LED display will show the current height.
- **Memory Presets (1, 2, 3):** Your desk features three programmable memory presets.
    a. **To Save a Height:** Adjust the desk to your desired height using the Up/Down buttons. Press the "M" (Memory) button, then immediately press one of the number buttons (1, 2, or 3) to save the current height to that preset.
    b. **To Recall a Height:** Simply press the corresponding number button (1, 2, or 3). The desk will automatically move to the saved height.
- **Sedentary Reminder:** The control panel may include a sedentary reminder function (indicated by a clock icon or similar). Consult the full manual for specific instructions on setting and using this feature to prompt you to change positions.



Image: A visual representation of the three programmable memory height settings, demonstrating how the desk can be set to different preferred heights for sitting and standing.

The desk operates with a powerful motor, ensuring quiet and smooth height adjustments. Noise levels are typically below 50dB during operation.



Image: The desk is shown adjusting its height, with an overlay indicating "Noise < 50dB" and "Quiet and Smooth Height Adjustment," highlighting the motor's performance.

Maintenance

To ensure the longevity and optimal performance of your ADVWIN Electric Standing Desk, follow these simple maintenance guidelines:

- **Regular Cleaning:** Wipe down the desktop and legs with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Check Connections:** Periodically inspect all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Cable Management:** Utilize the built-in cable management hole to keep wires tidy and prevent them from getting caught during height adjustments.
- **Weight Distribution:** Distribute weight evenly across the desktop. Avoid placing excessively heavy items on one side.
- **Obstruction Check:** Before adjusting the desk height, ensure there are no obstructions above or below the desk

that could impede its movement. The desk has an anti-collision feature, but it's always best to clear the path.



Image: A close-up of the desk's thickened tabletop, highlighting the cable management hole and the safe, rounded edges designed for user comfort and safety.



Image: A detailed view of the solid dual-stage legs, emphasizing the upgraded lifting system for stability and the safe, edgeless design of the feet.

TROUBLESHOOTING

If you encounter any issues with your ADVWIN Electric Standing Desk, refer to the common problems and solutions below. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	Power cable disconnected. Control box or motor cable loose. Overload protection activated.	Check if the power cable is securely plugged into the wall outlet and the control box. Ensure all cables connected to the control box and motor are firmly seated. Remove some weight from the desk. Unplug the desk for 20 minutes, then plug it back in.

Problem	Possible Cause	Solution
One side of the desk lifts/lowers unevenly.	Connecting rod not fully engaged. Uneven weight distribution.	Ensure the hexagonal connecting rod is fully inserted and aligned between both legs. This may require partially disassembling and reassembling the frame. Distribute items on the desk evenly.
Desk stops moving during adjustment.	Obstruction detected (anti-collision feature). Overload.	Check for any objects obstructing the desk's path. Remove them and try again. Reduce the weight on the desk.
Desk is unstable at higher heights.	Loose connections. Uneven floor.	Ensure all assembly screws, especially those connecting the legs and crossbar, are tightened. Adjust the leveling feet at the bottom of the desk legs to compensate for uneven flooring.

Specifications

Feature	Detail
Brand	ADVWIN
Model Number	1
Desktop Dimensions	140 cm (W) x 60 cm (D) / 55.2" (W) x 23.6" (D)
Height Adjustment Range	71 cm (28") to 115 cm (45")
Material	Walnut Wood (Desktop), Alloy Steel (Base)
Load Capacity	Approximately 75 kg (165 lbs)
Motor Type	Electric Single Motor
Special Features	Ergonomic, Electric, Adjustable, Memory Presets (3), Quiet Operation (<50dB)
Item Weight	29 kg

Warranty and Support

ADVWIN is committed to providing quality products and excellent customer service.

Warranty Information:

This ADVWIN Electric Standing Desk typically comes with a 3-year warranty, as indicated by product listings. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use.

Customer Support:

For any questions, concerns, or technical assistance regarding your ADVWIN Electric Standing Desk, please contact ADVWIN

customer service. Our team is dedicated to providing professional and friendly after-sales support.
You can typically find contact information on the ADVWIN official website or through the retailer where you purchased the product.
For Amazon purchases, you may contact the seller "Advwin" directly through your order history for support.

© 2024 ADVWIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question