

BIOMASER ZYJ-10P

BIOMASER ZYJ-10P Tattoo Stencil Printer User Manual

Model: ZYJ-10P

Brand: BIOMASER

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your BIOMASER ZYJ-10P Tattoo Stencil Printer. This thermal copier is designed to transfer line drafts and totem-type manuscripts onto tattoo transfer paper, making the stencil creation process faster and more convenient. It is suitable for A4 size transfer paper.

Key Features:

- Lightweight and portable design (approximately 1.6 kg / 3.5 lb).
- Supports A4 maximum transfer size.
- Four mode settings: Mirror, Photo, Deepness I, and Deepness II.
- Fast printing speed with low heat and noise.
- No ink required; uses thermal transfer paper as the only consumable.

2. SAFETY INFORMATION

- Always use the correct power adapter (AC 110-220 V) for the device.
- This machine is not a printer and does not have printing functionality.
- Avoid continuous transfer operations to prevent overheating. Allow the machine to cool down after use by opening the cover.
- Do not connect the device to a mobile phone or computer.
- This transfer machine is suitable for line drafts and totem-type manuscripts with a white background. It is not recommended for patterns with complex shadows or blurred backgrounds, as the transfer effect may be compromised.

3. PACKAGE CONTENTS

Upon opening the package, ensure all items are present:

- 1 x Tattoo Thermal Copier
- 20 x Thermal Transfer Papers
- 1 x Packing Carton
- 1 x Instruction Manual (this document)
- 1 x Power Cable



1. Press the buckles at both ends and open the cover.



2. Turn on the power switch of the transfer machine. Warm up the machine for a few minutes.



3. The three indicator lights are on and it is in normal working condition. If not, please adjust the button.



4. Prepare a A4 4-layers transfer paper and transfer pattern document.


Image: The package contents, including the thermal copier, transfer papers, carton, manual, and power cable.

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of the BIOMASER ZYJ-10P Tattoo Stencil Printer.



Lines patterns

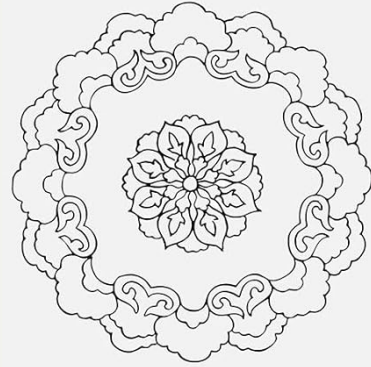

Dark background

Be careful! This tattoo transfer stencil is recommended to transfer lines and simple patterns to achieve the best results. It is not suitable for patterns with complex shadows and colors.

Image: Labeled diagram showing the Transfer Paper Input Mouth, Document Feeder, Transfer Paper Cover, Power Indication Light, push buckles to open the cover, Operation Panel (Mirror, Photo, Deepness I, Deepness II, Power, Error, Stop, Copy buttons), Warning Light, Document Output Mouth, and Transfer Paper Output Mouth.

Control Panel Functions:

- **Mirror:** Prints the pattern in reverse (mirrored).
- **Photo:** Prints the pattern as it appears on the original document, but the tattoo pattern on the body will be inverted.
- **Deepness I & II:** Adjusts the transfer depth for fine lines (Deepness I) or heavy lines (Deepness II).
- **Power:** Indicates power status.
- **Error:** Indicates an error condition.
- **Stop:** Halts the current operation.
- **Copy:** Initiates the transfer process.

5. SETUP INSTRUCTIONS

Follow these steps to set up your tattoo stencil printer:

1. **Connect Power:** Ensure the power supply is connected to an AC 110-220 V outlet.
2. **Turn On:** Turn on the power switch located on the side of the machine. Allow the machine to warm up for a few minutes.
3. **Check Indicator Lights:** The normal working condition is indicated when the POWER, MIRROR, and DEEPNESS I indicator lights are on. If not, adjust the buttons as needed.
4. **Prepare Transfer Paper:** Prepare an A4 4-layer tattoo transfer paper and your original transfer document.



Image: A visual representation of the initial setup steps, including connecting power, turning on the machine, checking indicator lights, and preparing the transfer paper and document.

6. OPERATING INSTRUCTIONS

Once the printer is set up, proceed with the following steps to create a stencil:

5. **Prepare Transfer Paper:** Remove the protective sheet and the yellow paper from the 4-layer transfer paper.
6. **Insert Document:** Place the printed pattern document with its back facing you into the document feeder.
7. **Insert Transfer Paper:** Insert the prepared transfer paper into the transfer input mouth. The machine will automatically feed the paper.
8. **Start Transfer:** Press the "COPY" button to begin the transfer process. You may gently assist the transfer paper by hand if needed.

Biomaser Professional Supplier For Tattoo Transfer Stencils Machine

You must need a tattoo transfer stencils machine to make your tattoo much easier, faster, simpler and make a tattoo for customer much better.



Image: A visual representation of the operating steps, including preparing transfer paper, inserting the original document, inserting transfer paper, and pressing the copy button.

Important Notes on Pattern Types:

- This machine is optimized for transferring **line patterns and simple designs** to achieve the best results.
- It is **not suitable for patterns with complex shadows, colors, or dark backgrounds** as these may result in smeared or blurry transfers.

What Will You Get ?




❶ Tattoo Thermal Copier



❷ 20PCS Thermal Paper



❸ Packing Carton

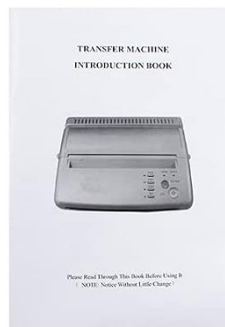

❹ Instruction



❺ Power Cable

Image: Examples illustrating suitable line patterns and unsuitable patterns with complex shadows, colors, or dark backgrounds.

Video: BIOMASER Tattoo Transfer Machine Operation

Your browser does not support the video tag.

Video Description: This video demonstrates the step-by-step process of using the BIOMASER tattoo transfer machine, from preparing the transfer paper to inserting the design and initiating the copy function, showing the final stencil output.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your stencil printer.

- **Cleaning Rollers:** To prevent black lines from appearing on transfers and ensure a great transfer effect, regularly clean the black roller, thermal printer head, and white roller with an alcohol-dipped cloth.
- **Cool Down:** If the machine overheats, paper may jam. To protect the machine, avoid continuous transfers. We recommend opening the cover to allow the machine to cool down after use.

Video: Cleaning the BIOMASER Tattoo Stencil Printer

Your browser does not support the video tag.

Video Description: This video demonstrates the proper procedure for cleaning the internal rollers and components of the BIOMASER tattoo stencil printer using an alcohol-dipped cloth, which helps maintain print quality and prevent issues like black lines.

8. TROUBLESHOOTING

Refer to the following common issues and their solutions:

- Q: How to solve machine prints random lines or black lines problem?**
A: Wipe out the ink on the roller regularly with a clean non-woven cloth to avoid printing black lines. Additionally, restore default settings by following these steps:
 - a. Press the "STOP" button for 3 seconds until you hear a beep.
 - b. Press the "MIRROR" button.
 - c. Press the "COPY" button.
- Q: How to solve paper jam up problem?**
A: If the machine is overheating, the paper will jam. Please wait for the machine to cool down before using it again. Ensure you are not performing continuous transfers without allowing for cooling.

9. SPECIFICATIONS

Feature	Detail
Model Number	ZYJ-10P
Package Dimensions	12.76 x 11.85 x 5.2 inches
Item Weight	3.53 Pounds
Manufacturer	Adshi
Maximum Transfer Size	A4
Scanning Resolution Width	210 mm

10. WARRANTY AND SUPPORT

BIOMASER provides every customer with a **12-month warranty** and a **90-day money-back guarantee**.
For any issues or inquiries regarding your BIOMASER Tattoo Stencil Printer, please contact us via Amazon. We are committed to resolving your problems and ensuring your satisfaction.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question