



[Manuals.plus](#) /

› [ECOVACS](#) /

› ECOVACS DEEBOT X1 Omni Robot Vacuum and Mop Combo User Manual

ECOVACS X1 OMNI

ECOVACS DEEBOT X1 Omni Robot Vacuum and Mop Combo User Manual

Brand: ECOVACS | Model: X1 OMNI

INTRODUCTION

The ECOVACS DEEBOT X1 Omni Robot Vacuum and Mop Combo is designed to provide a comprehensive and hands-free cleaning experience for your home. This advanced system integrates powerful vacuuming with effective mopping, featuring an innovative OMNI Station that handles self-emptying, auto-washing of mop pads, auto-refilling of water, and hot air drying. Equipped with AIVI 3D Obstacle Avoidance and TrueMapping navigation, the DEEBOT X1 Omni ensures thorough coverage while intelligently avoiding household items. Its intuitive YIKO voice assistant offers seamless control, making daily cleaning effortless. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance of your device.

WHAT'S IN THE BOX

Your ECOVACS DEEBOT X1 Omni package includes all the necessary components for a complete cleaning solution:

- DEEBOT X1 Robot
- OMNI Station
- 2 sets of spinning mopping pads
- 2 auto-seal dust bags
- 1 set of side brushes
- 1 cleaning brush
- Multi-function cleaning tool
- User Manual
- Power Cord



X1 OMNI*1



Mopping Pad
Plates *1 Couple




Mopping Pad *2 Couples



User Manual*1



Side Brush*1 Couple

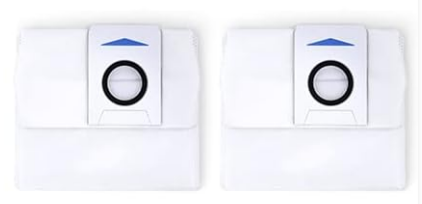

Dust Bag *2



Cleaning Brush*1



Power Cord*1



Multi-function
Cleaning Tool*1

Image: All components included in the ECOVACS DEEBOT X1 Omni package.

SETUP

Follow these steps to set up your DEEBOT X1 Omni for the first use:

- 1. Unboxing and Initial Setup:** Carefully remove all components from the packaging. Ensure all protective films and packing materials are removed from the robot and the OMNI Station.
- 2. Station Placement:** Place the OMNI Station against a wall on a hard floor surface. Ensure there is at least 0.5 meters (20 inches) of clear space on each side of the station and 1.5 meters (5 feet) in front of it for optimal navigation. Avoid placing the station on carpet or in direct sunlight.
- 3. Connect Power:** Plug the power cord into the OMNI Station and then into a wall outlet. The station's indicator lights will illuminate.
- 4. Install Components:** Attach the side brushes to the robot by snapping them into place. Install the mopping pads onto the mopping plate and attach the plate to the robot magnetically.
- 5. Fill Water Tanks:** Open the station lid and remove the clean water tank. Fill it with clean water up to the MAX level and place it back into the station.
- 6. Power On Robot:** Place the DEEBOT X1 Omni onto the OMNI Station. The robot will automatically power on and begin charging.

A truly hands-free cleaning experience



Child Lock

4L

Clean Water Tank

4L

Waste Water Tank

3L

Dust Bag

Hot Air Mop Drying



Image: Internal view of the OMNI Station showing water tanks and dust bag.

6-in-1 OMNI Station

One Tap Self-cleaning



Child Lock



Auto Tank Refilling

Auto Dust Emptying

Auto Mop Washing

Auto Hot Air Drying

Image: Detailed features of the 6-in-1 OMNI Station.

Your browser does not support the video tag.

Video: OMNI Station Operating Guide. This video demonstrates the setup and functions of the OMNI Station, including power connection, tank filling, and dust bag replacement.

OPERATING INSTRUCTIONS

The DEEBOT X1 Omni is designed for intelligent and efficient cleaning. Here's how to operate it:

- 1. Initial Mapping:** For the first cleaning, allow the DEEBOT to complete a full mapping run of your home. This creates a detailed map for efficient future cleaning.
- 2. App Control:** Download the ECOVACS HOME app to your smartphone. Connect the DEEBOT to your home Wi-Fi network (2.4GHz band recommended). The app allows you to view the cleaning map, set cleaning modes, schedule cleanings, and access advanced features.
- 3. 3D Map and Furniture Recognition:** The DEEBOT X1 Omni uses AIVI 3D Technology to automatically identify and recognize common household obstacles and furniture, even in the dark. The app displays a 3D map of your home, allowing you to manually add or remove furniture items and define specific cleaning areas around them.

4. **Cleaning Modes:**

- **Auto Cleaning:** The DEEBOT will clean your entire home automatically.
- **Area Cleaning:** Select specific rooms or areas on the map for targeted cleaning.
- **Custom Cleaning:** Define custom cleaning zones or virtual boundaries.
- **Vacuum & Mop Combo:** The DEEBOT performs both vacuuming and mopping simultaneously. It automatically boosts suction on carpets and avoids them when mopping.

5. **YIKO Voice Assistant:** Use simple voice commands to control your DEEBOT. For example, say