



Manuals.plus /

- › Tommee Tippee /
- › Tommee Tippee Perfect Prep Day & Night Machine User Manual

Tommee Tippee 29449510

Tommee Tippee Perfect Prep Day & Night Baby Bottle Maker Machine

Model: 29449510


INTRODUCTION

The Tommee Tippee Perfect Prep Day & Night machine is designed to simplify the process of preparing baby formula bottles. It provides a fresh formula feed at the correct temperature in just 2 minutes, significantly faster than traditional methods. This machine incorporates an antibacterial filter to remove impurities from tap water and utilizes a 70°C hot shot to kill bacteria in the formula, ensuring a safe and perfectly prepared bottle for your baby.

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Perfect Prep Day & Night machine. Please read it thoroughly before first use and keep it for future reference.



Image: The Tommee Tippee Perfect Prep Day & Night machine, shown with a baby bottle and a replacement water filter, highlighting its compact design and key components.

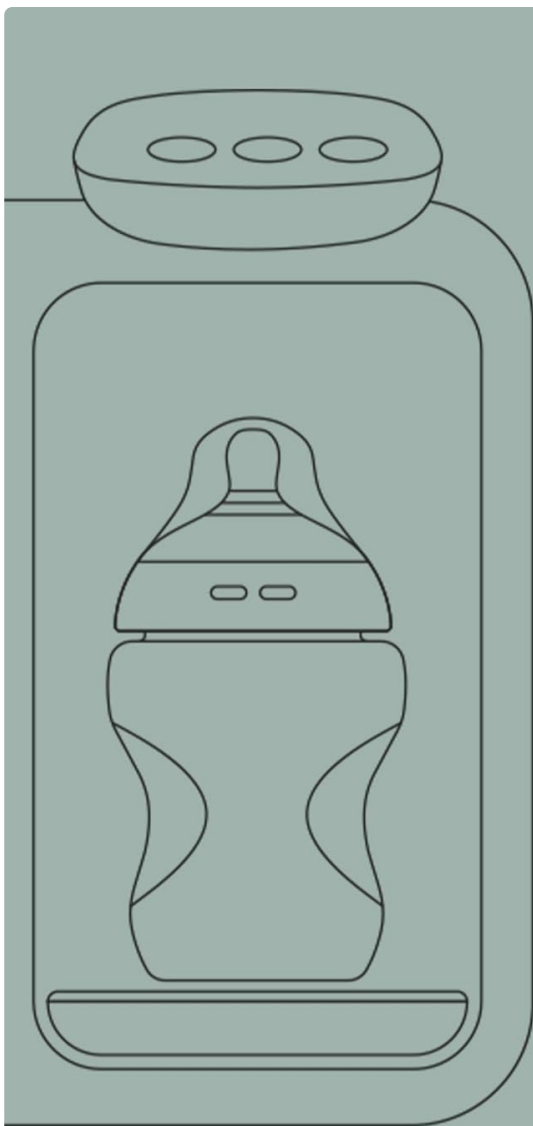

◆ **Time efficient.**

Scientifically proven to make a fresh feed safely and up to 10x faster than a kettle*.

◆ **Antibacterial filter.**

Removes impurities from tap water.

◆ **Safe for baby.**

Our patented hot shot kills bacteria in formula*.

*For verification see tommeetippee.com/perfect-prep-explained

Image: A diagram detailing the core benefits of the Perfect Prep machine, including its speed, the function of the antibacterial filter, and the safety provided by the 70°C hot shot.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances. Failure to do so may result in fire, electric shock, or injury.

- Read all instructions carefully before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Always place the appliance on a dry, stable, heat-resistant surface.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP

Before first use, ensure all packaging materials are removed and the machine is clean. It is crucial to perform the initial clean cycle and install the filter correctly.

Initial Clean Cycle

1. Place the machine on a clean, dry, flat surface.
2. Plug the machine into a wall outlet.
3. Fill the water tank with cold tap water. Do not exceed the maximum fill line.
4. Place an empty container (minimum 500ml) under the dispenser spout.
5. Press the clean cycle button (refer to your machine's display for the specific icon). The machine will dispense hot water to clean the internal components.
6. Once the cycle is complete, discard the water from the container.

Installing the Antibacterial Filter

The Perfect Prep machine uses a unique antibacterial filter designed to remove bacteria and other impurities from water.

1. Remove the filter from its packaging.
2. Submerge the filter completely in a bowl of cold tap water for 10 minutes. This is important to remove any air bubbles.
3. Lift the water tank lid and remove the existing filter holder (if any).
4. Insert the new filter into the filter holder, ensuring it clicks securely into place.
5. Place the filter holder with the new filter back into the water tank.
6. Fill the water tank with cold tap water up to the maximum fill line.
7. Perform a filter prime cycle (refer to your machine's display for instructions). This will flush the filter and prepare it for use.

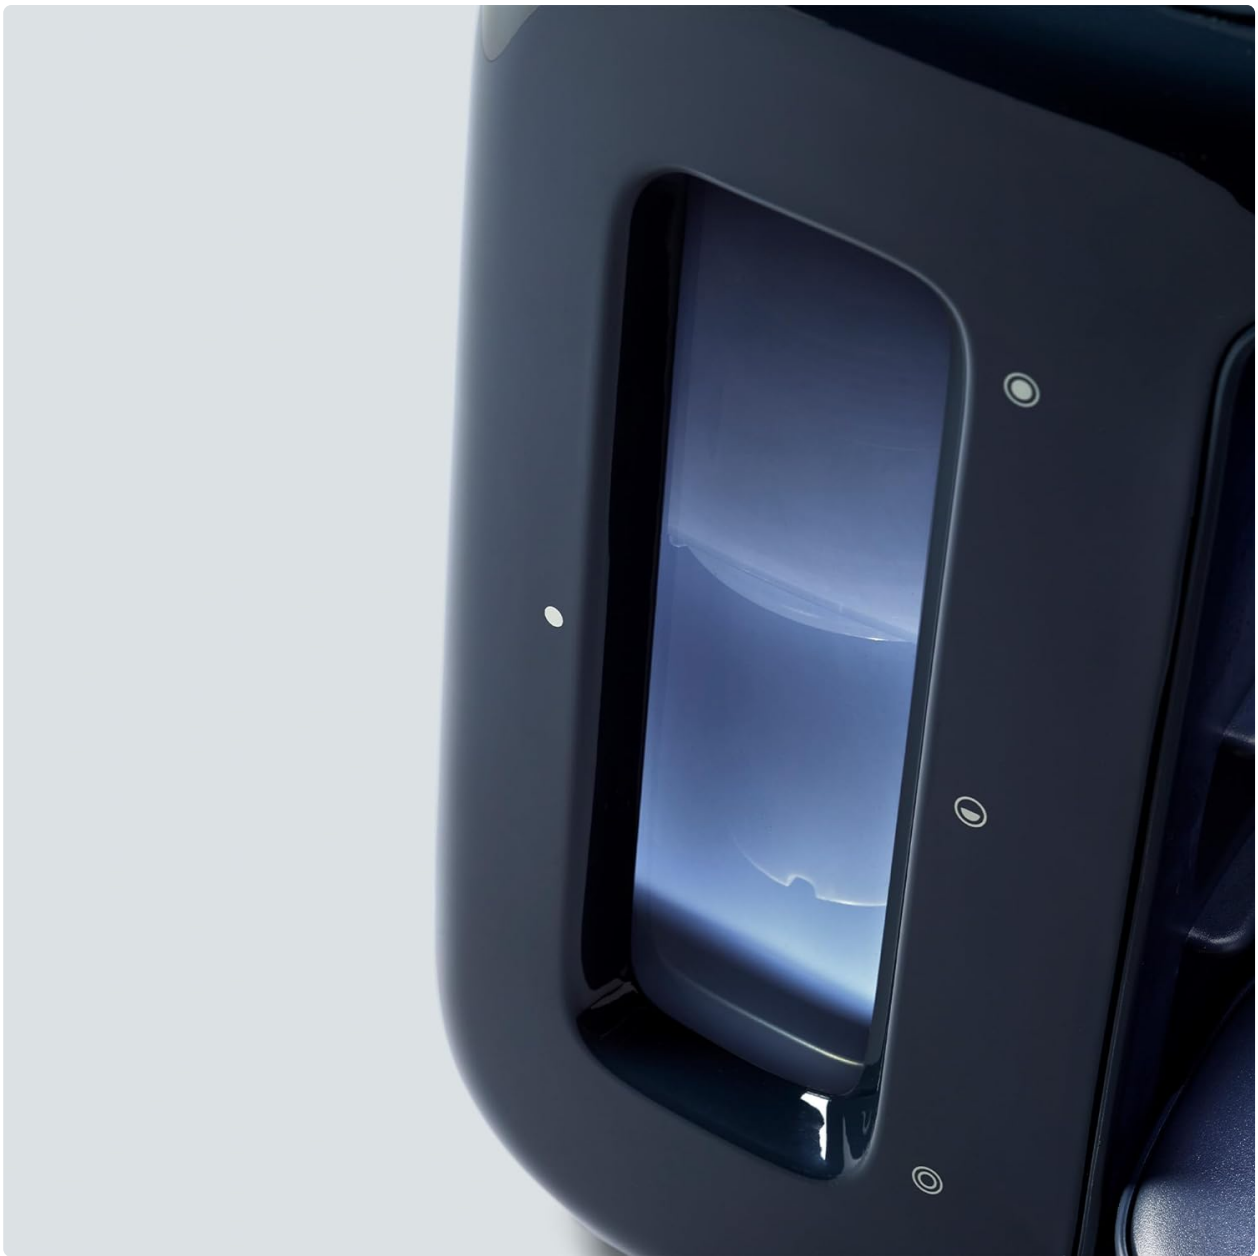


Image: A detailed view of the machine's water tank, illustrating where water is stored and its transparent design for easy level monitoring.



Image: A close-up of the antibacterial water filter, showing its design and the blue top indicating it's a genuine Tommee Tippee filter.

OPERATING INSTRUCTIONS

The Perfect Prep Day & Night machine is designed for quick and easy bottle preparation. Follow these steps for each feed.

1. **Prepare the Bottle:** Ensure your baby bottle is clean and sterilized. Add the required number of formula scoops to the bottle according to the formula manufacturer's instructions. Do not add water to the formula at this stage.
2. **Place Bottle:** Place the prepared bottle on the bottle stand under the dispenser spout. Ensure it is centered and stable.



Image: A parent carefully positioning a baby bottle under the dispenser spout of the Perfect Prep machine, ready for formula preparation.

3. **Select Volume:** Use the digital display and control buttons to select the desired feed volume (e.g., 4oz, 6oz, 8oz). The machine will indicate when it is ready to dispense.
4. **Dispense Hot Shot:** Press the start button. The machine will dispense a "hot shot" of water (70°C) into the bottle. This hot shot helps to dissolve the formula powder and kills any potential bacteria present in the formula.



Image: Water being dispensed into a baby bottle, illustrating the "hot shot" phase where the initial hot water mixes with the formula powder.

5. **Mix Formula:** Remove the bottle from the stand and place the lid on it. Shake the bottle well to ensure the formula powder is fully dissolved.
6. **Top Up with Cold Water:** Place the bottle back on the stand. The machine will then dispense the remaining cooler water to complete the feed to the selected volume and bring it to body temperature.

✦ Preps the perfect
bottle in under 2
minutes.



Image: A close-up view of a baby bottle inside the Perfect Prep machine, demonstrating the final stage of water dispensing to achieve the desired volume and temperature.

7. **Check Temperature:** Always check the temperature of the feed before giving it to your baby by dropping a few drops onto the inside of your wrist. It should feel lukewarm.

The machine's soft glow lights and low volume operation are designed to minimize disruption during night feeds.

MAINTENANCE

Regular maintenance ensures the longevity and hygienic operation of your Perfect Prep machine.

Daily Cleaning

- Wipe down the exterior of the machine with a clean, damp cloth.
- Empty and rinse the water tank daily. Refill with fresh cold tap water.
- Clean the bottle stand and drip tray with warm soapy water and rinse thoroughly.

Filter Replacement

The antibacterial filter needs to be replaced regularly. The machine's display will indicate when a filter change is due, typically every 3 months or after 150 litres of water, whichever comes first.

1. Follow the "Installing the Antibacterial Filter" steps from the Setup section.
2. Always use genuine Tommee Tippee Perfect Prep replacement filters to ensure proper filtration and machine function.

Descaling

Over time, mineral deposits can build up inside the machine. The machine will prompt you when descaling is required, typically every 4 weeks.

1. Empty the water tank.
2. Remove the filter.
3. Prepare a descaling solution according to the instructions on a food-grade descaler (e.g., citric acid solution or a descaler specifically for baby appliances).
4. Pour the descaling solution into the water tank.
5. Place an empty container under the dispenser.
6. Initiate the descaling cycle as prompted by the machine's display.
7. After the descaling cycle, rinse the tank thoroughly and perform two full clean cycles with fresh cold water to flush out any remaining descaler.

TROUBLESHOOTING

If you encounter issues with your Perfect Prep machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
"Tank Temp High" message	Water in the tank is too warm. This can happen in warm environments.	Empty the tank and refill with fresh, cold tap water. If the room temperature is very high, consider using chilled water (not frozen) or moving the machine to a cooler location.
Machine not dispensing water	Water tank is empty or filter is not primed correctly.	Ensure the water tank is filled to the MAX line. Perform a filter prime cycle if a new filter was recently installed.
"Filter Change" warning	Filter has reached its end of life or 3 months have passed.	Replace the antibacterial filter with a new, genuine Tommee Tippee filter and perform the filter prime cycle.
"Descale" warning	Mineral build-up inside the machine.	Perform a descaling cycle as per the Maintenance section.
Feed temperature is incorrect	Incorrect water temperature in the tank or machine malfunction.	Ensure the water tank is filled with cold tap water. If the issue persists after descaling and filter replacement, contact customer support.

If the problem persists after attempting these solutions, please contact Tommee Tippee customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	18 x 26 x 29 cm (Length x Width x Height)
Item Weight	2.65 kg
Model Number	29449510
Style	Perfect Prep Black
Water Filter Type	Antibacterial filter
Hot Shot Temperature	70°C
Preparation Time	Approximately 2 minutes

WARRANTY AND SUPPORT

Tommee Tippee products are designed with quality and reliability in mind. For specific warranty details, please

refer to the warranty card included with your product or visit the official Tommee Tippee website.

If you require technical assistance, have questions about your product, or need to claim warranty, please contact Tommee Tippee customer support:

- **Website:** www.tommeetippee.com (Check for local contact information)
- **Online Support:** Many common questions can be answered through the FAQ or support sections of the website.

Please have your product model number (29449510) and purchase date ready when contacting support.