COMFEE' CLC27N3AWW

COMFEE' 24" Washer and Dryer Combo Instruction Manual

Model: CLC27N3AWW | Brand: COMFEE'

1. Product Overview

The COMFEE' 24" Washer and Dryer Combo is an all-in-one, ventless appliance designed for convenience and efficiency. It offers multiple washing and drying modes to suit various laundry needs, including steam care for wrinkle and odor reduction, and an overnight wash and dry cycle for ready-to-wear clothes by morning. Its compact size makes it ideal for smaller living spaces, while the inverter motor ensures energy efficiency and stable performance.

This appliance combines washing and drying functions into a single unit, eliminating the need to transfer clothes between machines. It features a 2.7 cu.ft washing capacity and a 13 lbs drying capacity, suitable for the daily laundry demands of 3-4 people.



Front view of the COMFEE' 24" Washer and Dryer Combo.



The COMFEE' Washer and Dryer Combo is designed to meet the daily laundry needs of 3-4 people.

Key Features:

- **Wash and Dry in One:** Multi-mode functionality including steam care, overnight wash and dry, wool setting, reload function, quick wash, pre-wash, delay start, and child lock.
- **Steam Care:** Reduces wrinkles and odors by permeating steam through fabrics for over 30 minutes, also aiding in dust removal.
- **Overnight Wash and Dry:** Convenient cycle that washes and dries laundry in one continuous process, making clothes ready by the next day.
- **Energy & Space Saving:** Compact dimensions (23" x 25" x 34") with a 26 lbs washing and 13 lbs drying capacity. Features an energy-efficient inverter motor.

2. Safety Information

Please read all instructions carefully before using the appliance to prevent injury and property damage. Keep this manual for future reference.

General Safety Precautions:

- Ensure the appliance is properly grounded to prevent electrical shock.
- Do not operate the appliance with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances such as gasoline, dry-cleaning solvents, kerosene, etc.
- Always unplug the appliance before cleaning or performing any maintenance.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. Setup and Installation

Proper installation is crucial for the safe and efficient operation of your COMFEE' washer and dryer combo. Please follow these steps carefully.

Unpacking and Transit Bolt Removal:

Before using the appliance, it is essential to remove the transport bolts from the back. Failure to do so can cause excessive vibration and damage during operation.

1. Carefully unpack the appliance and ensure no EPS foam is left underneath.
2. Locate the four transport bolts on the rear of the machine.
3. Loosen all bolts with a 13mm wrench and then remove them.
4. Cover the holes with the provided transport hole plugs found in the accessories bag. Keep the transport bolts for future use, such as moving the appliance.



Image illustrating the location of transport bolts on the back of the unit.

For a visual guide on unpacking and installation, please refer to the official video:

Official video: Comfee' Laundry After-service Guide - UNPACK AND INSTALLATION. This video demonstrates the unpacking process and removal of transit bolts.

Connecting Water and Drain Hoses:

- Connect the water inlet hose (included) to the inlet valve on the back of the machine and to your household water supply. Ensure connections are tight to prevent leaks.
- Place the drain hose into a drain pipe. The recommended drain hose height is between 0.6 and 1 meter.

Leveling the Appliance:

To prevent excessive vibration and noise during operation, ensure the appliance is perfectly level.

1. Hold both upper corners of the machine and gently rock it to check for any imbalance.
2. Adjust the unbalanced foot until the machine stands firmly on the floor.
3. Tighten the nuts firmly to the cabinet to secure the feet in place.

Power Connection:

Plug the power cord into a grounded electrical outlet. Ensure the power supply is reliably grounded and the voltage is within ±15% of the rating voltage (120 Volts).

4. Operating Instructions

Your COMFEE' washer and dryer combo offers a variety of cycles and features for optimal laundry care.



The all-in-one design offers daily quick wash, energy-efficient drying, and overnight wash and dry options.


Control Panel Overview:

The appliance features a fully automatic controller with an LED display. Use the control knob to select your desired cycle and the touch buttons for additional options.

Washing Cycles:

The machine offers 5 washing cycles, including:

- **Normal Wash:** Standard cycle for everyday laundry.
- **Quick Wash:** For lightly soiled items needing a fast clean (e.g., 36 minutes).
- **Steam Care:** Utilizes steam to reduce wrinkles and odors, and for disinfection.
- **Pre-Wash:** An initial wash cycle for heavily soiled items.
- **Wool Setting:** Gentle cycle specifically designed for wool garments.

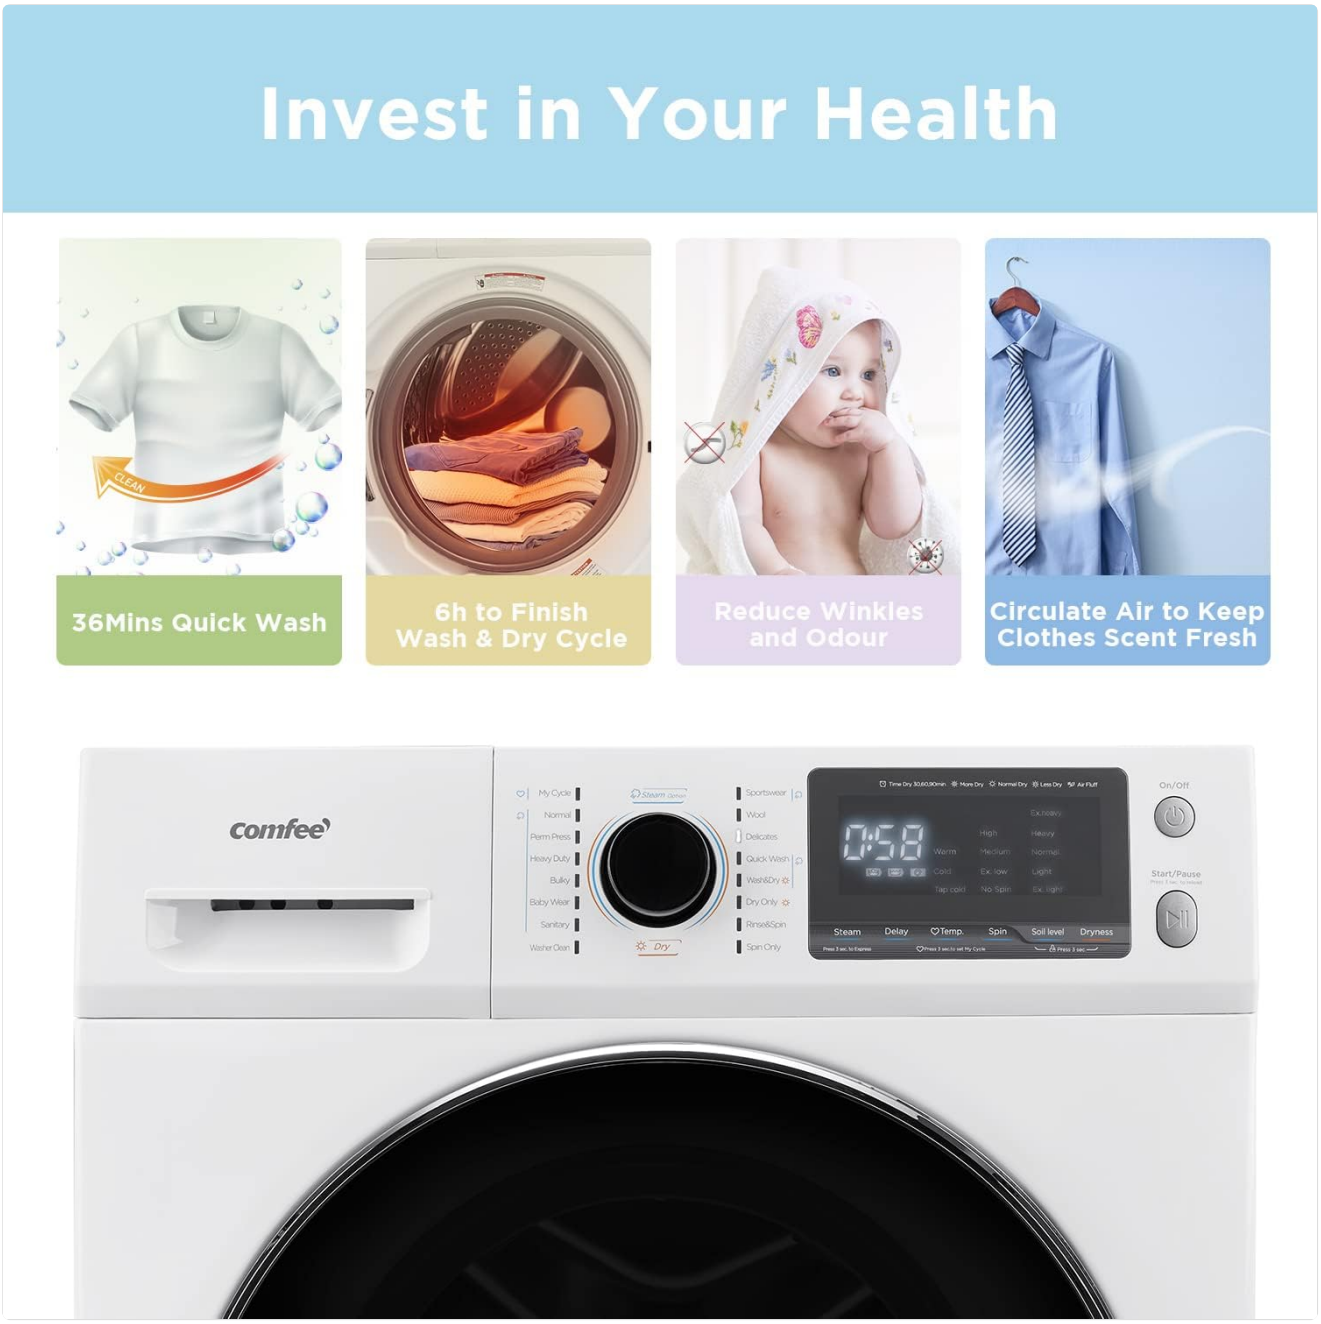

The control panel highlights features such as quick wash, combined wash and dry cycles, and steam care.

Drying Cycles:

The appliance has 1 main drying cycle with adjustable timed dry options:

- **Timed Dry:** Select drying times of 30, 60, or 90 minutes based on fabric type and desired dryness level.
- **Overnight Wash and Dry:** This convenient option allows you to wash and dry your clothes in one continuous cycle, typically taking around 6 hours, so your laundry is ready by morning.



The Overnight Wash & Dry feature allows you to start laundry before bed and wake up to clean, dry clothes.



Different drying levels can be selected based on the type of clothing, with options for 30, 60, or 90 minutes.

Additional Functions:

- **Delay Start:** Set a delayed start time for your wash cycle.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **Add Garment (Reload Function):** Allows you to pause the cycle and add forgotten clothes without powering off or restarting the machine.



The Add Garment feature allows you to pause the cycle and add forgotten items.

Explore the various features and cycles of your COMFEE' washer and dryer combo with this promotional video:

Official video: Comfee'_CLC27N3AWW_Washer and Dryer Combo_Promotion video. This video highlights key features such as overnight wash, steam care, and the add garment function.

5. Maintenance

Regular maintenance helps ensure the longevity and optimal performance of your appliance.

Cleaning the Drum:

Periodically run a drum clean cycle to remove any residue and maintain hygiene. Refer to your control panel for the specific 'Drum Clean' option.

Drain Hose and Filter:

Although this is a ventless model without a traditional lint trap, lint and hair are discharged with the water. It is highly recommended to use a screen or hair trap between the drain hose and your drain to prevent clogs in your plumbing

system.

Exterior Cleaning:

Wipe the exterior of the appliance with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

6. Troubleshooting

If you encounter any issues with your appliance, refer to the following common troubleshooting tips. For persistent problems, please contact customer support.

Excessive Noise or Vibration:

- **Transport Bolts:** Ensure all four transport bolts have been completely removed from the back of the machine. (Refer to Section 3: Setup and Installation).
- **Leveling:** Verify that the appliance is properly leveled. Adjust the feet as necessary until the machine stands firmly without wobbling.
- **Load Distribution:** Unevenly distributed clothes inside the drum can cause imbalance and vibration. Open the door and redistribute the clothes evenly. In case of only one heavy item, add more clothes to help balance the load.

For a visual guide on addressing abnormal noise and vibration, please refer to the official video:

Official video: Comfee Laundry After-service Guide - Abnormal Noise and Vibration. This video provides guidance on how to resolve common noise and vibration issues.

Clothes Not Drying Completely:


- **Overloading:** Avoid overloading the dryer. For optimal drying, ensure clothes have enough space to tumble freely. The dryer capacity is 13 lbs.
- **Cycle Selection:** Ensure you have selected an appropriate drying cycle and dryness level for the type of fabric. Thicker materials may require longer drying times.
- **Mixed Fabrics:** Avoid mixing thick and thin materials in the same load, as this can lead to uneven drying.

7. Specifications


Detailed technical specifications for the COMFEE' 24" Washer and Dryer Combo.

Specification	Detail
Brand	COMFEE'
Model Number	CLC27N3AWW
Product Dimensions	23.4"D x 25.2"W x 33.5"H
Item Weight	161 Pounds
Capacity	2.7 Cubic Feet (Washer), 13 lbs (Dryer)

Specification	Detail
Color	Ivory White
Material	Plastic, Steel
Power Source	Electric
Voltage	120 Volts
Sound Level	63 dB
Controller Type	Fully Automatic
Number of Washing Cycles	5
Number of Drying Cycles	1
Maximum Rotational Speed	1400 RPM
Annual Energy Consumption	90 Kilowatt Hours Per Year
Included Components	Water inlet hose

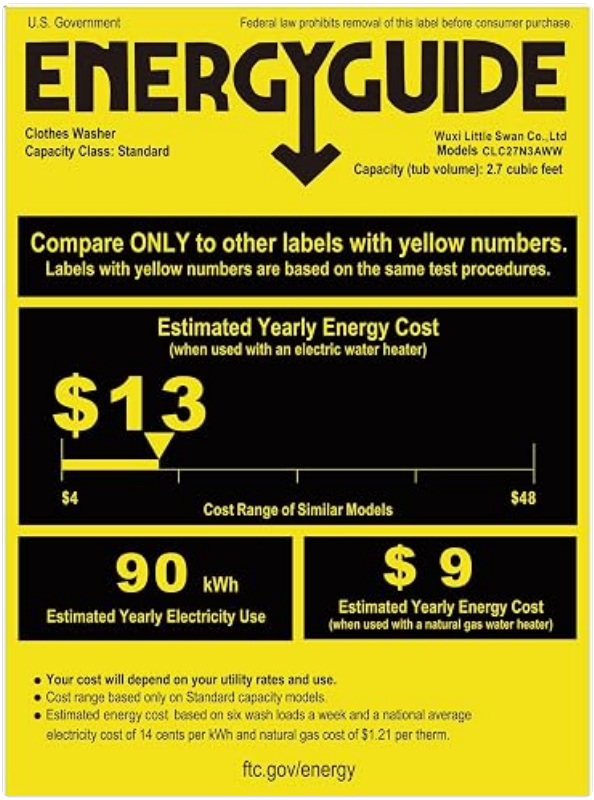

U.S. Government EnergyGuide label for the COMFEE' Washer and Dryer Combo.

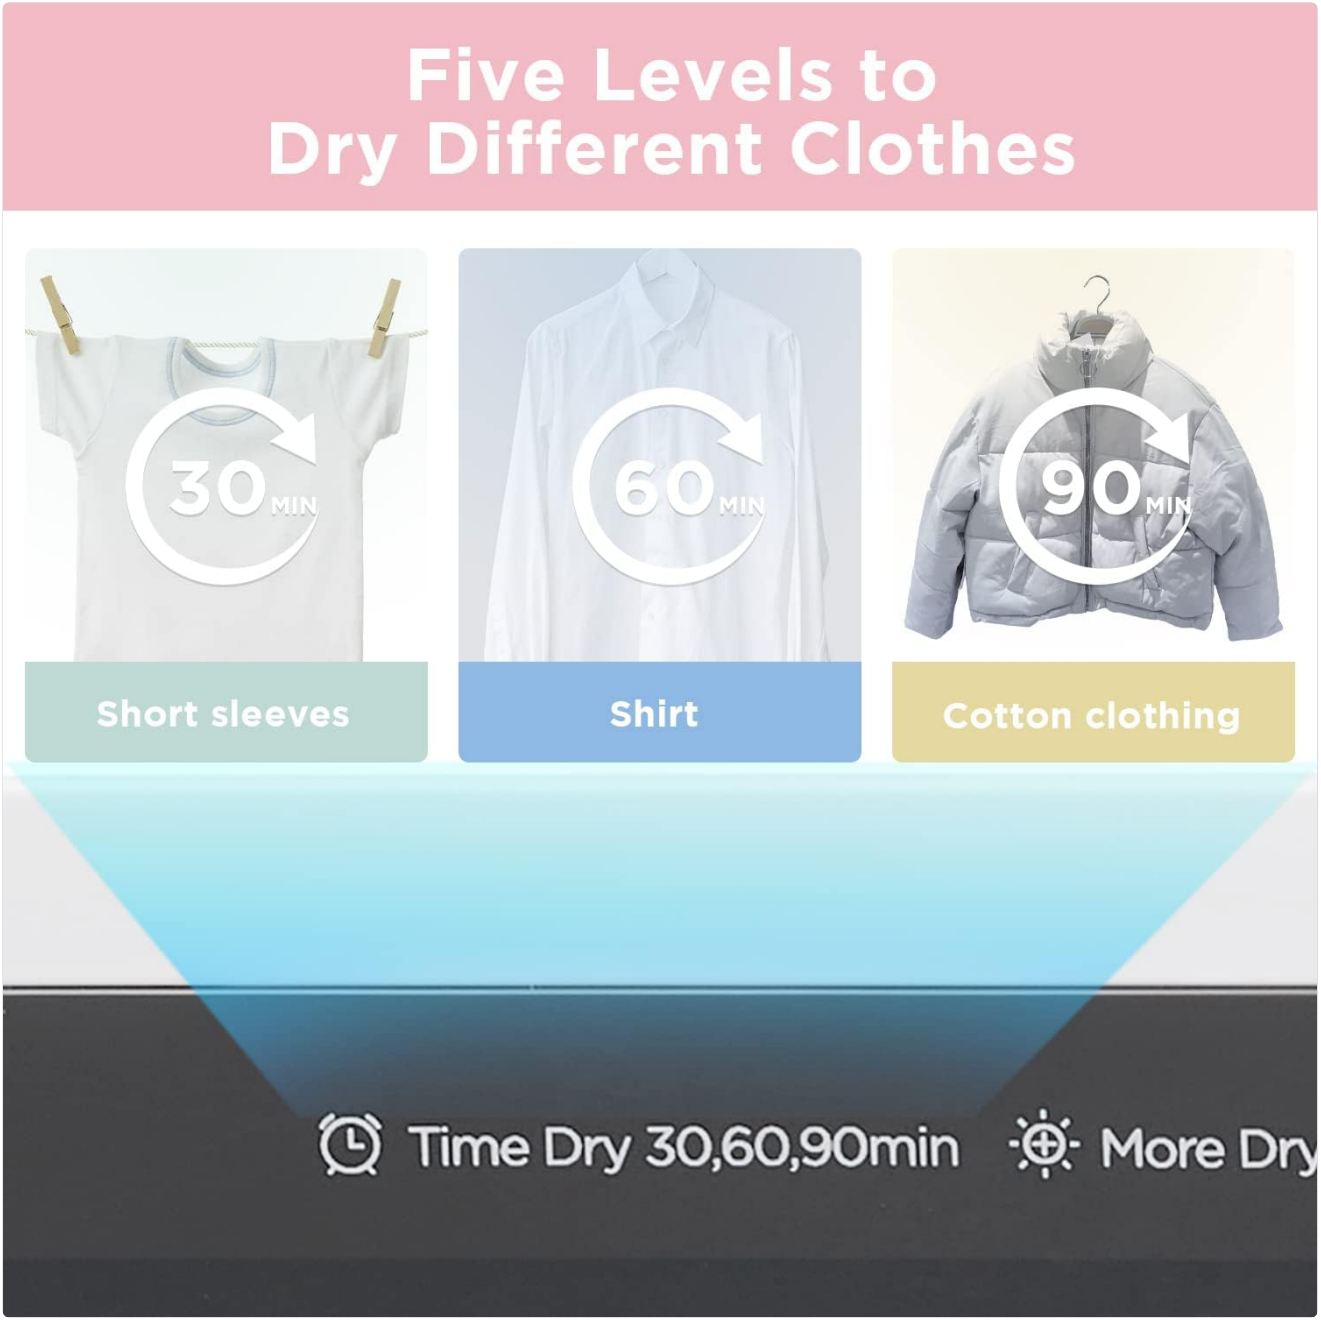

Space-saving dimensions of the COMFEE' Washer and Dryer Combo.

8. Warranty and Support

Warranty Information:

The COMFEE' 24" Washer and Dryer Combo comes with a One Limited Year Warranty from the original purchase date.

Extended Protection Plans:

Additional protection plans are available for purchase to extend coverage beyond the standard warranty:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly billing option covering eligible past and future purchases)

Customer Support:

For further assistance, technical support, or warranty claims, please refer to the official user manual or contact COMFEE' customer support. You can find the full User Manual in PDF format via the link provided with your product documentation.

For general inquiries or support, please visit the COMFEE' store or contact their customer service as indicated in your purchase information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question