

[Manuals.plus](#) /

› [SteamOne](#) /

› SteamOne T2000B Professional Garment Steamer User Manual

SteamOne T2000

SteamOne T2000B Professional Garment Steamer User Manual

Model: T2000 | Brand: SteamOne

INTRODUCTION

Thank you for choosing the SteamOne T2000B Professional Garment Steamer. This powerful and efficient device is designed to quickly de-wrinkle, refresh, and sanitize all types of fabrics, from delicate silks to heavy cottons. With its robust design and professional features, the T2000B is an ideal solution for both home and commercial use. Please read this manual carefully before operating the steamer to ensure safe and optimal performance.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before use.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Do not immerse the steamer base, cord, or plug in water or other liquids.
- Always unplug the steamer from the electrical outlet when filling with water, emptying, or when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the steam head away from your body and hands during operation. Steam is hot and can cause burns.
- Ensure the steamer is placed on a stable, flat surface during use.
- Do not leave the steamer unattended while it is operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the different parts of your SteamOne T2000B Garment Steamer.







Figure 1: Full view of the SteamOne T2000B Professional Garment Steamer.

Caractéristiques techniques

La vapeur SteamOne élimine 99,99% des virus, germes et bactéries*.
(*Testés par des laboratoires indépendants).

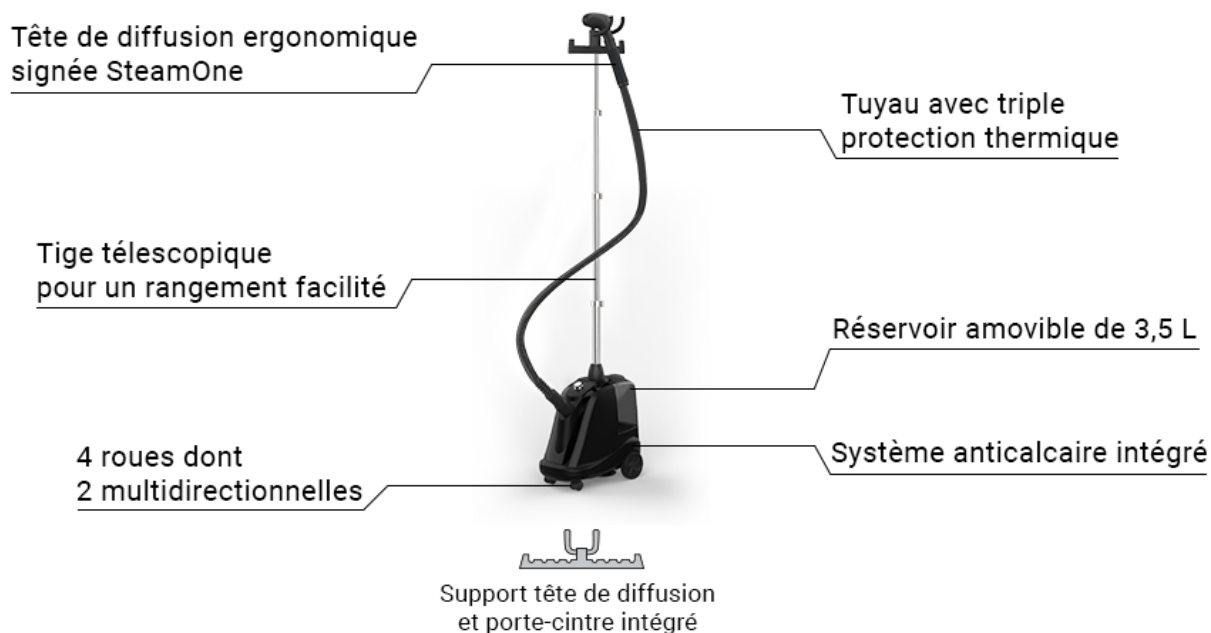


Figure 2: Detailed diagram of the T2000B's main components.

- **Ergonomic Diffusion Head:** Designed for comfortable and effective steaming.
- **Telescopic Rod:** Adjustable height for various garment lengths and compact storage.
- **Triple Thermal Protection Hose:** Ensures safe steam delivery.
- **3.5 Liter Removable Water Tank:** Large capacity for extended steaming sessions.
- **Integrated Anti-Calc System:** Helps prevent mineral buildup.
- **4 Wheels (2 Multi-directional):** For easy mobility and positioning.
- **Support Head and Integrated Hanger Holder:** Conveniently holds the steam head and garments.



INCLUIDO

SOPORTE





Figure 3: Included accessories: garment support and head support.

SETUP

Follow these steps to set up your SteamOne T2000B Garment Steamer for first use.

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Assemble the Telescopic Rod:** Insert the telescopic rod into the designated slot on the steamer base. Extend the rod to your desired height and secure it.

3. **Attach the Hanger Support:** Place the hanger support onto the top of the telescopic rod.
4. **Connect the Steam Hose:** Securely attach the steam hose to the steam outlet on the steamer base. Ensure it clicks into place.
5. **Fill the Water Tank:** Remove the 3.5L water tank from the base. Unscrew the cap and fill the tank with distilled or demineralized water. Do not overfill. Replace the cap and reinsert the tank firmly into the base.
6. **Position the Steamer:** Place the steamer on a stable, level surface near an electrical outlet. The integrated wheels allow for easy movement.



Figure 4: The steamer base with its integrated wheels and removable water tank.

OPERATING INSTRUCTIONS

Using your SteamOne T2000B for effective garment care.

1. **Power On:** Plug the steamer into a grounded electrical outlet. Press the power button. The steamer will heat up in approximately 45 seconds.

2. **Prepare Garment:** Hang the garment on the integrated hanger support. Ensure the fabric hangs freely.
3. **Steam Application:** Hold the steam head close to the fabric, moving it in a downward motion. For stubborn wrinkles, gently pull the fabric taut with your free hand.
4. **Fabric Types:**
 - *Delicate Fabrics (silk, satin, chiffon):* Hold the steam head slightly further away or use quick, light passes.
 - *Medium Fabrics (cotton, linen, wool):* Apply steam directly to the fabric.
 - *Heavy Fabrics (denim, upholstery):* Apply steam for a longer duration, ensuring deep penetration.
5. **Sanitizing:** The 98°C steam helps to sanitize fabrics by eliminating bacteria and odors. Pass the steam head slowly over the fabric for sanitizing effect.
6. **Finishing:** After steaming, allow the garment to cool and dry completely before wearing or storing to prevent re-wrinkling.
7. **Power Off:** When finished, press the power button to turn off the steamer and unplug it from the outlet.



Figure 5: Key performance indicators: 2000W power, 40g/min steam output, 45-second heat-up, and 80-minute autonomy.



Figure 6: Steaming a blue shirt.





Figure 7: Steaming a red blouse.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steamer.

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool. Remove the water tank and empty any remaining water.
- **Cleaning the Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (Regularly):** Although the T2000B has an integrated anti-calc system, regular descaling is recommended, especially in areas with hard water.
 - Mix equal parts white vinegar and distilled water.
 - Pour the solution into the water tank.
 - Run the steamer until half the solution is used, then turn off and let it sit for 30 minutes.
 - Resume steaming until the tank is empty.
 - Rinse the tank and run two full tanks of plain distilled water through the steamer to flush out any vinegar residue.
- **Storage:** Store the steamer in a cool, dry place. Ensure the water tank is empty and the hose is not kinked. The telescopic rod can be collapsed for compact storage.

TROUBLESHOOTING

Common issues and their solutions.

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty; steamer not heated sufficiently; mineral buildup.	Refill water tank; allow 45 seconds for heating; perform descaling procedure.
Water leaking from steam head.	Condensation; hose kinked; overfilled water tank.	This is normal during initial use or if hose is cold; straighten hose; do not overfill tank.
Steamer not turning on.	Not plugged in; power outlet issue; faulty unit.	Ensure plug is fully inserted; test outlet with another appliance; contact customer support if issue persists.
Fabric still wrinkled after steaming.	Not enough steam applied; fabric too thick; steam head too far from fabric.	Apply steam for longer; use slower passes; hold steam head closer to fabric.

SPECIFICATIONS

Detailed technical specifications for the SteamOne T2000B.

Feature	Detail
---------	--------

Feature	Detail
Model Number	T2000
Brand	SteamOne
Power	2000 Watts
Voltage	230 Volts
Water Tank Capacity	3.5 Liters
Heat-up Time	45 seconds
Continuous Steam Autonomy	Approx. 80 minutes
Steam Output	40g/min
Product Dimensions (L x W x H)	43.5 x 27.5 x 43 cm
Item Weight	6.5 Kilograms
Color	Black
Origin	France

WARRANTY AND SUPPORT

SteamOne is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in this manual, your product is covered by standard consumer guarantees in your region. For any questions, technical assistance, or warranty claims, please contact SteamOne customer support. You can find contact information on the official SteamOne website or through your retailer.

© 2024 SteamOne. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question