

[Manuals.plus](#) /

› [MEETWARM](#) /

› MEETWARM Swivel Rocker Massage Recliner Chair with Heat (Model: MEETWARM-Swivel-gray) - User Manual

MEETWARM MEETWARM-Swivel-gray

MEETWARM Swivel Rocker Massage Recliner Chair with Heat

Model: MEETWARM-Swivel-gray

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your MEETWARM Swivel Rocker Massage Recliner Chair with Heat. Please read this manual thoroughly before use to ensure proper function and safety.



Image: The MEETWARM Swivel Rocker Massage Recliner Chair in gray, showcasing its overall design.

SAFETY INFORMATION

Please observe the following safety guidelines:

- Ensure all parts are securely fastened before use.
- Do not allow children to play on or around the recliner without adult supervision.
- Keep hands and feet clear of the reclining mechanism when adjusting the chair.
- The USB ports are designed for low-power devices only (e.g., smartphones, tablets). Do not connect high-power devices.
- Unplug the chair from the power outlet before cleaning or performing any maintenance.
- Maximum weight capacity for this chair is 350 pounds. Do not exceed this limit.

PACKAGE CONTENTS

Your MEETWARM Swivel Rocker Massage Recliner Chair is shipped in two boxes (Box A and Box B) and includes the following components:

- Backrest
- Seat Base with Armrests
- Footrest Assembly
- Power Adapter
- Remote Control
- Assembly Instructions



Image: Product dimensions and illustration of the two shipping boxes (Box A and Box B) for the recliner chair.

SETUP AND ASSEMBLY

Assembly of the MEETWARM Swivel Rocker Massage Recliner Chair is designed to be straightforward and typically

takes 10-15 minutes. No additional tools are required.

1. **Unpack Components:** Carefully remove all parts from both shipping boxes. Ensure all listed components are present.
2. **Attach Backrest:** Slide the backrest onto the metal guides on the seat base until it clicks securely into place.
3. **Connect Cables:** Connect the power cables from the backrest and seat base to the main power adapter. Ensure all connections are firm.
4. **Plug In:** Plug the power adapter into a standard electrical outlet.

OPERATING INSTRUCTIONS

Reclining Function

To recline the chair, locate the pull ring on the right side of the chair. Pull the ring to release the footrest. To further recline the backrest, apply gentle pressure to the back of the chair. The chair reclines up to 150 degrees. To return to the upright position, push the footrest down with your heels until it locks into place, and the backrest will return to its original position.



Pull the handle to raise the footrest separately.



Exert some pressure onto the back to recline back.

Image: Illustration of the manual reclining mechanism, showing how to pull the handle for the footrest and apply back pressure for recline.

Swivel and Rocking Functions

The chair features a 360-degree swivel base, allowing you to rotate freely. It also includes a smooth gliding/rocking motion for added comfort. These functions operate manually.

360° SWIVEL + SMOOTH GLIDING

Enjoy a pleasant and relaxing time



Image: Diagram illustrating the 360-degree swivel and smooth gliding motion of the recliner chair's base.

ROCKING FUNCTION

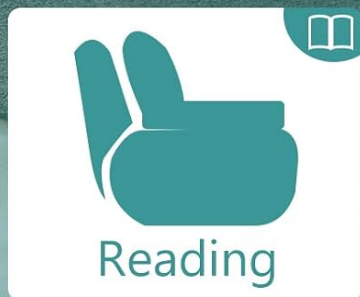


Image: A person demonstrating the rocking function of the chair, suitable for activities like reading, watching TV, or napping.

Massage and Heating Functions

The chair is equipped with an 8-point vibration massage system and a lumbar heating function, controlled by the included remote.

- **Power Button:** Press to turn the massage and heat functions on/off.
- **Heating:** Activates the lumbar heating element. This function can operate independently of the massage.
- **Vibration Intensity:** Adjusts the intensity of the vibration massage (2 levels).
- **Modes Adjustment:** Select from 5 vibration massage modes.
- **Massage Areas:** Target specific areas: Head, Back, Thigh, Shin.
- **Timer Function:** Set the operating time for 15, 30, or 60 minutes.



With Heated
Function in Waist



5 Vibration
Massage Modes



2 Levels Vibration
Intensity 4 Areas& 8-Points
Massage Vibration System



15/30/60 Mins
Timer Function

Heated Vibration Massage Control



Image: Visual representation of the heated vibration massage control, indicating massage points and remote control functions.

USB Charging Ports and Storage

The chair includes dual USB charging ports for low-power devices, two cup holders on the armrests, and multiple side and front pockets for storage.

PRODUCT DETAILS



Image: Close-up details of the recliner, highlighting the USB charging ports, cup holders, side pockets, and the internal steel frame.

CARE AND MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Inspection:** Periodically check all connections and fasteners to ensure they are tight.
- **Storage:** If storing the chair, ensure it is in an upright position in a dry, cool environment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not recline.	Reclining mechanism is jammed or not engaged.	Ensure the pull ring is fully engaged. Check for obstructions around the mechanism.
Massage/Heat functions not working.	Power cable disconnected or remote battery low.	Check all power connections. Ensure the power adapter is plugged into a working outlet. Replace remote batteries if applicable.
USB ports not charging.	Device requires more power than available or cable is faulty.	Ensure the device is low-power (e.g., phone, small tablet). Try a different USB cable. Verify the chair is powered on.
Chair feels unstable.	Loose assembly bolts.	Check and tighten all assembly bolts. Ensure the chair is on a flat, stable surface.

PRODUCT SPECIFICATIONS

- **Brand:** MEETWARM
- **Model Number:** MEETWARM-Swivel-gray
- **Color:** Swivel-gray
- **Material:** Metal frame, Sponge fill, Suede upholstery
- **Product Dimensions (Upright):** 34"D x 34"W x 42"H
- **Maximum Weight Recommendation:** 350 pounds
- **Reclining Position Count:** 1 (manual, up to 150 degrees)
- **Furniture Base Movement:** Rock, Swivel (360 degrees)
- **Additional Features:** Arm Rest, Cushion Availability, 2 Cup Holders, Dual USB Charging Ports, Side and Front Pockets, Remote Control
- **Massage System:** 8-point vibration (Head, Back, Thigh, Shin), 2 levels intensity, 5 modes, 15/30/60 min timer
- **Heating Function:** Lumbar heating
- **Included Components:** Remote

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and functionality of the MEETWARM Swivel Rocker Massage Recliner Chair.

WARRANTY INFORMATION

For specific warranty details, please refer to the documentation included with your purchase or contact MEETWARM customer support. Standard return policy allows for returns within 30 days of purchase.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need troubleshooting support, please contact MEETWARM customer service. You can often find contact information on the product packaging or through the seller's

page on Amazon.

Seller: Meetwarm

For additional support and product information, you may visit the [MEETWARM Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09WMTDVX1>

More documents and user manuals: **<https://manuals.plus/>**