

warmiplanet WICF02-2

warmiplanet 52-Inch Ceiling Fan with Lights and Remote Control (Model WICF02-2) User Manual

Your guide to installation, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the warmiplanet 52-inch Ceiling Fan with Lights and Remote Control. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

2. SAFETY INFORMATION

- **Electrical Safety:** Always disconnect power at the main circuit breaker before installation or servicing. Ensure all wiring connections comply with local electrical codes. If you are unfamiliar with electrical wiring, consult a qualified electrician.
- **Mounting:** The ceiling fan must be mounted to a structurally sound ceiling joist or an outlet box rated for ceiling fan support. Ensure the mounting structure can support the fan's weight.
- **Blade Clearance:** Maintain a minimum clearance of 7 feet (2.1 meters) from the floor to the fan blades and at least 18 inches (45 cm) from the wall to the blade tips.
- **Fan Operation:** Do not insert objects into the path of the fan blades. Ensure all screws are tightened securely before operating the fan.
- **Light Source:** The integrated LED light source is not user-replaceable. Contact customer support if the light source requires servicing.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Ceiling Fan Motor Assembly
- Fan Blades (4)
- Downrod

- Hanging Bracket
- Canopy
- Remote Control
- Receiver
- Light Plate with Integrated LED
- Light Cover
- Hardware Pack (screws, washers, wire nuts, R-pin, cross pin)
- Instruction Manual

4. SPECIFICATIONS

Feature	Specification
Brand	warmiplanet
Model Number	WICF02-2
Product Dimensions	52"D x 52"W x 14.9"H
Number of Blades	4
Blade Material	Wood
Motor Type	DC Brushless Motor
Number of Speeds	6
Light Type	Integrated LED (24-watt)
Color Temperature	3000K (Warm White), 4000K (Natural Light), 6000K (Cool White)
Dimmable	10-100%
Control Method	Remote Control
Noise Level	Less than 50 dB
Air Flow Capacity	Up to 6600 CFM
Voltage	120 Volts
Power Source	AC

5. INSTALLATION

Refer to the installation video and follow these steps carefully. Ensure power is disconnected at the circuit breaker before starting.

Your browser does not support the video tag.

Video: Warmiplanet 52-inch Ceiling Fan Installation Guide. This video demonstrates the complete installation process for the ceiling fan.

Step 1: Install the Hanging Bracket

Secure the hanging bracket to the ceiling outlet box using two machine screws and iron washers. If installing on a wooden ceiling, use four wood screws and iron washers.



Image: A hand installing the hanging bracket to the ceiling, securing it with screws.

Step 2: Install the Downrod

Loosen, but do not remove, the two screws on the coupler of the motor. Remove the R-pin, then install the downrod and canopies. Feed the wires through the downrod and fix the downrod to the coupler. Insert the cross pin and R-pin, then tighten the two screws on the coupler.

Step 3: Hang the Downrod and Connect Wiring

Loosen the two opposite screws on the hanging bracket. Hang the fan to the bracket, rotating the downrod until the slot on the downrod aligns to the bulge on the hanging bracket.

Connect the receiver wires to the fan wires by matching colors (black to black, white to white, blue to blue). Connect the other side of the receiver to the home wiring: black to live wire, white to neutral wire, and green to ground wire. After wiring, place the receiver into the hanging bracket. Push up the big canopy, rotate it, and tighten the two screws under the big canopy.

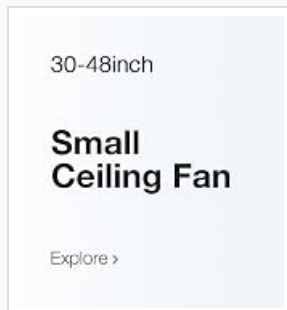


Image: Detailed wiring diagram showing connections for live, neutral, and ground wires from the home to the fan and receiver.

Step 4: Install the Blades

Install the blades with their respective brackets, screws, and washers. Remove the screws for the blades which are on the motor. Align the holes and tighten all screws to prevent shaking of the fan.

Step 5: Install the Light Plate and Cover

Remove the four screws for the light plate. Connect the wire of the light source. Fix the light plate to the motor. Finally, rotate the light cover until it is fixed securely.

6. OPERATING INSTRUCTIONS

Your warmiplanet ceiling fan is operated using the included remote control.

Multi-functional Remote Control



Timer Setting

Easy-to-use Timer Option

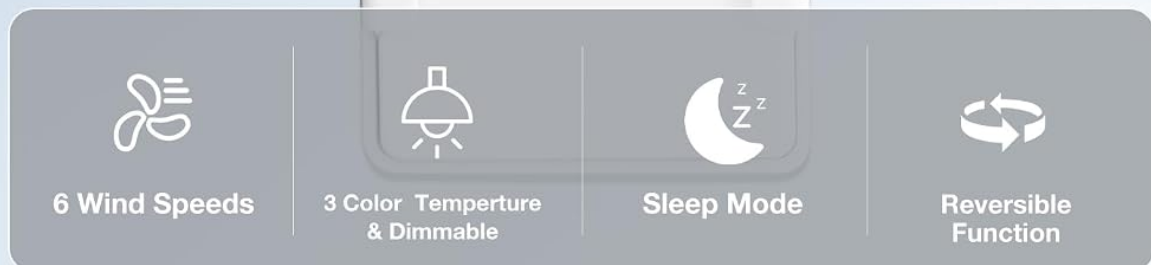


Image: The multi-functional remote control for the ceiling fan, showing buttons for fan speed, light control, and timer settings.

Fan Control

- **Power On/Off:** Press the power button to turn the fan on or off.
- **Speed Control:** Use the numbered buttons (1-6) to select one of the six wind speeds.

- **Reversible Motor:** To change the direction of airflow (downdraft for summer, updraft for winter), locate the slide switch on the motor housing and flip it to the desired position. Ensure the fan is off before changing direction.

Suitable for All Seasons



Image: Diagram illustrating the reversible motor function, showing counter-clockwise updraft for summer and clockwise downdraft for winter.

Light Control

- **Light On/Off:** Press the 'LIGHT ON' or 'LIGHT OFF' buttons to control the light.
- **Color Temperature Change:** Pressing the ON/OFF button on the remote control continuously will cycle through the color temperatures: Cool White (6000K) to Warm White (3000K) to Natural Light (4000K).
- **Dimming:** The light is 10-100% dimmable. Use the dimming buttons on the remote to adjust brightness.
- **Memory Function:** If the light is turned off for more than 7 seconds and then turned back on, the color temperature will be the same as the last setting.

More Lighting Options



Image: Visual representation of the three light color temperature options: 3000K Warm Light, 4000K Natural Light, and 6000K Cool White Light.

Timer Function

The remote control includes a timing function. Use the dedicated timer buttons (1H, 3H, 6H) to set the fan to turn off automatically after 1, 3, or 6 hours.

Your browser does not support the video tag.

Video: Warmiplanet 52-inch Ceiling Fan Features Demonstration. This video showcases the fan's light color changing, dimming, and reverse functions.

7. MAINTENANCE

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the fan is turned off and power is disconnected before cleaning.
- **Blade Inspection:** Periodically check the fan blades for any signs of damage or imbalance. Loose blades can cause wobbling and noise.
- **Tighten Fasteners:** Over time, some fasteners may become loose. Check all mounting screws and blade attachment screws at least twice a year and tighten them as necessary.
- **No Lubrication Required:** The fan motor is permanently lubricated and does not require oiling.

8. TROUBLESHOOTING

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; remote control battery low.	Check circuit breaker and wall switch. Verify all wire connections are secure. Replace remote control battery.
Fan wobbles	Loose blade screws; unbalanced blades; loose mounting bracket.	Ensure all blade screws are tight. Check for bent blades. Verify mounting bracket is securely fastened.
Light does not work	Loose wire connection to light; LED light failure.	Check light wire connections. If light still fails, contact customer support for assistance.
Remote control not working	Battery low or incorrectly installed; receiver not paired.	Replace remote battery, ensuring correct polarity. Refer to remote pairing instructions (if applicable, not detailed in provided data).
Excessive noise	Loose screws; motor issue.	Tighten all screws. If noise persists, contact customer support.

9. WARRANTY AND SUPPORT

warmiplanet provides the following warranty for this product:

- **Motor Warranty:** 10 years
- **Whole Fan Warranty:** 2 years (covers other parts)

If you have any questions, require assistance with installation, or encounter any product issues, please contact warmiplanet customer service. We aim to reply within 24 hours.

For further information or support, visit the [warmiplanet Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question