

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LOVE MOMENT](#) /
- › [Electric Mason Jar Vacuum Sealer Kit User Manual](#)

LOVE MOMENT B0BDDX27WT

Electric Mason Jar Vacuum Sealer Kit

Model: B0BDDX27WT

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your LOVE MOMENT Electric Mason Jar Vacuum Sealer Kit. Please read this manual thoroughly before operating the device and retain it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your vacuum sealer.



Image: The Electric Mason Jar Vacuum Sealer Kit, showing the main sealer unit, the regular mouth adapter, two types of jar lids, and a USB charging cable. This kit is designed for both wide mouth and regular mouth mason jars.

SAFETY INFORMATION

- Do not immerse the main unit in water or any other liquid.
- Keep out of reach of children. This device is not a toy.
- Use only the provided charging cable or a compatible Type-C cable for charging.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- Ensure jars and lids are clean and dry before sealing to achieve an effective vacuum.
- Avoid sealing liquids directly as they may be drawn into the vacuum mechanism.

PACKAGE CONTENTS

Your LOVE MOMENT Electric Mason Jar Vacuum Sealer Kit includes:

- 1 x Electric Vacuum Sealer Main Unit
- 1 x Standard Mouth Seal Converter
- 5 x Wide Mouth Mason Jar Lids
- 5 x Regular Mouth Mason Jar Lids
- 1 x USB Type-C Charging Cable
- 1 x User Guide (this manual)

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your electric mason jar vacuum sealer.



Image: Exploded view of the Electric Mason Jar Vacuum Sealer, highlighting the main unit (Wide Mouth Sealer) and the detachable Regular Mouth Seal Converter. The red arrow indicates the direction to attach or detach the converter.



Image: Detailed view of the sealer's top. Labelled are the Type-C charging port (1), the LED digital display area (2) which shows working time, power, and charging status, and the Keystrokes button (3) for starting/stopping and viewing power.

SETUP

Charging the Device

Before first use, fully charge the electric vacuum sealer. Connect the provided USB Type-C charging cable to the charging port on the device and a suitable USB power source (e.g., wall adapter, computer USB port). The LED display will indicate charging status.

Attaching/Detaching the Regular Mouth Seal Converter

The sealer comes with a wide mouth sealing area. To seal regular mouth jars, you need to attach the regular mouth seal converter.

1. **To Attach:** Align the red arrow on the regular mouth seal converter with the unlock symbol on the main unit. Insert the converter into the silicone ring in the wide mouth seal area and twist clockwise until the arrow aligns with the lock symbol. This indicates a successful and secure installation.
2. **To Detach:** Rotate the red arrow on the regular mouth seal converter to the left, aligning it with the unlock symbol. Gently pull the converter away from the main unit.

OPERATING INSTRUCTIONS

General Sealing Tips

- Ensure the jar rim and lid are clean and dry. Any moisture or food particles can prevent a proper seal.
- Use only flat metal canning lids. Do not use screw bands during the sealing process.
- For best results, press the sealer firmly and horizontally onto the jar lid.
- The recommended vacuuming time is 40 seconds or more for a strong seal.



Image: The sealer should be pressed down firmly and kept horizontal on the jar lid for a better seal.



Image: Illustration showing the correct lid placement for vacuum sealing. The 'Wrong' side shows a lid with a screw band, which should not be used during sealing. The 'Right' side shows a flat metal lid correctly placed without the screw band.

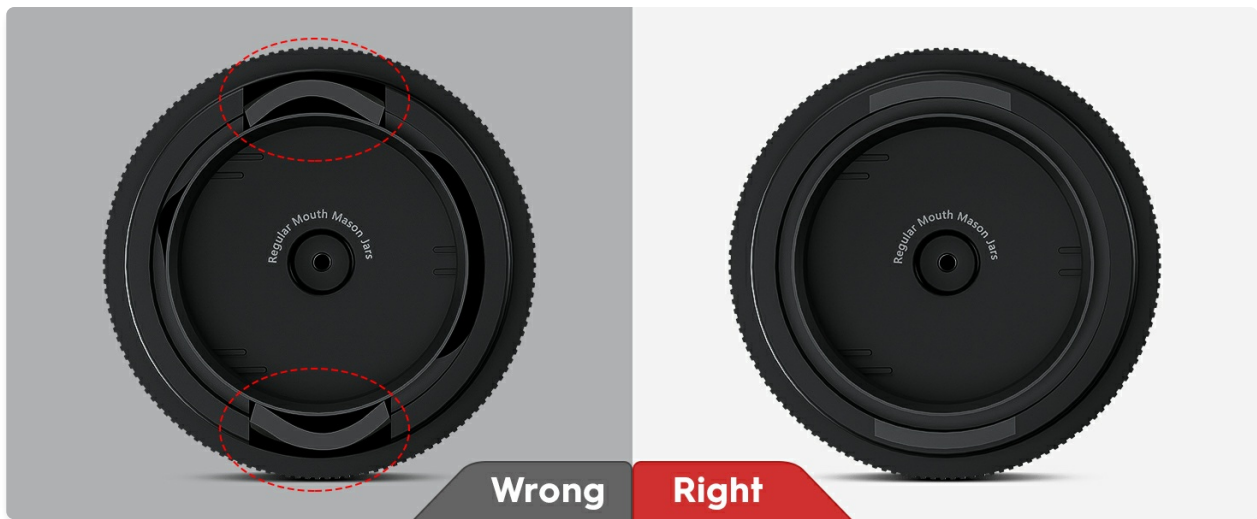


Image: Guidelines for filling jars. For soft foods like jams and jellies, leave 1/2 inch headspace. For solid foods like fruit and pickles, leave 1 inch headspace.

Sealing Regular Mouth Mason Jars

1. Place your food into a regular mouth mason jar and cover it with a new, clean flat metal lid.
2. Ensure the regular mouth seal converter is securely attached to the main unit.
3. Align the electric mason jar sealer with the mouth of the regular-mouth mason jar and press down horizontally firmly.
4. Click the button on the top of the sealer to start the vacuum pump. The LED display will show the working time.
5. Allow the sealer to operate for approximately 40 seconds or more until the air is evacuated and a seal is formed.
6. Click the button again to stop the sealing process. The display will show the current battery level.
7. Unplug the sealer upwards from the jar. Check the seal by pressing the center of the lid; it should not flex.

Regular Mouth Mason Jar Sealer Use



Image: Visual instructions for regular mouth jar sealing. Steps include placing the lid, aligning the sealer, pressing the button to start (displaying working time), and lifting the sealer after completion.

Sealing Wide Mouth Mason Jars

1. Place your food into a wide mouth mason jar and cover it with a new, clean flat metal lid.
2. Ensure the regular mouth seal converter is detached from the main unit, leaving the wide mouth sealer ready for use.
3. Align the electric glass bottle sealing machine with the mouth of the wide-mouth glass bottle and press it into place horizontally.
4. Click the button to start the vacuum pump.
5. Allow the sealer to operate for approximately 40 seconds or more until the air is evacuated and a seal is formed.
6. Click the button again to stop the sealing process.
7. Lift the wide-mouth sealing machine horizontally upwards from the jar. Check the seal.

Wide Mouth Mason Jar Sealer Use

1

1. Rotate the red arrow (I) on the regular mouth sealing adapter to the left to the unlock symbol (B) on the host, after unlocking the regular mouth sealing adapter, you will get the wide-mouth sealer.



2



2. Align the electric glass bottle sealing machine with the mouth of the wide-mouth glass bottle and press it into place horizontally. Click the button to start the work, after the work is completed, click the button again to end the work, and lift the wide-mouth sealing machine horizontally upward.

Image: Visual instructions for wide mouth jar sealing. Steps include rotating the regular mouth adapter to unlock and remove it, then aligning the main sealer unit with the wide mouth jar, pressing the button to start, and lifting the sealer after completion.

MAINTENANCE

Cleaning the Device

- Wipe the exterior of the sealer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Ensure the silicone rings inside the sealing areas are clean and free of debris. These can be gently wiped with a damp cloth.
- Allow all parts to air dry completely before storage.

Battery Care

- Recharge the device when the battery indicator on the LED display shows low power.
- For long-term storage, charge the battery to approximately 50% and store in a cool, dry place. Recharge every 3-6 months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on or operate.	Low battery.	Charge the device fully using the provided USB Type-C cable.
Jar does not seal properly.	Jar rim or lid is dirty/wet. Lid is bent or damaged. Sealer not pressed firmly or horizontally. Insufficient vacuuming time.	Clean and dry jar rim and lid thoroughly. Use a new, undamaged lid. Ensure the sealer is pressed firmly and horizontally onto the lid. Increase vacuuming time to 40 seconds or more.
Sealer makes unusual noise.	Minor air leakage during operation. Internal component issue.	Ensure proper alignment and firm pressure on the jar. If noise persists or is excessive, discontinue use and contact customer support.
Regular mouth adapter does not fit or seal.	Incorrect attachment.	Refer to the "Attaching/Detaching the Regular Mouth Seal Converter" section and ensure it is twisted to the 'lock' position.

SPECIFICATIONS

Feature	Detail
Brand	LOVE MOMENT
Model	B0BDDX27WT
Material	Acrylonitrile Butadiene Styrene
Color	Black
Product Dimensions	4.13"L x 4.13"W x 3.7"H
Item Weight	1.17 pounds (0.53 Kilograms)

Feature	Detail
Power Source	Battery Powered
Operation Mode	Electric
Wattage	4 watts
Voltage	4 Volts (DC)
Date First Available	September 7, 2022

WARRANTY AND SUPPORT

For warranty information, returns, or technical support, please refer to the product's listing page on Amazon or contact LOVE MOMENT customer service directly through the seller contact options provided on the platform. Keep your purchase receipt as proof of purchase.