

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BELLEZE](#) /

› [BELLEZE 42-inch Electric Fireplace Heater Instruction Manual Model ZF42D03F-G1](#)

BELLEZE ZF42D03F-G1

BELLEZE 42-inch Electric Fireplace Heater Instruction Manual

Model: ZF42D03F-G1

1. IMPORTANT SAFETY INFORMATION

Please read and understand this entire instruction manual before attempting to assemble, operate, or install this electric fireplace. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

General Safety Precautions:

- This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This electric fireplace is equipped with an overheating protection feature that automatically shuts off the heater if the temperature exceeds 140°F (60°C). If this occurs, unplug the unit, wait 10 minutes, and then plug it back in.

Electrical Safety:

- This product is for use on 120 Volt, 60 Hz AC circuits. The cord has a plug as shown in the diagram.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

- Ensure the electrical outlet is properly grounded.

2. PRODUCT OVERVIEW

The BELLEZE 42-inch Electric Fireplace Heater provides warmth and ambiance with realistic flame effects. It can be installed as a recessed or wall-mounted unit.

Key Features:

- **Power:** 120V, 1400W heater.
- **Installation:** Recessed or Wall Mounted.
- **Heating Coverage:** Warms rooms up to 400 square feet.
- **Flame Effects:** 16 flame colors and 16 ember bed colors. Flame and ember bed can glow separately.
- **Control:** Remote control and integrated touch screen.
- **Adjustable Settings:** 5 levels of brightness, 5 flame speeds, temperature settings (64°F to 82°F).
- **Timer:** 1 to 9 hours timer control.
- **Safety:** CSA/UL certified with overheating protection.

Package Contents:

- Electric Fireplace Unit (42-inch)
- Remote Control
- Mounting Hardware (brackets, screws, anchors)
- User Manual
- Crystal Stones (for ember bed)

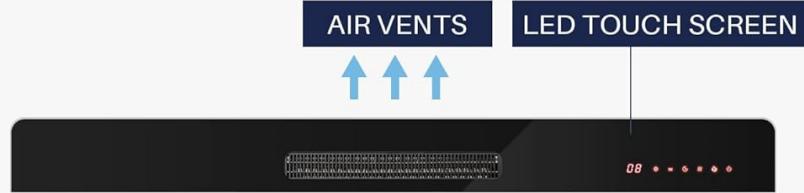


Image 2.1: The BELLEZE 42-inch Electric Fireplace Heater with its remote control, showcasing vibrant flame effects.

3. SETUP AND INSTALLATION

Before Installation:

1. Carefully remove all components from the packaging.
2. Inspect the unit and components for any damage. Do not install if damaged.
3. Choose a suitable location for installation. Ensure it is away from combustible materials and has access to a grounded 120V outlet.
4. Confirm the dimensions of the fireplace for your chosen installation method.



1 YEAR LIMITED WARRANTY

Image 3.1: Diagram showing the dimensions of the 42-inch electric fireplace: 42 inches (L) x 4.2 inches (W) x 16 inches (H).

Installation Options:

This fireplace can be installed as a wall-mounted unit or recessed into a wall.

Wall-Mounted Installation:

1. Select a wall location that is sturdy and can support the weight of the fireplace.
2. Mark the desired height and position for the mounting bracket on the wall. Ensure it is level.
3. Drill pilot holes and secure the mounting bracket to the wall using appropriate screws and anchors.
4. Carefully lift the fireplace unit and hook it onto the wall mounting bracket.
5. Secure the bottom of the fireplace to the wall using the provided screws to prevent accidental dislodging.

Recessed Installation:

1. Construct a framed opening in the wall with precise dimensions to fit the fireplace. Refer to the product dimensions for exact measurements.
2. Ensure there is adequate clearance around the unit for ventilation and electrical connections.
3. Slide the fireplace unit into the framed opening.
4. Secure the fireplace to the framing using the provided screws through the designated mounting holes on

the sides of the unit.



Easy Assemble Wall Mounted Fireplace

Image 3.2: Illustration demonstrating the process of wall-mounted installation for the electric fireplace.

4. OPERATING INSTRUCTIONS

The fireplace can be operated using the touch screen controls on the unit or the included remote control.

Control Panel and Remote Control:

WALL MOUNTED ELECTRIC SCENARIO APPLICATION



Living room



Bedroom



Hotel lobby



Club house

Image 4.1: Detailed view of the fireplace's LED touch screen control panel and the full-function remote control, highlighting various buttons and their corresponding actions.

Basic Operation:

- **Power On/Off:** Press the Power button on the control panel or remote to turn the unit on or off.
- **Heat Function:** Press the Heat button to activate the heater. Use the temperature settings to adjust the desired room temperature between 64°F and 82°F. The heater will cycle on and off to maintain the set temperature.
- **Flame Color:** Press the Flame button to cycle through 16 different flame colors.
- **Ember Bed Color:** Press the Ember Bed button to cycle through 16 different ember bed colors.
- **Brightness:** Use the Brightness button to adjust the flame and ember bed brightness through 5 levels (L1-L5 for flame, D1-D5 for ember bed).
- **Flame Speed:** Use the Speed button to adjust the flame movement speed.
- **Timer Function:** Press the Timer button to set the automatic shut-off timer from 1 to 9 hours. Continue pressing to cycle through options or turn off the timer.
- **Mute Mode:** Activate mute mode to silence operational sounds.
- **Energy Conservation Mode:** This mode optimizes energy usage.



5 Flame Settings



5 Brightness Levels



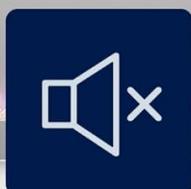
16 Flame Colors



16 Glowing Crystal Colors



LED Touchscreen



Mute Mode



1-9 Timer Control Options



Energy Conservation Mode



Timer Control

Continue pressing the control button to access all timer settings from 1H to 9H and off

Image 4.2: Overview of the various control options available, including 5 flame settings, 5 brightness levels, 16 flame colors, 16 glowing crystal colors, LED touchscreen, mute mode, 1-9 hour timer, and energy conservation mode.

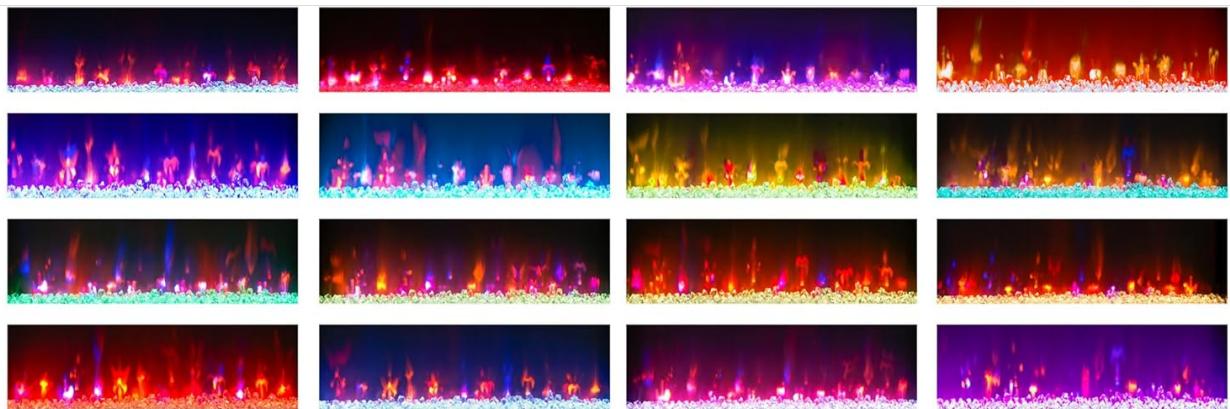


Image 4.3: Visual representation of the 16 available sparkling crystal flame colors and 16 ember bed colors.



Image 4.4: Depiction of the 5 faux flame brightness settings (L1 to L5) and ember bed brightness settings (D1 to D5).

5. MAINTENANCE

Cleaning:

- Always disconnect the power before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or sprays.
- Clean the air vents regularly with a vacuum cleaner or soft brush to prevent dust buildup.
- The glass panel can be cleaned with a soft cloth and glass cleaner.

Storage:

When not in use, store the fireplace in a dry, dust-free location. If storing for an extended period, it is recommended to cover the unit to protect it from dust.

6. TROUBLESHOOTING

If you experience issues with your electric fireplace, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power to the unit; Power switch off; Overheating protection activated.	Ensure unit is plugged into a working 120V outlet. Check if the main power switch is on. Unplug, wait 10 minutes, then plug back in if overheating protection was triggered.
No heat output.	Heater function not activated; Temperature setting too low; Air vents blocked.	Press the Heat button. Increase the desired temperature setting. Check and clear any obstructions from air vents.
Flames are not visible or dim.	Flame effect turned off; Brightness setting too low.	Press the Flame button to activate. Increase the brightness level using the Brightness button.
Remote control not working.	Batteries dead or incorrectly inserted; Obstruction between remote and unit.	Replace batteries. Ensure line of sight between remote and fireplace sensor.
Heater runs continuously, does not shut off at set temperature.	Thermostat malfunction; Room temperature not reaching set point.	Ensure the room is adequately insulated. If the issue persists, contact customer support for assistance.

7. SPECIFICATIONS

Feature	Specification
Brand	BELLEZE
Model Name	ZF42D03F-G1 (050-HA-50042)
Product Dimensions	4.2"D x 42"W x 16"H
Power Source	Corded Electric
Heat Output	120 Volts, 1400 Watts
Heating Coverage	Up to 400 square feet
Material	Metal, Tempered Glass
Finish Type	Powder Coated
Installation Type	Recessed & Wall Mounted
Special Feature	Infrared, Adjustable Flame, Timer, Touch Screen
Color	Black
Room Type	Living Room
Ventilation Type	Vent Free
Included Components	Remote Control
Item Weight	27.3 Pounds
Burner Type	Quartz
UPC	192928035629

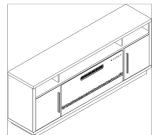



8. WARRANTY & SUPPORT

Warranty Information:

This BELLEZE electric fireplace heater comes with a **1 Year Limited Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact BELLEZE customer support. Refer to the contact information provided with your purchase or visit the official BELLEZE website for support details.

 <p>Avenue Fireplace Entertainment Center</p> <p>BELLEZE ELEGANTLY MODERN AT HOME</p> <p><small>FOLLOW US: Facebook Instagram CONTACT INFO: ITEM NO. 014-HG-41897 SPECIFICATIONS WARRANTY ASSEMBLY</small></p>	<p><u>Avenue Fireplace Entertainment Center Assembly Instructions</u></p> <p>Assembly and care guide for the BELLEZE Avenue Fireplace Entertainment Center, including parts list, assembly steps, and maintenance recommendations.</p>
 <p>Astorga 58" TV Stand w/ Fireplace <small>ITEM NO. 014-HG-41830-HT</small></p> <p>BELLEZE ELEGANTLY MODERN AT HOME</p> <p><small>FOLLOW US: Facebook Instagram CONTACT INFO: ITEM NO. 014-HG-41830-HT SPECIFICATIONS WARRANTY ASSEMBLY</small></p>	<p><u>Astorga 58" TV Stand with Fireplace - BELLEZE Assembly Instructions & Care Guide</u></p> <p>Detailed assembly instructions, parts list, hardware guide, and care instructions for the BELLEZE Astorga 58" TV Stand with Fireplace (Model 014-HG-41830-HT). Includes safety warnings and warranty information.</p>
 <p>Norrell TV Stand w/ Fireplace</p> <p>BELLEZE ELEGANTLY MODERN AT HOME</p> <p><small>FOLLOW US: Facebook Instagram CONTACT INFO: ITEM NO. 014-HG-41802-HT SPECIFICATIONS WARRANTY ASSEMBLY</small></p>	<p><u>Norrell TV Stand with Fireplace Assembly Instructions & Guide BELLEZE 014-HG-41802-HT</u></p> <p>Comprehensive assembly instructions, safety guidelines, and care information for the BELLEZE Norrell TV Stand with Fireplace (Model 014-HG-41802-HT). Learn how to safely build, install, and maintain your furniture.</p>
 <p>London Fireplace Entertainment Center</p> <p>BELLEZE ELEGANTLY MODERN AT HOME</p> <p><small>FOLLOW US: Facebook Instagram CONTACT INFO: ITEM NO. 014-HG-41897 SPECIFICATIONS WARRANTY ASSEMBLY</small></p>	<p><u>London Fireplace Entertainment Center Assembly Manual</u></p> <p>Assembly instructions and care guide for the BELLEZE London Fireplace Entertainment Center (Item No. 014-HG-41897). Includes parts list, hardware details, step-by-step assembly, and maintenance tips.</p>
 <p>Astorga TV Stand w/ Fireplace</p> <p>BELLEZE ELEGANTLY MODERN AT HOME</p> <p><small>FOLLOW US: Facebook Instagram CONTACT INFO: ITEM NO. 014-HG-41830-HT SPECIFICATIONS WARRANTY ASSEMBLY</small></p>	<p><u>Astorga TV Stand with Fireplace Assembly Instructions BELLEZE</u></p> <p>Comprehensive assembly instructions for the BELLEZE Astorga TV Stand with Fireplace (Item No. 014-HG-41830-HT). Includes parts list, hardware details, step-by-step guidance, and safety information.</p>
 <p>TV Stand w/ Fireplace</p> <p>BELLEZE ELEGANTLY MODERN AT HOME</p> <p><small>FOLLOW US: Facebook Instagram CONTACT INFO: ITEM NO. 014-HG-41897 SPECIFICATIONS WARRANTY ASSEMBLY</small></p>	<p><u>BELLEZE TV Stand with Fireplace Assembly Instructions and Care Guide</u></p> <p>Comprehensive assembly instructions, parts list, weight limits, and care guide for the BELLEZE TV Stand with Electric Fireplace. Learn how to assemble and maintain your media console safely and effectively.</p>

