

[Manuals.plus](#) /

› [Fmart](#) /

› Fmart C200 Robot Vacuum and Mop 3-in-1 User Manual

Fmart C200

Fmart C200 Robot Vacuum and Mop 3-in-1 User Manual

Model: C200

1. INTRODUCTION

Thank you for choosing the Fmart C200 Robot Vacuum and Mop. This 3-in-1 cleaning device is designed to sweep, vacuum, and mop your floors efficiently, providing a clean living environment. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your robot vacuum. Please read it thoroughly before use and keep it for future reference.

2. PACKAGE CONTENTS

Carefully unpack the box and ensure all items listed below are present and in good condition. If any items are missing or damaged, please contact Fmart customer support.

Que recevez-vous?

1. Robot aspirateur C200
2. Station de charge
3. Cordon d'alimentation
4. Réservoir d'eau + réservoir à poussière
5. Chiffon d'essuyage
6. Brosse latérale
7. Manuel de l'utilisateur
8. Un service sans souci



1

2

3

4



5

6

7

8

Image: Overview of the Fmart C200 Robot Vacuum and Mop package contents, including the robot, charging station, power adapter, dust bin/water tank, side brushes, and user manual.

- Fmart C200 Robot Vacuum (1)
- Charging Station (1)
- Power Adapter (1)
- Dust Bin + Water Tank (1)
- Mopping Cloth (1)
- Side Brushes (2 pairs)
- User Manual (1)

3. PRODUCT OVERVIEW

The Fmart C200 is a versatile cleaning robot featuring a 3-in-1 design for sweeping, vacuuming, and mopping. It is equipped with advanced sensors for navigation and obstacle avoidance.

Max Suction Power 2800Pa



Image: The Fmart C200 Robot Vacuum highlighting its 3-in-1 capabilities: 128ml water tank, 350ml dust tank, and side sweeping functionality.

Key Features:

- **Powerful Suction:** Up to 2800 Pa for effective removal of dust, debris, pet hair, and stains.
- **3-in-1 Cleaning:** Sweeps with dual side brushes, vacuums with tangle-free brushless suction, and mops with a 128ml water tank.
- **Smart Navigation:** Equipped with anti-collision and anti-drop sensors to protect furniture and prevent falls.
- **App Control:** Manage cleaning modes and power levels via the Fmart Smart app (Bluetooth connection, 2.4G WiFi required).
- **Automatic Charging:** Returns to the charging station automatically when cleaning is complete or battery is low.
- **Slim Design:** 85mm height allows cleaning under low furniture. Can cross obstacles up to 15mm.

Home Sweeping and Mopping 2-in-1

Intelligent Floor Cleaning Robot

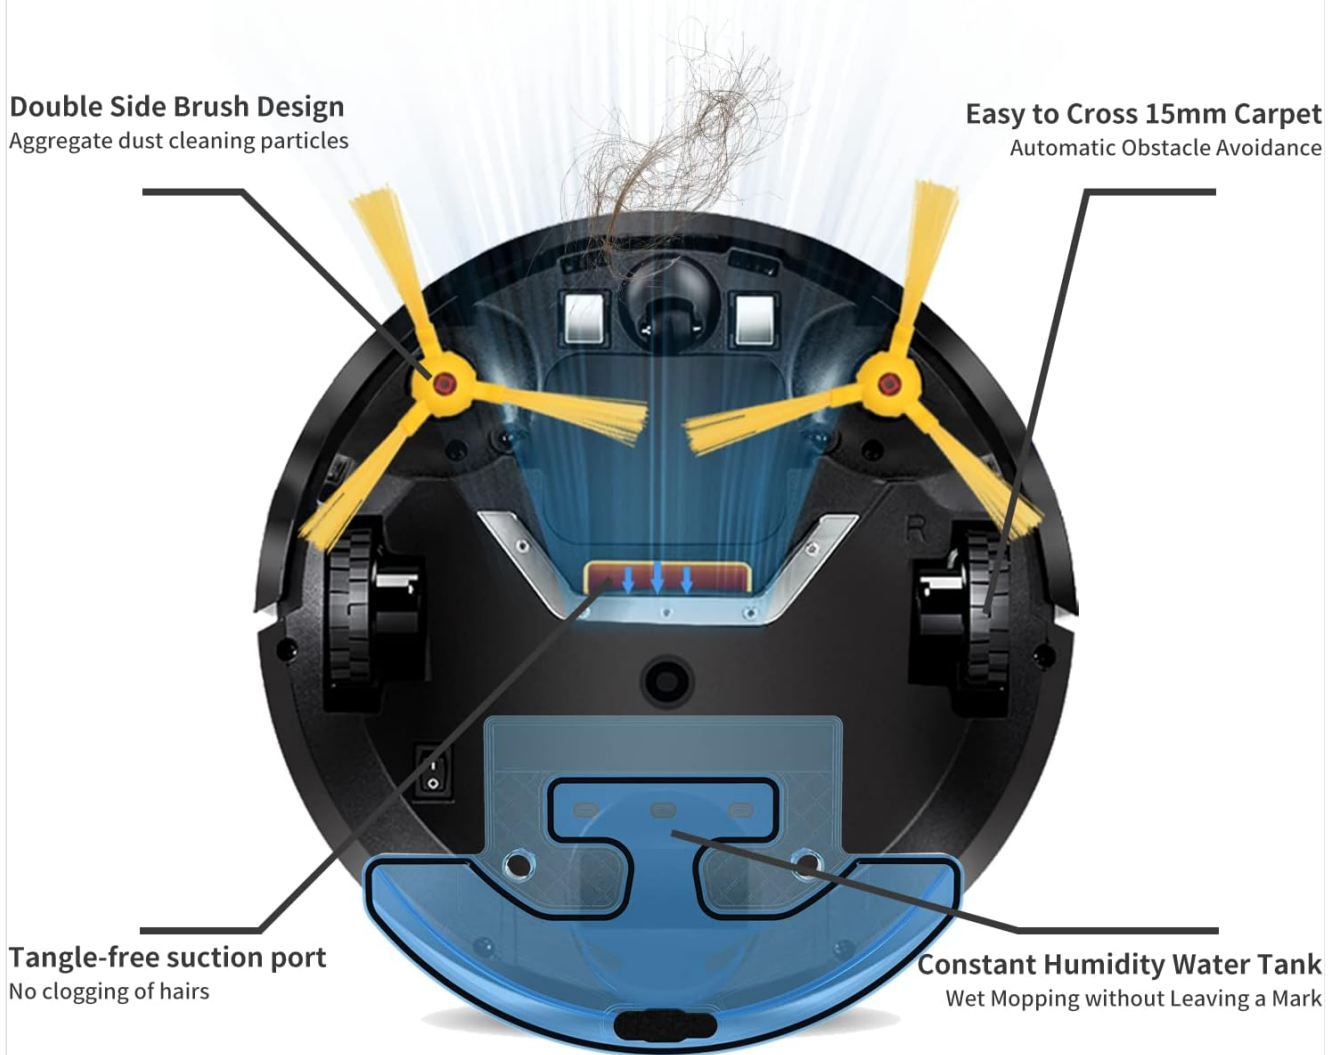


Image: The Fmart C200 Robot Vacuum demonstrating its slim 85mm design, allowing it to clean under furniture.

4. SETUP

4.1 Charging Station Placement

1. Place the charging station against a wall in an open, uncluttered area.
2. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides of the charging station and 1.5 meters (4.9 feet) in front of it.
3. Connect the power adapter to the charging station and plug the other end into a wall outlet.
4. Ensure the charging station is powered on.

4.2 Initial Charge

1. Place the robot onto the charging station, ensuring the charging contacts on the robot align with those on the station.
2. The robot will begin charging automatically. Allow it to fully charge before its first use (approximately 4-5 hours).

3. A fully charged battery provides 120-180 minutes of cleaning time.

4.3 Installing Side Brushes

1. Turn the robot over.
2. Align the side brushes with the square posts on the bottom of the robot and press them down until they click into place.

4.4 Installing Dust Bin / Water Tank

1. Open the top cover of the robot.
2. Insert the combined dust bin and water tank module into the designated slot until it clicks securely.
3. For mopping, fill the water tank with clean water before inserting.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the power button on the robot for a few seconds until the indicator light turns on.
- **Power Off:** Press and hold the power button for a few seconds until the indicator light turns off.

5.2 Starting a Cleaning Cycle

- **Manual Start:** Press the power button once to start cleaning. The robot will automatically select a cleaning mode.
- **App Control:** Download the 'Fmart Smart' app from your mobile app store. Connect your phone to the robot via Bluetooth. Ensure your home Wi-Fi is 2.4GHz for app functionality. Use the app to select specific cleaning modes (e.g., Quiet, Standard, Powerful, Max) and schedule cleaning times.



Puissance d'aspiration ultra-puissante de 2800Pa

Le robot Hoover aspire sans effort la poussière pour un nettoyage en profondeur

Quiet	Standard	Powerful	Max
600Pa	1200Pa	1800Pa	2800Pa

Image: Illustration of the Fmart C200 Robot Vacuum's four suction power levels: Quiet (600Pa), Standard (1200Pa), Powerful (1800Pa), and Max (2800Pa).

5.3 Pausing/Resuming Cleaning

During a cleaning cycle, press the power button once to pause the robot. Press it again to resume cleaning.

5.4 Automatic Charging

When the battery level is low or a cleaning cycle is complete, the robot will automatically return to the charging station to recharge. Ensure the charging station is accessible and powered on.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Fmart C200 robot vacuum.

6.1 Emptying the Dust Bin

1. Press the release button to remove the dust bin/water tank module.
2. Open the dust bin cover and empty its contents into a trash can.
3. Rinse the dust bin with water if necessary, ensuring it is completely dry before reinstallation.

6.2 Cleaning Filters

1. Remove the filters from the dust bin.
2. Tap the filters gently to remove dust. Do not wash the HEPA filter with water.
3. Replace filters every 3-6 months, depending on usage.

6.3 Cleaning Side Brushes

1. Turn the robot over and gently pull the side brushes upwards to remove them.
2. Remove any hair or debris tangled around the brushes.
3. Reinstall the side brushes by pressing them down until they click.

6.4 Cleaning Sensors

Wipe the anti-drop sensors (located on the bottom of the robot) and the anti-collision sensors (located on the front bumper) with a clean, dry cloth to ensure proper functionality.

Slimmer Design



85mm



15mm Height



3-point cleaning system



Image: The Fmart C200 Robot Vacuum demonstrating its high precision detectors for anti-collision and anti-drop functionality.

6.5 Cleaning the Water Tank and Mopping Pad

1. Remove the water tank from the robot.
2. Empty any remaining water.
3. Detach the mopping pad and wash it with water. Allow it to air dry completely before reattaching.

7. TROUBLESHOOTING

If you encounter any issues with your Fmart C200, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not power on	Low battery; Power button not pressed correctly	Charge the robot; Press and hold the power button for a few seconds.

Problem	Possible Cause	Solution
Robot does not charge	Charging contacts not aligned; Charging station not powered	Ensure robot is properly docked; Check power connection to charging station.
Robot gets stuck frequently	Obstacles in cleaning path; Dirty sensors	Clear cables, rugs, and small objects; Clean all sensors.
Poor cleaning performance	Full dust bin; Clogged filters; Worn side brushes	Empty dust bin; Clean/replace filters; Clean/replace side brushes.
Mopping function not working	Empty water tank; Clogged water outlet	Fill water tank; Clean water tank and mopping pad.
App connection issues	Bluetooth not enabled; Incorrect Wi-Fi band (requires 2.4GHz)	Ensure Bluetooth is on; Connect to a 2.4GHz Wi-Fi network.

If the problem persists, please contact Fmart customer support for assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	Fmart
Model Name	C200
Model Number	C200-WT
Suction Power	Up to 2800 Pa
Battery Life	120-180 minutes
Battery Type	Lithium-ion
Dust Bin Capacity	350 ml
Water Tank Capacity	128 ml
Filter Type	Fabric, Cartridge
Robot Height	85 mm
Obstacle Crossing Ability	Up to 15 mm
Control Type	App Control (Bluetooth, 2.4GHz Wi-Fi)
Item Weight	3.35 Kilograms
Package Dimensions	46.9 x 35 x 13.6 cm

9. WARRANTY AND SUPPORT

Fmart provides a standard warranty for this product. Please refer to the warranty card included in your package or visit the official Fmart website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or spare parts, please contact Fmart customer service through the contact information provided in your product documentation or on the official Fmart website.