Earto ET-171-BK-JP-N

Earto Bluetooth Keyboard Case with Touchpad Instruction Manual

Model: ET-171-BK-JP-N

1. Introduction

This manual provides comprehensive instructions for the Earto Bluetooth Keyboard Case with Touchpad. This product is designed to enhance the functionality of your iPad, offering a comfortable typing experience and precise navigation. Please read this manual thoroughly before use to ensure proper operation and to maximize the product's lifespan.

This keyboard case is compatible with:

- iPad 10th Generation (2022 models: A2696, A2757, A2777)
- iPad 11th Generation (2025 models: A3354, A3355, A3356)



Image 1.1: Earto Bluetooth Keyboard Case with an iPad inserted, showcasing the product's design and functionality.

2. Product Overview

Key Features:

- **Bluetooth 5.1 Connectivity:** Provides stable and fast data transfer within a 10-meter range.
- **Multi-Device Pairing:** Connects to two Bluetooth devices simultaneously, allowing seamless switching between your iPad and iPhone with a single button press.
- **Integrated Touchpad:** Supports iPadOS trackpad gestures for enhanced navigation and productivity, facilitating document editing, app operation, and presentation creation. Requires iPadOS 13.4 or later.
- **JIS Japanese Layout Keyboard:** Features a standard Japanese layout with support for both Kana and English input, including 12 multimedia keys for convenient control.
- **Detachable Design:** The keyboard can be easily detached from the case, offering flexibility. Strong magnets ensure

secure attachment when in use.

- **Apple Pencil Holder:** Includes a dedicated holder and adapter slot for secure storage and portability of your Apple Pencil.
- **Adjustable Viewing Angles:** The case allows for multiple viewing angles (120°, 125°, 130°) to suit various tasks and environments.
- **Type-C Charging:** Conveniently charges via a Type-C port with the included cable.
- **Long Battery Life:** A 280mAh battery provides approximately 70 hours of continuous use and 150 days of standby time after a 2-3 hour charge.



Image 2.1: Visual representation of compatible iPad models, including the 10th and 11th generations with their respective model numbers.



Image 2.2: Illustration of various touchpad gestures supported, such as drag, scroll, swipe, zoom, secondary click, show desktop, app switching, and full-screen app swipe.

3. Setup

3.1 Charging the Keyboard

1. Locate the Type-C charging port on the keyboard.
2. Connect the included Type-C cable to the keyboard's charging port and the other end to a USB power adapter (not included).

3. The charging indicator light will illuminate. A full charge typically takes 2-3 hours.
4. Once fully charged, the indicator light will change or turn off, depending on the model.

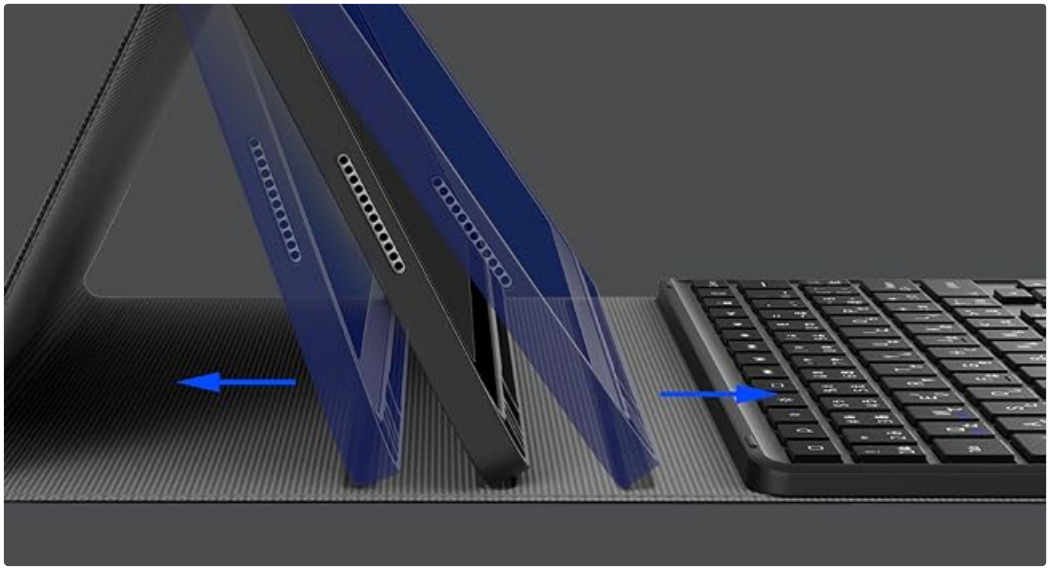


Image 3.1: Close-up view of the keyboard's Type-C charging port and cable connection.

3.2 Bluetooth Pairing

1. Ensure the keyboard is charged and powered on. The power switch is usually located on the side or back of the keyboard.
2. On your iPad, go to **Settings** > **Bluetooth** and turn Bluetooth on.
3. Press the **Fn + C** keys on the keyboard simultaneously to enter pairing mode. The Bluetooth indicator light will flash.
4. On your iPad, look for "Bluetooth Keyboard" or a similar name in the list of available devices and tap to connect.
5. Once connected, the Bluetooth indicator light on the keyboard will stop flashing.

3.3 Multi-Device Pairing (Optional)

This keyboard supports connecting to two devices. To pair a second device (e.g., an iPhone):

1. After pairing the first device (iPad) using the steps above, press **Fn + 1** or **Fn + 2** to switch to an unused Bluetooth channel.
2. Repeat steps 2-4 from "3.2 Bluetooth Pairing" for your second device.
3. To switch between paired devices, simply press **Fn + 1** (for device 1) or **Fn + 2** (for device 2).



Image 3.2: Close-up of the keyboard highlighting the keys used for Bluetooth channel switching (BT1 and BT2).

4. Operating Instructions

4.1 Using the Keyboard

- The keyboard features a JIS standard Japanese layout, supporting both Kana and English input.
- Utilize the 12 multimedia keys for quick access to functions like volume control, media playback, and screen brightness.
- The scissor-switch key structure provides a comfortable and responsive typing experience with 1.5mm keystroke travel.



Image 4.1: Diagram illustrating the scissor-switch mechanism beneath a keyboard key, designed for smooth and responsive typing.

4.2 Using the Touchpad

Ensure your iPad is updated to iPadOS 13.4 or later for full touchpad functionality. The touchpad supports various multi-touch gestures to navigate your iPad.

- **Single Finger:** Tap to click, drag to move items.
- **Two Fingers:** Pinch to zoom, scroll up/down/left/right.
- **Three Fingers:** Swipe up to go to the Home screen, swipe up and hold to view all open apps, swipe left/right to switch between apps.
- **Four Fingers:** Swipe up to show the Dock, swipe down to show Control Center.

4.3 Adjusting Viewing Angles

The case allows for three adjustable viewing angles to optimize your experience for typing, viewing, or drawing.

- The case can be set to approximately 120°, 125°, or 130° angles.
- Gently adjust the iPad's position within the case to achieve the desired angle.



Image 4.2: Depiction of the iPad case adjusted to different viewing angles, illustrating its versatility for various uses.



Image 4.3: Close-up view demonstrating how the iPad can be positioned at different angles within the case for optimal viewing and typing.

5. Maintenance

- Keep the keyboard and case clean by wiping with a soft, dry cloth.
- Avoid exposing the product to extreme temperatures, direct sunlight, or moisture.
- Do not use harsh chemicals or abrasive cleaners.
- Store the keyboard and case in a cool, dry place when not in use for extended periods.
- Ensure the Apple Pencil is securely placed in its holder to prevent loss or damage.



Image 5.1: View of the integrated Apple Pencil holder, demonstrating secure storage within the case.

6. Troubleshooting

6.1 Keyboard Not Responding

- **Check Power:** Ensure the keyboard is powered on and has sufficient battery charge. Recharge if necessary.
- **Re-establish Connection:** Turn off the keyboard, then turn it back on. On your iPad, turn Bluetooth off and then on again. Re-attempt pairing.

- **Power Saving Mode:** The keyboard enters power-saving mode after 10 minutes of inactivity. Press any key and wait 2-3 seconds for it to reactivate.
- **Forget Device:** On your iPad, go to Bluetooth settings, tap the "i" icon next to the keyboard's name, and select "Forget This Device." Then, re-pair the keyboard.

6.2 Touchpad Not Working

- **iPadOS Version:** Ensure your iPad is running iPadOS 13.4 or later.
- **Bluetooth Connection:** Confirm the keyboard is properly connected via Bluetooth.
- **Restart iPad:** Sometimes a simple restart of your iPad can resolve minor software glitches.

6.3 Keys Not Typing Correctly (e.g., double characters, wrong characters)

- **Check Language Settings:** Ensure your iPad's keyboard language settings match the physical keyboard layout (JIS Japanese). Go to **Settings** > **General** > **Keyboard** > **Hardware Keyboard** and select the correct layout.
- **Clean Keys:** Dust or debris under the keys can cause issues. Gently clean around the affected keys.
- **Reset Connection:** Disconnect and re-pair the keyboard as described in section 6.1.

7. Specifications

Feature	Detail
Model Number	ET-171-BK-JP-N
Brand	Earto
Connectivity Technology	Bluetooth 5.1
Keyboard Description	Wireless
Special Feature	Lightweight, Detachable, Touchpad, Multi-pairing
Compatible Devices	iPad 10th Generation (2022), iPad 11th Generation (2025)
Keyboard Layout	JIS QWERTY (Japanese Standard)
Switch Type	Tactile (Scissor-switch)
Included Components	USB Type-C Cable
Battery	1 Lithium Polymer battery (included)
Battery Capacity	280mAh
Charging Port	Type-C
Dimensions	26.8 x 21.6 x 3.3 cm
Weight	770 g

8. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact Earto customer service directly. Contact details are typically available on the manufacturer's official website or through the retailer where the product was purchased.

© 2025 Earto. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question