

[Manuals.plus](#) /

› [HEXIEDEN](#) /

› HEXIEDEN Wireless Dog Fence & Electric Training Collar 2-in-1 User Manual (Model: B0BR41MX7V)

HEXIEDEN B0BR41MX7V

HEXIEDEN Wireless Dog Fence & Electric Training Collar 2-in-1 User Manual

Model: B0BR41MX7V

1. PRODUCT OVERVIEW

The HEXIEDEN Wireless Dog Fence and Electric Training Collar system provides a reliable and safe solution for pet containment and training. This 2-in-1 system eliminates the need for physical wiring, allowing you to establish a safe activity area for your dog with ease. The system features an adjustable range, waterproof rechargeable collars, and offers both tone and static correction to guide your pet back to the designated safe zone.

The transmitter acts as the central unit, creating a circular boundary. If your dog ventures beyond this boundary, the receiver collar will first issue a warning tone, followed by a static stimulation, encouraging your dog to return to the safe area. The system supports an unlimited number of receiver collars simultaneously.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Transmitter
- 1 x Collar Receiver (for the 'for1dog' variant, 2 for 'for2dogs', etc.)
- 1 x Adjustable TPU Belt
- 1 x Charger
- 1 x Metal Contact Probe
- 1 x Test Light Tool
- 4 x Screws
- 1 x User's Manual

Wireless Electric Dog Fence



Wireless Electric Dog Fence will customize a cordless radial shaped boundary with adjustable 100 levels from 82 to 1640 feet in radius.



Image: Overview of the HEXIEDEN Wireless Dog Fence system components, including the transmitter, receiver collar, and accessories.

3. PRODUCT COMPONENTS AND FEATURES


3.1 Transmitter

- **LCD Display:** Visually shows the current signal strength level.
- **Adjustable Signal Strength:** Levels 0-100, corresponding to a receiver distance of 20-500 meters (65-1640 feet) radius.
- **Wall Mount:** Designed for easy installation.
- **Power Indicator:** Shows power status.
- **Power Adjustment Buttons (MIN/MAX):** For setting the boundary range.
- **ON/OFF Button:** To power the unit on or off.



Support 3 Dogs at The Same Time

Adjustable Sound, Vibration and Shock from Level 1-6, to fit various sizes of dogs.

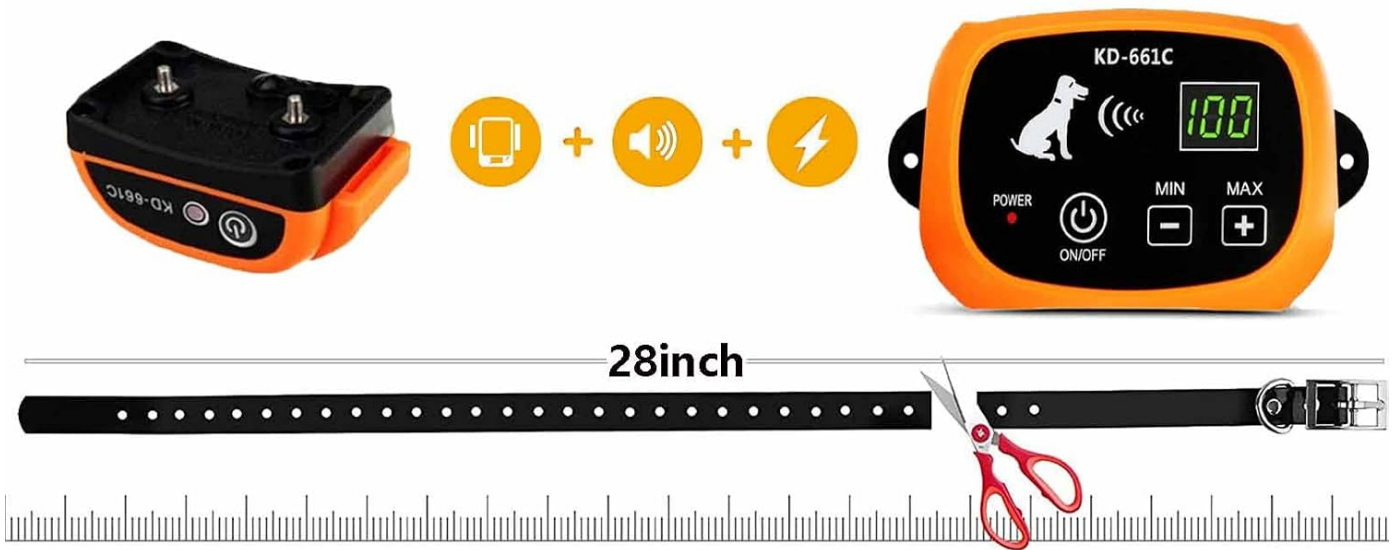

Adjustable Collar, Suitable for All Size of Dogs The extra part of TPU collar is cuttable



Image: Detailed view of the transmitter unit, highlighting the LCD display, power button, power indicator, and range adjustment buttons.

3.2 Receiver Collar

- **Waterproof Design:** Suitable for various outdoor conditions (IP67 water resistant).
- **Rechargeable Battery:** Lithium battery (300mA) with approximately 12 hours standby time and 8-9 hours normal use.
- **Auto Sleep Function:** Conserves battery life.
- **Shock Contacts:** Deliver static correction.
- **Charging Port:** With a water-resistant cover.
- **LED Indication:** For status and pairing.
- **Adjustable TPU Belt:** Fits dogs 8 pounds and up, with neck sizes from 6 to 26 inches. The extra part of the TPU collar is cuttable.



Image: A dog wearing the receiver collar, demonstrating its IP67 water-resistant feature in a wet environment.



Image: Close-up view of the receiver collar, showing the charging port with its water-resistant cover, shock contacts, and ON/OFF button.

4. SETUP INSTRUCTIONS

4.1 Transmitter Placement

Install the transmitter approximately 1.5 meters (5 feet) above the ground. Ensure there are no metal walls or large metal objects nearby that could interfere with the wireless signal and affect the remote control distance.

4.2 Pairing the Receiver Collar with the Transmitter

1. First, power on the transmitter unit.
2. Next, power on the receiver collar.
3. On the transmitter, briefly press the power button. The transmitter will enter pairing mode, indicated by "1dp" flashing on the digital display. This pairing state lasts for 7 seconds.
4. Immediately after, press the power button on the receiver collar. The receiver will also enter pairing mode.
5. A successful pairing is indicated by a long red light on the receiver, followed by a "b" sound and a single flash of the blue light.



CAN BE PAIRED OFF WITH 1/2/3 RECEIVERS.

There are 3 signal channels on the remote transmitter, and it can control 1, 2 or 3 receivers of the same mode.



Image: Illustration showing the pairing process between the transmitter and multiple receiver collars, indicating support for 1, 2, or 3 receivers.

4.3 Adjusting Wireless Fence Coverage

The wireless fence coverage can be adjusted from Level 1 to 100 using the MIN/MAX buttons on the transmitter. The maximum setting provides a radius of up to 500 meters (1640 feet).

Important: Before connecting the receiver and transmitter, ensure you do not touch the two metal contact screws on the collar. It is recommended to fasten the test light tool onto the two pins before powering on the system. If the test light illuminates, avoid touching the electric screws to prevent accidental static shock.

5. OPERATING INSTRUCTIONS

5.1 How the System Works

Once the system is set up and the boundary is defined, your dog can move freely within the designated safe area. If your dog crosses the set boundary:

1. The receiver collar will first emit a warning tone.
2. If the dog continues to move beyond the boundary, the collar will then deliver a static stimulation.
3. The tone and static correction will continue until your dog returns to the safe zone.

This training function helps to remind your dog to stay within the established safe area.



Image: A dog wearing the HEXIEDEN receiver collar, demonstrating the product in an outdoor setting, implying its use for containment.



Image: The receiver collar shown on various dogs in different outdoor environments such as camping, beach, park, and garden, highlighting its versatility.

6. MAINTENANCE

6.1 Charging the Receiver Collar

The receiver collar is equipped with a rechargeable lithium battery. When fully charged, it offers approximately 12 hours of standby time and 8-9 hours of normal operation. Use the provided charger to recharge the collar. Ensure the water-resistant cover for the charging port is securely closed after charging to maintain its waterproof integrity.

6.2 Cleaning

Regularly inspect and clean the receiver collar and contact points to ensure proper function and hygiene for your pet. Use a damp cloth to wipe down the surfaces. Avoid using harsh chemicals.

7. TROUBLESHOOTING

- **Intermittent Operation:** A low battery in the receiver collar can cause inconsistent performance. Ensure the collar is fully charged.

- **No Correction/Signal:**
 - Verify the transmitter is powered on and functioning.
 - Check the signal strength setting on the transmitter.
 - Ensure the transmitter is installed correctly, away from metal obstructions, and approximately 1.5 meters from the ground.
 - Re-pair the receiver collar with the transmitter if necessary (refer to Section 4.2).
- **Collar Not Responding:** Ensure the receiver collar is powered on and fully charged. Check if the contact points are making proper contact with your dog's skin.

8. SAFETY WARNINGS AND IMPORTANT INFORMATION

- Always power off the receiver collar before disconnecting the transmitter power.
- Do not leave the collar on your dog for more than 12 hours per day to prevent skin irritation.
- Never perform setup procedures or adjustments while the collar is on your dog.
- Keep the receiver collar and all components away from children.
- Do not use the system if you suspect a low battery, as it can lead to unreliable operation.
- The static mode of the collar is designed to be safe and harmless to your pet when used correctly.
- Ensure the metal contact probes are appropriate for your dog's coat length to ensure effective contact.

9. SPECIFICATIONS

Feature	Detail
Product Name	Wireless Pet Fence & Electric Training Collar
Model Number	B0BR41MX7V
Brand	HEXIEDEN
Transmitter Dimensions	14.0 x 8.5 x 3.2 CM (5.5 x 3.3 x 1.3 inches)
Receiver Dimensions	6.5 x 3.9 x 3.2 CM (2.6 x 1.5 x 1.3 inches)
Max Remote Control Radius	500 meters (1640 feet)
Signal Strength Adjustment	0-100 steps
Receiver Battery	300mA Lithium, Rechargeable
Receiver Standby Time	Approx. 12 hours
Receiver Normal Use Time	Approx. 8-9 hours
Water Resistance	IP67 (Receiver Collar)
Collar Fit	Dogs 8 lbs and up, neck sizes 6-26 inches



Image: Diagram showing the dimensions of both the transmitter and the receiver collar in centimeters.

10. CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your HEXIEDEN Wireless Dog Fence and Electric Training Collar, please refer to the contact information provided with your purchase or visit the manufacturer's official website.

© 2023 HEXIEDEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question