Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SIMPLIFIRE /
- > SimpliFire Electric Fireplace Insert, 32-Inch, Model GI-32-ZC Instruction Manual

SIMPLIFIRE GI-32-ZC

Simplifire Electric Fireplace Insert, 32-Inch, Model GI-32-ZC Instruction Manual

Brand: SIMPLIFIRE | Model: GI-32-ZC

1. Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your SimpliFire 32-Inch Electric Fireplace Insert, Model GI-32-ZC. Please read all instructions carefully before use to ensure proper function and safety.

The SimpliFire Electric Fireplace Insert offers the following key features:

- Installation into a wood fireplace opening with a surround kit or any framed opening with the self-trimming design.
- Quick room warming with a 1,500W heater.
- Year-round ambiance with or without heat, featuring authentic logs, glowing embers, and a beautiful flame
 effect.
- · Easy plug-in operation with an attached cord.



A front view of the SimpliFire 32-inch electric fireplace insert, showcasing the textured logs, glowing embers, and flame effect. A remote control is visible in the foreground.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before installing or operating this electric fireplace insert. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Read all instructions before installing or using this fireplace.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned, been dropped, or damaged in any manner.
- Do not run the power cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas to prevent tripping hazards.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace.
- Extreme caution is necessary when any heater is used by or near children or individuals with reduced physical, sensory, or mental capabilities, and whenever the fireplace is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an

electric shock or fire, or damage the heater.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This fireplace has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this fireplace only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

3. SETUP AND INSTALLATION

3.1 Measuring Your Existing Fireplace Opening

Accurate measurements of your existing fireplace opening are crucial to ensure proper fit for the SimpliFire Electric Fireplace Insert. Refer to the diagram and table below for required dimensions.



This diagram illustrates the key dimensions to measure for your existing fireplace opening: Rear Width, Height, Depth, and Front Width. It also shows how a surround fits around the insert.

Fireplace Opening Dimensions for Model GI-32-ZC

Model	Front Width	Rear Width	Height	Depth
GI-32-ZC	29-1/8 in. (740 mm)	24 in. (610 mm)	19-3/4 in. (502 mm)	8-3/4 in. (222 mm)

3.2 Selecting a Surround (Optional)

A surround kit can be used to fill any gaps between the fireplace insert and your existing fireplace opening, providing a finished look. Two sizes are available: Small (IS-36-Gl32) and Large (IS-42-Gl32). Refer to the diagram above for visual guidance on surround fitment.

Surround Kit Dimensions

Model	Surround SKU	Width W	3-Sided H1	4-Sided H2	Depth	x	Y1	Y2
GI-32- ZC	SMALL IS- 36-GI32	36-1/2 in. (927 mm)	27-1/4 in. (692 mm)	31-1/4 in. (794 mm)	13/16 in. (20 mm)	2-1/2 in. (64 mm)	6-1/2 in. (165 mm)	4 in. (102 mm)
	LARGE IS-42- GI32	42-1/2 in. (1080 mm)	28-3/4 in. (730 mm)	32-3/4 in. (832 mm)	13/16 in. (20 mm)	5-1/2 in. (140 mm)	8-1/2 in. (205 mm)	4 in. (102 mm)

3.3 Electrical Connection

The SimpliFire Electric Fireplace Insert operates on a standard 120V AC household circuit. Ensure the electrical outlet is properly grounded. The fireplace comes with an attached 72-inch 110V plug-in cord for convenient installation.



An image showing the SimpliFire electric fireplace insert seamlessly integrated into a stone fireplace in a modern living room, demonstrating its built-in appearance.

4. OPERATING INSTRUCTIONS

4.1 Remote Control Functions

The SimpliFire Electric Fireplace Insert can be operated using the included multifunction remote control. The remote requires 2x AAA batteries (included) and has a coverage range of up to 13 feet.

Choose Your Look

Surround Sizes





Expanded Compatibility Remove Bottom Panel for 3-Sided Configuration



Front



Standard Front Included






See Brochure, Owner's Manual & Install Guide, Watch our Videos and Visit our Brand Store to Learn More

This image displays the remote control and explains the function of each button.

- Power Button: Turns the fireplace unit on or off.
- Flame Button: Activates or deactivates the flame effect.
- Ember Light Button: Adjusts the ember bed lighting.
- Accent Light Button: Controls the accent lighting feature.
- Heater Button: Press once for the low heat setting. Press twice for the high heat setting (1500W).

4.2 Manual Controls

In addition to the remote, the unit features manual controls located on the fireplace itself. These include a main power switch, a flame button, a heater button, and a thermostat knob for direct control.

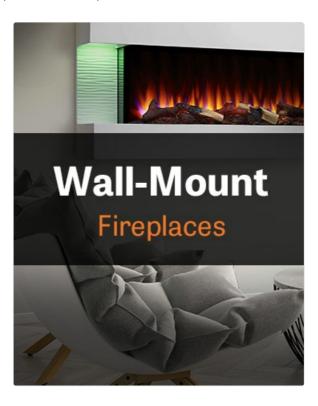

5. MAINTENANCE

5.1 General Maintenance

The SimpliFire Electric Fireplace Insert is designed for low maintenance. Regular care will ensure optimal performance and longevity.

- **Cleaning:** Ensure the unit is turned off and unplugged before cleaning. Use a soft, damp cloth to clean surfaces. Do not use abrasive cleaners or harsh chemicals.
- **Ventilation:** Periodically check and keep the air intake and exhaust vents clear of dust and debris to ensure proper airflow and prevent overheating.
- **Light Bulbs:** The unit utilizes energy-efficient LED lighting, which typically does not require replacement under normal operating conditions.
- **Cord Inspection:** Regularly inspect the power cord for any signs of damage, fraying, or overheating. If any damage is observed, discontinue use immediately and contact customer support.

6. SPECIFICATIONS

Product Specifications for Model GI-32-ZC

Feature	Detail
Brand	SIMPLIFIRE
Model Name	SimpliFire Electric Fireplace Insert
Model Number	GI-32-ZC
Power Source	Corded Electric
Product Dimensions (D x W x H)	8"D x 28.13"W x 19"H
Material	Metal
Finish Type	Painted
Installation Type	Framed Opening or Wood Fireplace
Heat Output	1500 Watts
Special Feature	Corded
Style	Contemporary
Color	Black
Room Type	Home Office, Living Room, finished basement
Ventilation Type	Vent Free
Heating Coverage	400 square feet

Feature	Detail
Included Components	Remote Control
Specific Uses For Product	Indoor
Item Weight	37 Pounds
Shape	Rectangular
Power Consumption	1500 Watts
Warranty Type	Limited
Burner Type	Quartz
UPC	652174090730

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This SimpliFire Electric Fireplace Insert comes with a Limited Warranty. Please refer to the warranty documentation included with your purchase for specific terms, conditions, and duration of coverage.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact SIMPLIFIRE customer support. Visit the official SIMPLIFIRE website or their Amazon store for contact information and additional resources.

Visit the SIMPLIFIRE Store on Amazon

Related Documents - GI-32-ZC



SimpliFire GI-32-ZC Electric Fireplace Owner's Manual: Installation and Operation

This owner's manual provides comprehensive instructions for the SimpliFire GI-32-ZC 32-inch electric fireplace insert, covering installation, operation, safety guidelines, maintenance, and troubleshooting. Learn how to safely install and operate your SimpliFire electric fireplace for optimal performance and comfort.



SimpliFire Electric Fireplaces: Product Guide and Features

Explore the comprehensive range of SimpliFire electric fireplaces, including models like Triton, Scion, Allusion Edge, Allusion Platinum, Allusion Slim, Format, Forum, and Inception. Discover features, customization options, media choices, installation guidance, and technical specifications for creating a warm and stylish home environment.



SimpliFire Electric Fireplaces: Comprehensive Guide to Models, Features, and Customization

Explore the full range of SimpliFire electric fireplaces. This guide details models like Triton, Scion, and Allusion, covering features, installation options, customization, and comparison charts to help you choose the perfect fireplace.






SimpliFire Electric Fireplace Guide: Features, Models, and Design Options

Explore the SimpliFire electric fireplace guide, featuring a range of models like Triton, Scion, Allusion, Format, Forum, and Inception. Discover features, installation options, and design choices for modern homes.



SimpliFire Electric Fireplace Insert SF-INS25, SF-INS30, SF-INS35 Owner's Manual and Installation Guide

Comprehensive owner's manual and installation guide for SimpliFire electric fireplace inserts, models SF-INS25, SF-INS30, and SF-INS35. Covers safety instructions, installation procedures, operation, maintenance, troubleshooting, and warranty information.



SimpliFire Allusion Edge 78" Electric Fireplace Specifications

Detailed specifications for the SimpliFire Allusion Edge 78" Slide-In Linear Electric Fireplace, including dimensions, framing requirements, electrical connections, minimum clearances, finishing guidelines, and appliance certifications.