

[Manuals.plus](#) /

> [Yakry](#) /

> Automatic Dog Feeder Easy Setup - 8L/33 Cups Large Capacity Dog Food Dispenser Battery Operated with 180-Day Life - Timed Cat Feeder Record 20s Voice Desiccant Bag for Cats and Small Medium Dogs Yakry User Manual

Yakry C5 automatic dog food dispenser

Yakry Automatic Pet Feeder User Manual

Model: C5 automatic dog food dispenser | Brand: Yakry

1. INTRODUCTION AND OVERVIEW

The Yakry Automatic Pet Feeder is designed to simplify pet feeding by providing scheduled meals with precise portion control. With an 8-liter (33-cup) large capacity, it can store a month's worth of dry food, making it ideal for busy pet owners or those traveling. This feeder supports up to 7 meals daily with 1-30 portions per meal and includes a 20-second voice recording feature to call your pet at mealtime. Its dual power supply ensures continuous operation, even during power outages.



Figure 1: Yakry Automatic Pet Feeder

2. SETUP

2.1 Unboxing and Component Check

Carefully remove all components from the packaging. Ensure you have the main feeder unit, food bowl, and power adapter. Inspect for any damage.

2.2 Power Supply Connection

The feeder can be powered by the included power adapter or 3 D-cell alkaline batteries (not included) for backup. For optimal performance, it is recommended to use both.

- Connect the power adapter to the feeder and a wall outlet.
- For battery backup, open the battery compartment at the bottom of the unit and insert 3 D-cell batteries, ensuring correct polarity.



Figure 2: Dual Power Supply and Memory Function

2.3 Assembling the Food Bowl

Attach the food bowl to the main unit by sliding it into the designated slot at the bottom front of the feeder. Ensure it is securely in place.

2.4 Filling the Food Reservoir

Open the secure lid lock on top of the feeder. Fill the reservoir with dry pet food. The feeder is designed for kibble sizes between 2-12mm (0.08-0.5 inches) to prevent clogging. Do not use kibble larger than 12mm.

Distribute the right food on time

Internal rotating paddle made of rubber



Single Shape Kibbles



Mixed Shapes Kibbles



Freeze-Dried Food

No clogging in
food size <0.5 inch

Figure 3: Secure Lid and Desiccant Box

Place the desiccant bag (if included) into the designated desiccant box under the lid to keep food fresh and free from moisture.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview

The control panel features a digital display and several buttons for programming:

- **Power Button:** Turns the unit on/off.
- **Lock/Unlock Button:** Locks or unlocks the control panel to prevent accidental changes.
- **Settings Button:** Enters programming mode for time and meal settings.
- **Record Button:** Records a voice message.
- **Play Button:** Plays the recorded voice message.
- **Plus (+) / Minus (-) Buttons:** Adjust values during programming.
- **Manual Feed Button:** Dispenses one portion of food immediately.

3.2 Setting Current Time

1. Hold the Lock/Unlock button for 3 seconds to unlock the screen.
2. Hold the Settings button for 3 seconds to enter current time setting mode.

3. Use the Plus (+) and Minus (-) buttons to set the hour, then press Settings to confirm.
4. Use the Plus (+) and Minus (-) buttons to set the minutes, then press Settings to confirm.
5. Hold the Settings button for 3 seconds to complete the current time setting.

3.3 Programming Meal Times and Portions

1. Ensure the screen is unlocked. Press the Settings button once to enter daily meal setting mode.
2. The display will show '1' for the first meal. Use Plus (+) and Minus (-) to set the desired feeding time (hour and minute), pressing Settings after each.
3. After setting the time, use Plus (+) and Minus (-) to set the portion size (1-30 portions). Press Settings to confirm.
4. Continue pressing Settings to cycle through up to 7 available meal times, repeating steps 2 and 3 for each.
5. To exit meal setting mode and return to the current time display, press the Lock/Unlock button.



Figure 4: Personalized Feeding Plan

3.4 Recording a Voice Message

You can record a 20-second voice message to call your pet at mealtime.

1. Ensure the screen is unlocked.
2. Press and hold the Record button until you hear a beep. Begin speaking your message.
3. Release the Record button when finished (up to 20 seconds).
4. Press the Play button to listen to your recorded message.

Personalized feeding plan

Regular feeding keeps pets healthy



Figure 5: Record 20s Meal Call

4. MAINTENANCE

4.1 Cleaning the Feeder

Regular cleaning is essential to prevent bacterial growth and ensure proper operation.

- Disconnect the power adapter and remove any batteries.
- Remove the food bowl and the food tank. These parts are removable and can be cleaned with water and mild soap.
- Wipe the main unit with a damp cloth. Do not submerge the main unit in water.
- Ensure all parts are completely dry before reassembling and refilling with food.

4.2 Desiccant Bag Replacement

Replace the desiccant bag every 1-2 months to maintain food freshness and prevent moisture buildup.

4.3 Kibble Size Recommendation

To avoid food jamming, ensure the kibble size is between 2-12mm (0.08-0.5 inches). Using kibble outside this range may cause the feeder to malfunction.



Figure 6: Recommended Kibble Size

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder not dispensing food.	Low battery/no power; food jammed; incorrect settings.	Check power connection/batteries. Clear any food blockages. Verify meal times and portion settings.
Food jamming.	Kibble too large; moisture in food.	Ensure kibble is 2-12mm. Replace desiccant bag. Clean food tank.
Voice recording not playing.	No message recorded; low volume.	Re-record message. Check volume settings (if applicable).
Settings not saving.	Control panel locked; power interruption.	Unlock the control panel. Ensure stable power supply. The feeder has setting memory to prevent sudden power failure.

6. SPECIFICATIONS

- **Brand:** Yakry
- **Model Name:** automatic dog feeder
- **Item Model Number:** C5 automatic dog food dispenser
- **Capacity:** 8L / 33 Cups
- **Power Supply:** DC 5V/1A adapter, 3 x D-cell batteries (backup)
- **Battery Life (backup):** Up to 180 days
- **Material:** Stainless Steel
- **Color:** White
- **Item Dimensions (LxWxH):** 8.1 x 7.8 x 14.8 inches

- **Item Weight:** 4 Pounds
- **Recommended Kibble Size:** 2-12mm
- **Max Meals per Day:** 7
- **Portions per Meal:** 1-30
- **Voice Recording:** Up to 20 seconds
- **Target Species:** Cats, Dogs, Small Animals (under 20kg)

7. WARRANTY AND SUPPORT

Yakry provides a 3-Year Replacement Service and a 30-Day Money-Back Guarantee for this automatic pet feeder. Lifetime Technical Support is also available.

For any questions or support, please contact the seller through your Amazon order history or visit the official Yakry store on Amazon.

Contacting Seller on Amazon:

1. Go to 'Your Orders' on Amazon.
2. Find the order for your Yakry Automatic Pet Feeder.
3. Click 'Get help with order' or 'Contact Seller'.

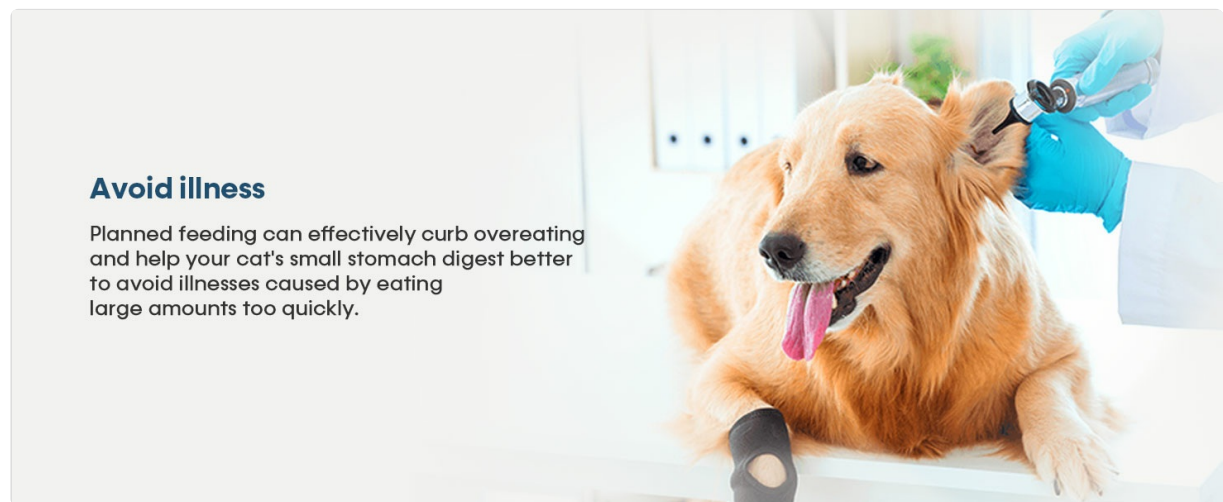


Figure 7: How to Contact Seller on Amazon