

Hbada P7

Hbada P7 Ergonomic Office Chair User Manual

Model: P701WMA-CB

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Do not stand on the chair.
- Do not use the chair as a step stool.
- Ensure all screws and bolts are tightened securely before use and check them periodically.
- Do not exceed the maximum weight capacity of 120 kg (265 lbs).
- Keep children away from moving parts during assembly.
- Use the chair only for its intended purpose.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Backrest Assembly
- Seat Cushion Assembly
- Armrests (Left & Right)
- Headrest
- Gas Lift Cylinder
- Star Base
- Casters (5 pcs)
- Mechanism Plate
- Hardware Pack (Screws, Washers, Allen Wrench)


3. SETUP INSTRUCTIONS

Follow these steps to assemble your Hbada P7 Office Chair. It is recommended to assemble the chair on a soft, clean surface to prevent damage.


1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the star base until they click securely into place.
2. **Install Gas Lift:** Place the gas lift cylinder into the center hole of the star base. Ensure it sits firmly.
3. **Attach Mechanism to Seat:** Align the mechanism plate with the screw holes on the underside of the seat cushion. Secure it with the provided screws, ensuring the front of the mechanism faces the front of the seat.
4. **Attach Armrests to Seat:** Secure the left and right armrests to the underside of the seat cushion using the designated screws. Ensure they are oriented correctly.
5. **Attach Backrest to Seat:** Align the backrest with the mounting points on the seat cushion and armrests. Secure it with the appropriate screws.
6. **Attach Headrest:** Slide the headrest into the designated slot at the top of the backrest.
7. **Connect Seat to Gas Lift:** Carefully place the assembled seat onto the gas lift cylinder, ensuring the center hole of the mechanism aligns with the top of the gas lift. Press down firmly to secure.

人間工学設計


各パーツは背骨を保護し、長時間利用でも快適にするように設計されています

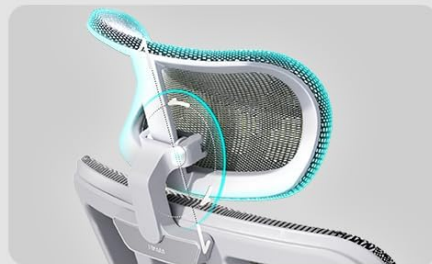

2Dヘッドレスト

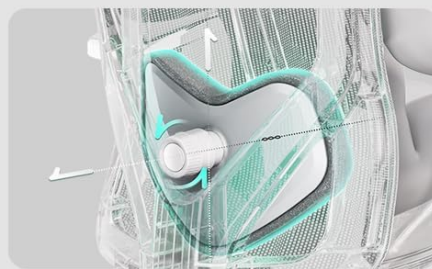

2D大面積のランバーサポート

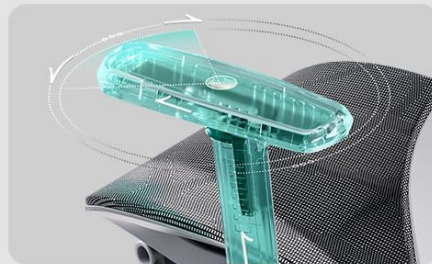

3Dアームレスト

4. OPERATING INSTRUCTIONS

Your Hbada P7 chair offers multiple adjustment features for personalized comfort.

4.1. Seat Height Adjustment

To adjust the seat height (range: 44-54 cm), pull the lever located on the right side of the seat upwards. To raise the seat, lift your weight off the chair while pulling the lever. To lower the seat, remain seated and pull the lever.

4.2. Recline Function

The chair can recline from 109° to 135°. Pull the lever on the left side of the seat outwards to unlock the recline. Lean back to your desired angle and push the lever inwards to lock the position. To return to an upright position, unlock the recline and lean forward slightly.





Image: Illustration of the chair's recline function, showing angles from 90° to 135°.

4.3. Headrest Adjustment

The headrest can be adjusted vertically by 10 cm and rotated by 40° to support your neck and head comfortably. Gently push or pull the headrest to adjust its height and angle.

3Dアームレスト

いつもオフィスシーンの異なる需要に満足します

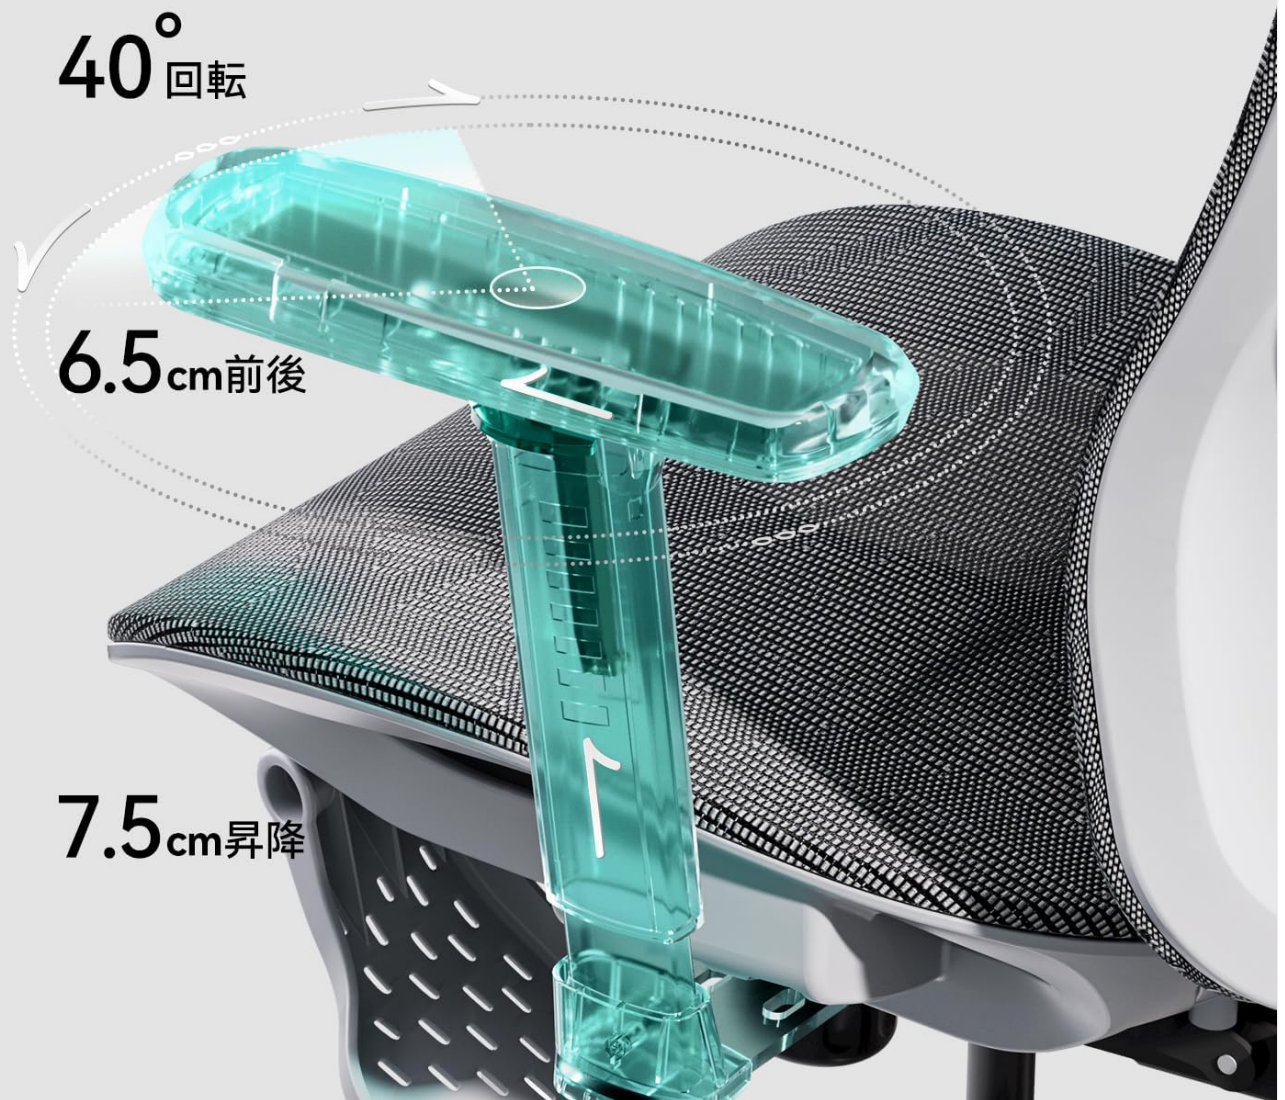


Image: Detailed view of the headrest adjustment mechanism, showing 10cm vertical travel and 40° rotation.

4.4. Lumbar Support Adjustment

The 2D lumbar support can be adjusted vertically by 4.5 cm and horizontally (front-to-back) by 4 cm to provide optimal lower back support. Use the knob or lever on the backrest to fine-tune its position.

135°リクライニング調整

背もたれの湾曲したデザインは、リラックスしながら背中によくフィットします



Image: Close-up of the lumbar support mechanism, illustrating 4.5cm vertical and 4cm horizontal adjustment.

4.5. 3D Armrest Adjustment

The armrests offer multi-directional adjustment: 7.5 cm vertical height adjustment, 6.5 cm front-to-back movement, and 40° rotation. Use the buttons or levers on the armrests to adjust them to your preferred position.



Image: Visual guide to the 3D armrest adjustments, showing vertical, horizontal, and rotational capabilities.

4.6. Swivel Function

The chair features a 360° swivel function, allowing for easy movement and access to your workspace.

5. MAINTENANCE

Regular maintenance will prolong the life and appearance of your office chair.

- **Cleaning:** For mesh fabric, gently wipe with a damp cloth and mild soap. Avoid harsh chemicals. For plastic and metal parts, wipe with a soft, dry cloth.
- **Tightening:** Periodically check all screws and bolts to ensure they are tight. Re-tighten as necessary to prevent wobbling and ensure safety.
- **Casters:** Keep casters clean from hair and debris to ensure smooth rolling.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading and material degradation.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair is wobbly	Loose screws or bolts	Check and tighten all assembly screws.
Gas lift sinks or does not hold height	Faulty gas lift cylinder	Contact customer support for a replacement gas lift.
Chair makes squeaking noises	Loose connections or friction between parts	Tighten all screws. Apply a small amount of silicone lubricant to friction points if necessary (avoiding casters).
Casters do not roll smoothly	Debris caught in casters	Remove hair, dust, or other debris from caster wheels.

7. SPECIFICATIONS



Image: Detailed dimensions of the Hbada P7 Office Chair.

Brand: Hbada

Model: P701WMA-CB

Color: White

Overall Dimensions (D x W x H): 70 cm x 70 cm x 109-129 cm (27.6" x 27.6" x 42.9"-50.8")

Seat Height Range: 44 cm - 54 cm (17.3" - 21.3")

Product Weight: 16.8 kg (37 lbs)

Maximum Weight Capacity: 120 kg (265 lbs)

Materials: High-density mesh fabric, Steel base, PU casters, Polypropylene frame

Recline Angle: 109° - 135°

Armrest Adjustments: 7.5 cm height, 6.5 cm front/back, 40° rotation

Headrest Adjustments: 10 cm height, 40° rotation

Lumbar Support Adjustments: 4.5 cm vertical, 4 cm horizontal

Swivel: 360°

8. WARRANTY AND SUPPORT

The Hbada P7 Ergonomic Office Chair comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and major component failures under normal use.

For warranty claims, replacement parts, or any other inquiries, please contact Hbada Customer Service:

Website: www.hbada.com

Email: support@hbada.com

Please have your purchase receipt and model number (P701WMA-CB) ready when contacting support.

© 2023 Hbada. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question