

[Manuals.plus](#) /

› [Orosound](#) /

› Orosound Tilde Pro On Ear Bluetooth Office Headset User Manual

Orosound Pro-S Plus

Orosound Tilde Pro On Ear Bluetooth Office Headset User Manual

Model: Pro-S Plus | Brand: Orosound

INTRODUCTION

Welcome to the user manual for your Orosound Tilde Pro On Ear Bluetooth Office Headset. This guide provides comprehensive instructions for setting up, operating, and maintaining your headset, ensuring you get the most out of its advanced features, including Active Noise Cancellation (ANC), a high-definition detachable microphone, and seamless connectivity.



Image: The Orosound Tilde Pro headset, featuring its on-ear design, integrated microphone, and a separate USB dongle for wireless connectivity.

PRODUCT OVERVIEW AND KEY FEATURES

The Orosound Tilde Pro headset is designed for professional and personal use, offering a blend of comfort, audio quality, and advanced noise management.

- **Modular Design:** Adaptable ear cushions and an optional HD microphone allow for customization and extended product life.
- **Detachable HD Noise-Canceling Microphone:** Provides superior voice quality for calls and meetings, and can be removed for personal listening.
- **Active Noise Reduction (ANC):** Adjustable noise cancellation to minimize distractions while maintaining a natural sound environment.
- **Seamless Connectivity:** Supports Bluetooth 5.0 for wireless connection to mobile phones and computers, and a USB-C to USB-A cable for wired mode.
- **Aware+ Mode:** Allows you to hear your surroundings clearly without removing the headset, activated by the Tilde Voice First button.
- **Extended Battery Life:** Up to 28 hours with ANC off, and 18 hours via Bluetooth. Quick recharge provides 50% battery in 30 minutes.
- **HD Music:** Equipped with 40mm speakers for high-definition audio playback.
- **Voice Commands:** Compatible with popular voice assistants like Siri and Google Assistant.
- **Easy Adjustments:** Intuitive controls for mute, power on/off, ANC, volume, and sidetone.

Interchangeable Parts

Detachable mic boom and interchangeable ear cushion sizes gives you a more customizable, comfortable and longer lasting headset.



***Over-ear cushions sold seperately**

Image: The Orosound Tilde Pro headset disassembled, showing the main headset unit, two interchangeable ear cushions (labeled L and R), and the detachable boom microphone. This illustrates the modular design.

Crystal Clear Calls

AI noise canceling mic and ANC reduces noise for clear conversations.



Image: A woman wearing the Orosound Tilde Pro headset with the boom microphone extended, engaged in a conversation, demonstrating the "Crystal Clear Calls" feature in an office setting.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. The box should contain the Orosound Tilde Pro headset and ear cushions.

2. Charging the Headset

Before first use, fully charge your headset. Connect the included USB-C to USB-A cable to the headset's USB-C port and the other end to a powered USB port (e.g., computer, wall adapter). The LED indicator will show charging status. A full charge provides up to 28 hours of use. A quick 30-minute charge can provide 50% battery.

3. Attaching the Detachable Microphone

The Tilde Pro features a magnetic detachable boom microphone. Align the microphone connector with the port on the

headset and gently push until it clicks into place. Ensure it is securely attached to prevent accidental detachment during use.

4. Bluetooth Pairing

1. Ensure the headset is powered off.
2. Press and hold the power button until the LED indicator flashes, indicating pairing mode.
3. On your device (mobile phone or computer), enable Bluetooth and search for "Orosound Tilde Pro" in the list of available devices.
4. Select the headset to connect. Once paired, the LED indicator will show a steady light.

5. Wired Connection

For a wired connection, simply connect the USB-C to USB-A cable from the headset to your computer. The headset will automatically switch to wired mode, allowing for audio and microphone functionality without Bluetooth.

Compatibility

Works with leading call/meeting software, and seamless connectivity to computer and mobile phone.

zoom    dialpad

TildePro 100B

Image: The Orosound Tilde Pro headset shown connected wirelessly to a laptop via a USB dongle and to a smartphone via Bluetooth,

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the power button until the LED indicator lights up.
- **To Power Off:** Press and hold the power button until the LED indicator turns off.

Active Noise Cancellation (ANC)

The Tilde Pro offers adjustable ANC to reduce ambient noise.

- **Activate/Deactivate ANC:** Use the dedicated ANC button on the headset.
- **Adjust ANC Level:** Some models or software versions may allow for adjustment of ANC intensity. Refer to the Orosound Link application for advanced settings.

Aware+ Mode (Tilde Voice First)

This feature allows you to hear your surroundings without removing the headset.

- **Activate Aware+ Mode:** Press the Tilde Voice First button on your headset.
- **Deactivate Aware+ Mode:** Press the Tilde Voice First button again.

Volume Control

Adjust the listening volume using the controls on the headset.

Microphone Mute

Mute or unmute your microphone during calls.

Easy adjustments for mute, on/off, ANC, volume and hearthrough



Image: A close-up view of the Orosound Tilde Pro headset's left earcup, highlighting the power button, LED indicator, and microphone mute button for easy adjustments.

Call Management


- **Answer/End Call:** Press the multi-function button.
- **Reject Call:** Press and hold the multi-function button.

Music Playback

- **Play/Pause:** Press the multi-function button.
- **Next Track:** Double-press the multi-function button.
- **Previous Track:** Triple-press the multi-function button.

Voice Assistant

Activate your device's voice assistant (Siri, Google Assistant) by pressing and holding the multi-function button.

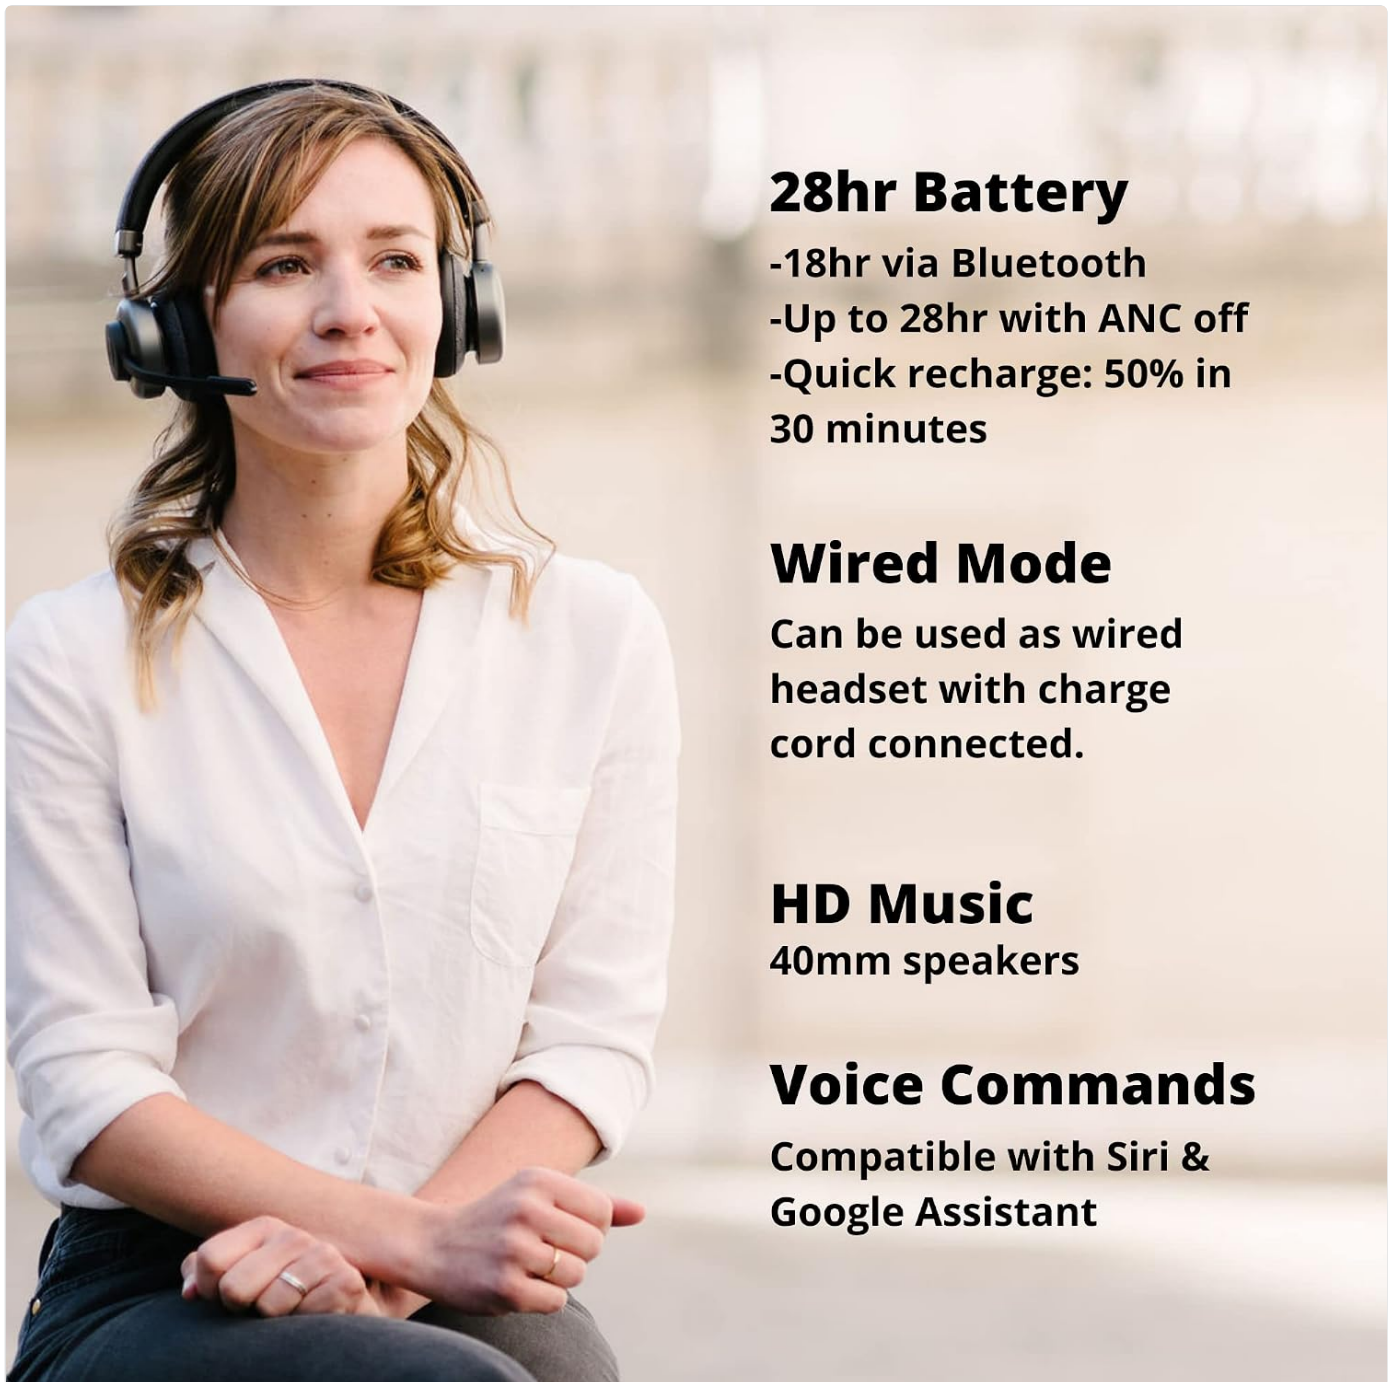

28hr Battery

- 18hr via Bluetooth
- Up to 28hr with ANC off
- Quick recharge: 50% in 30 minutes

Wired Mode

Can be used as wired headset with charge cord connected.

HD Music

40mm speakers

Voice Commands

Compatible with Siri & Google Assistant

Image: A woman wearing the Orosound Tilde Pro headset, with text overlays highlighting key features such as 28-hour battery life, wired mode capability, HD music with 40mm speakers, and compatibility with voice commands like Siri and Google Assistant.

MAINTENANCE

Cleaning

- Use a soft, dry, lint-free cloth to clean the headset surfaces.
- For ear cushions, gently wipe with a slightly damp cloth and allow to air dry completely before use. Do not use harsh chemicals or abrasive materials.
- Ensure no moisture enters the ports or speaker grilles.

Storage

Store the headset in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to preserve battery health.

Battery Care

To maximize battery lifespan, avoid fully discharging the battery frequently and avoid leaving it fully charged for prolonged periods.

Ear Cushion Replacement

The ear cushions are designed to be interchangeable. If replacement is needed, gently twist and pull the existing cushions off and align the new cushions with the headset's earcups, pressing firmly until they click into place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headset does not power on.	Low battery.	Charge the headset fully using the provided USB-C cable.
Cannot pair via Bluetooth.	Headset not in pairing mode; device Bluetooth off; interference.	Ensure headset is in pairing mode (flashing LED). Turn device Bluetooth off and on. Move closer to the device. Forget previous pairings on your device and try again.
No sound or poor audio quality.	Volume too low; incorrect audio output selected; interference; outdated drivers.	Increase headset and device volume. Select "Orosound Tilde Pro" as the audio output on your device. Reduce distance to device. Update Bluetooth drivers on your computer.
Microphone not working or poor quality.	Microphone muted; not securely attached; incorrect input selected; software issues.	Ensure microphone is not muted on headset or device. Verify the detachable microphone is securely attached. Select "Orosound Tilde Pro" as the microphone input on your device/application. Check for audible crackling and ensure Orosound Link software is updated.
Microphone boom falls off easily.	Improper attachment; magnetic connection issue.	Ensure the microphone is firmly clicked into place. Handle the headset carefully to avoid accidental dislodgement.
ANC not effective.	ANC not activated; environmental noise too high for full cancellation.	Ensure ANC is activated. The Tilde Pro's ANC is designed for natural noise reduction, not 100% blockage.

If problems persist, try resetting the headset (refer to Orosound support for specific reset procedures) or contact Orosound customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Pro-S Plus
Brand	Orosound
Noise Control	Active Noise Cancellation
Connectivity Technology	Bluetooth 5.0, USB-C Wired

Feature	Detail
Headphones Jack	USB-C Jack
Earpiece Shape	On Ear
Audio Driver Type	Dynamic Driver (40mm speakers)
Frequency Range	20 Hz - 20,000 Hz
Impedance	32 Ohm
Special Features	Detachable noise canceling mic boom, Microphone mute, USB wired headset mode, Aware+ Mode
Control Type	Media Control, Touch
Compatible Devices	Mobile Phones, Computers
Item Weight	1 pounds (approx. 16 ounces)
Product Dimensions	7 x 6 x 2 inches
Batteries	1 Lithium Ion battery (included)
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Orosound website or contact Orosound customer service directly. Keep your proof of purchase for any warranty claims.

As this product is listed as "Renewed," specific warranty terms may vary. Please consult the seller ("Renewed Headsets") or Amazon Renewed program details for their specific return and warranty policies. For product functionality and technical queries, Orosound remains the primary resource.

Manufacturer: Orosound

Model: Pro-S Plus

Date First Available: March 8, 2023

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question