

GIMILI GML80192N-LED

GIMILI Commercial Kitchen Faucet with Pull Down Sprayer

Model: GML80192N-LED

INTRODUCTION

Thank you for choosing the GIMILI Commercial Kitchen Faucet. This manual provides essential information for the safe installation, operation, and maintenance of your new faucet. Please read these instructions thoroughly before installation and retain them for future reference.

IMPORTANT SAFETY INFORMATION

- Always turn off the main water supply before beginning any installation or maintenance.
- Wear appropriate personal protective equipment, such as safety glasses, during installation.
- Ensure all connections are secure to prevent leaks. Do not overtighten.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- This faucet is designed for kitchen use only.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- GIMILI Commercial Kitchen Faucet Assembly
- Pull-down Sprayer Head
- Pot Filler Spout
- Single Handle Lever
- Soap Dispenser
- Mounting Hardware (nuts, washers, gaskets)
- Hot and Cold Water Supply Lines
- Instruction Manual (this document)

SPECIFICATIONS

Brand	GIMILI
Model Number	GML80192N-LED
Finish Type	Brushed Nickel
Material	Stainless Steel
Mounting Type	Deck Mount
Number of Handles	2 (Main handle for temperature/volume, separate controls for sprayer/pot filler)
Special Features	360° Swivel, Pull Down Sprayer, Dual Nozzles
Flow Rate	1.8 Gallons Per Minute
Valve Type	Ceramic Cartridge Valve
Overall Height	19.0 inches
Spout Reach (Pot Filler)	7.0 inches
Spout Reach (Sprayer)	9.5 inches
Certifications	CEC SUB77938, Lead-Free, NSF/DOE

The faucet is constructed from high-quality SUS 304 stainless steel, ensuring durability and resistance to rust, scratches, and fingerprints.

Peace of Mind for Every Drop

Lead-Free faucets stop lead leaching. **NSF/DOE** certified, safe for family



Image: Lead-Free and NSF/DOE certification documents for the GIMILI faucet.

INSTALLATION REQUIREMENTS

- **Mounting Hole Size:** 1.3" – 1.5" (33mm – 38mm)
- **Maximum Countertop Thickness:** 2.1" (53mm)
- **Vertical Clearance:** Ensure at least 23 inches of vertical space between the countertop and upper cabinets for proper faucet installation and operation.

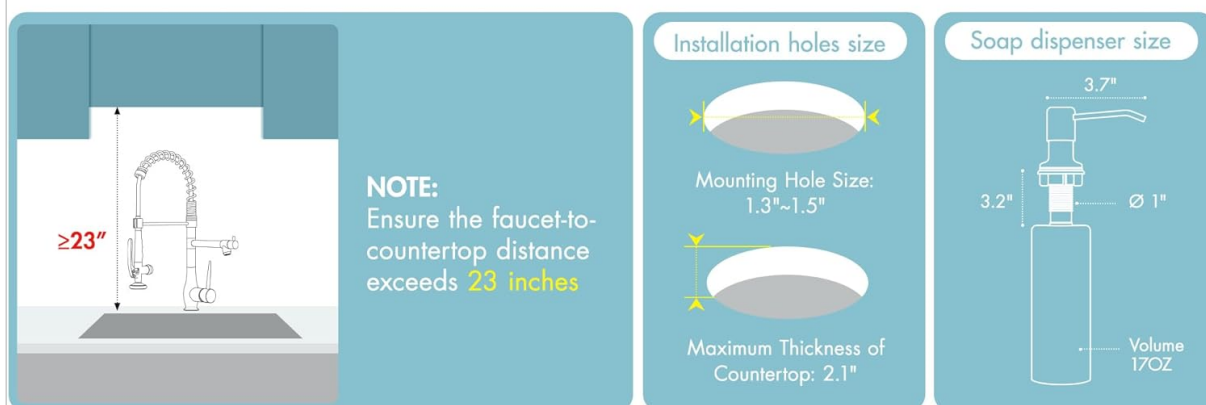
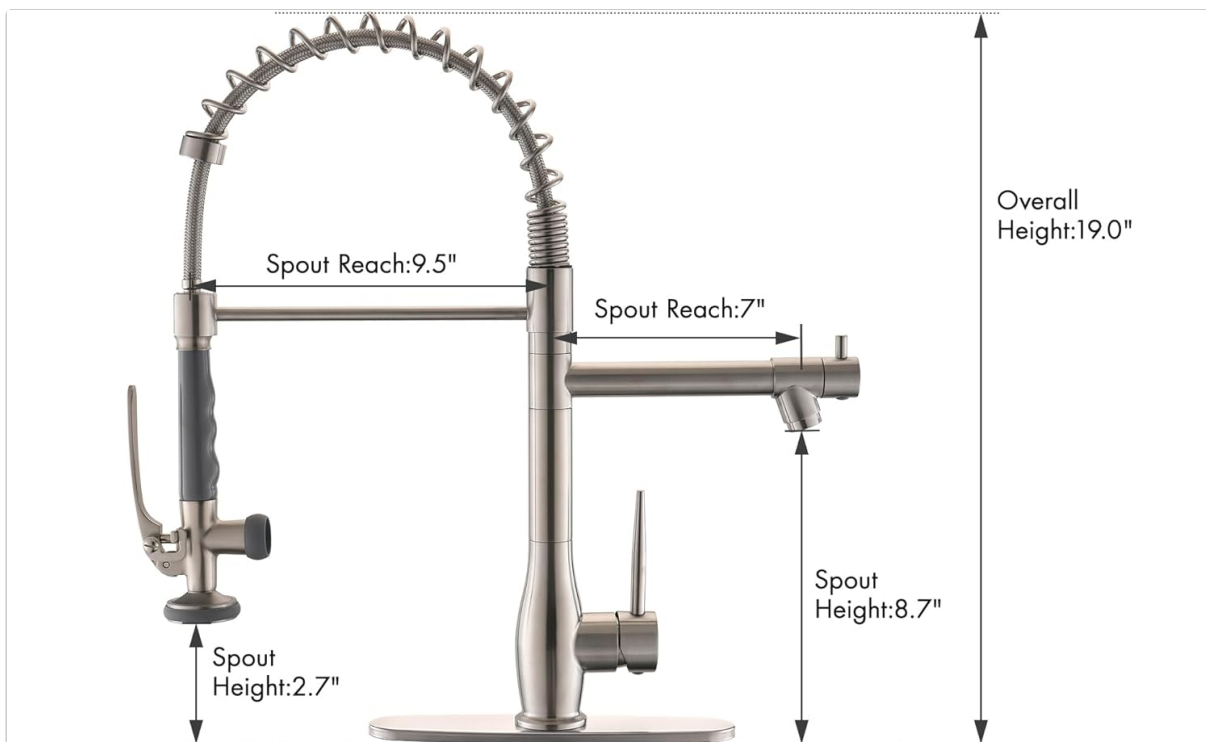


Image: Detailed dimensions of the GIMILI Commercial Kitchen Faucet, including overall height, spout reach, and installation requirements for mounting hole size, maximum countertop thickness, and necessary vertical clearance.

SETUP GUIDE

Follow these steps for a successful installation:

1. **Prepare the Sink Area:** Turn off the main water supply. Clear the area under the sink and remove any old faucet components.
2. **Install the Faucet Base:** Place the main faucet body through the mounting hole on your sink or countertop. If your sink has multiple holes, use the included deck plate to cover unused holes. Ensure the black rubber gasket is seated flush on the bottom of the faucet base.
3. **Connect Water Lines:** From underneath the sink, thread the hot and cold water supply lines onto the corresponding connections on the faucet. The faucet typically has color indicators (red for hot, blue for cold). Hand-tighten, then use a wrench for a quarter turn. Avoid overtightening to prevent damage.
4. **Secure the Faucet:** Place the white rubber washer, then the metal washer, and finally the large mounting nut onto the threaded shank from underneath the sink. Hand-tighten the nut until it is snug, then loosen it by 2-5 turns. This creates space for the side screws.
5. **Tighten Side Screws:** Use a long-handled Phillips head screwdriver to tighten the two side screws

on the mounting nut. Alternate tightening each screw evenly until the faucet is stable and does not wobble. Do not use a wrench on these screws.

6. **Install the Soap Dispenser:** Insert the soap dispenser body into its designated hole. From underneath, secure it with the provided rubber washers and nut. Fill the dispenser from the top by pulling out the pump mechanism.
7. **Flush the Lines:** Before attaching the sprayer head, turn on the main water supply and allow water to run through the faucet for a few minutes to flush out any debris. Turn off the water.
8. **Attach Sprayer Head:** Connect the pull-down sprayer head to the flexible hose. Ensure a secure connection.
9. **Check for Leaks:** Turn the water supply back on and carefully check all connections for any leaks. Tighten gently if necessary.



Image: The GIMILI Commercial Kitchen Faucet with its pull-down sprayer and integrated soap dispenser, showcasing its brushed nickel finish.



KITCHEN SINK SOAP DISPENSER

Easy to install on most sinks

Fits any kitchen sink or countertop (granite, stainless steel, wood) for hassle-free use

Image: A hand operating the integrated kitchen sink soap dispenser, demonstrating its easy-to-use design.

OPERATING INSTRUCTIONS

Your GIMILI Commercial Kitchen Faucet features a single handle for temperature and flow control, along with two independent nozzles for versatile use.

- **Main Handle:** Lift the handle to turn on the water and control flow volume. Move the handle left for hot water and right for cold water.
- **Pull-Down Sprayer:** The sprayer offers two modes:
 - **Spray Mode:** Provides a high-pressure water flow, ideal for rinsing food debris from dishes and cleaning the sink.
 - **Stream Mode:** Delivers a gentle water output, suitable for filling pots quickly and conserving water.

The sprayer features a bayonet locking design, allowing you to activate both nozzles simultaneously for specific tasks. The high arc design and 360° rotation ensure comprehensive cleaning without dead angles.

- **Pot Filler:** The separate pot filler spout provides a steady stream of water for filling large containers.

DUAL NOZZLE KITCHEN FAUCET



SPRAY

High Pressure & Powerful Cleaning



STREAM

Soft Gentle Discharge & Fast
Water Filling

Image: A visual comparison of the high-pressure spray mode for cleaning and the soft stream mode for filling, demonstrating the dual nozzle functionality.



Lead-free



Ceramic Valve



304 Stainless Steel

Image: The pull-down sprayer in action, effectively rinsing a pan in a kitchen sink.



Image: The pot filler spout efficiently filling a pitcher with water, highlighting its convenience.

Your browser does not support the video tag.

Video: A demonstration of the GIMILI Commercial Kitchen Faucet in Brushed Nickel, showcasing its features and operation.

MAINTENANCE

To ensure the longevity and pristine appearance of your GIMILI kitchen faucet, follow these maintenance guidelines:

- **Regular Cleaning:** Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the brushed nickel finish.
- **Prevent Water Spots:** Wipe the faucet dry after each use to prevent water spots and mineral buildup.
- **Check for Leaks:** Periodically inspect all connections for any signs of leaks. Tighten connections gently if necessary.
- **Aerator Cleaning:** If water flow decreases, the aerator on the sprayer head may be clogged. Unscrew the aerator, clean any debris, and reattach.
- **Ceramic Valve Care:** The ceramic precision valve cores are designed for long-term, leak-free use.

No specific user maintenance is required for the internal valve.

TROUBLESHOOTING

If you encounter issues with your faucet, refer to the following common problems and solutions:

- **Low Water Pressure:**
 - Check if the main water supply valves are fully open.
 - Clean the aerator on the sprayer head for any mineral buildup or debris.
 - Ensure water supply lines are not kinked or obstructed.
- **Leaks from Connections:**
 - Turn off the water supply.
 - Gently tighten any leaking connections with a wrench. Do not overtighten.
 - Ensure all gaskets and washers are correctly seated.
- **Faucet Wobbles:**
 - Ensure the large mounting nut underneath the sink is properly tightened. Remember to loosen it slightly after initial hand-tightening to allow the side screws to secure the faucet effectively.
 - Tighten the two side screws on the mounting nut evenly until the faucet is stable.
- **Difficulty Switching Between Spray/Stream:**
 - Ensure there is no debris obstructing the button mechanism on the sprayer head.
 - Check water pressure; very low pressure can sometimes affect the switch mechanism.
- **Soap Dispenser Clogged:**
 - Remove the pump mechanism and clean it thoroughly with warm water.
 - Ensure the soap used is not too thick or contains particles that could cause clogging.

WARRANTY INFORMATION

The GIMILI Commercial Kitchen Faucet comes with a **limited warranty**. This warranty covers manufacturing defects and ensures the product is free from material and workmanship flaws under normal use. For specific terms, conditions, and duration of your warranty, please refer to the warranty card included with your purchase or contact GIMILI customer support.

Note: The warranty typically does not cover damage resulting from improper installation, misuse, abuse, accident, or normal wear and tear.

CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need to report a warranty claim, please contact GIMILI customer support through the following channels:

- **Online:** Visit the official GIMILI website for support resources and contact forms.
- **Email:** Refer to your product packaging or warranty card for the customer service email address.

Please have your model number (GML80192N-LED) and purchase date available when contacting support to expedite assistance.

