

[Manuals.plus](#) /

› [ZOFGENOW](#) /

› ZOFGENOW Automatic Mouthwash Dispenser User Manual - Model 1

ZOFGENOW 1

ZOFGENOW Automatic Mouthwash Dispenser

Model: 1

INTRODUCTION

Thank you for choosing the ZOFGENOW Automatic Mouthwash Dispenser. This manual provides detailed instructions for the safe and efficient use, installation, and maintenance of your new device. Please read this manual thoroughly before operation and retain it for future reference.

PRODUCT OVERVIEW

The ZOFGENOW Automatic Mouthwash Dispenser is designed to simplify your oral hygiene routine. It features a modern, sleek design and offers convenient, adjustable dispensing of mouthwash. The device is rechargeable and includes magnetic cups for easy storage.



Image: The ZOFGENOW Automatic Mouthwash Dispenser, highlighting its main features such as a 2000mAh battery, auto-cleaning function, three dispensing modes, reusable design, LED indicator, IPX7 waterproof rating, wall-mount capability, and Type-C charging port.

Key Features:

- **Rechargeable Design:** Equipped with a 2000mAh battery, eliminating the need for frequent battery changes.
- **Adjustable Dispensing Levels:** Offers three volume options (10ml, 20ml, 30ml) to suit individual preferences.
- **Easy Installation:** Can be mounted on a wall using either adhesive tape or screws.
- **Magnetic Cups:** Includes cups that attach magnetically for hygienic storage and easy access.
- **Auto-Cleaning Function:** Simplifies maintenance and ensures hygiene.
- **IPX7 Waterproof:** Provides protection against water immersion.
- **Type-C Charging:** Modern and convenient charging interface.

PACKAGE CONTENTS

Please check the package for the following items:

- ZOFGENOW Automatic Mouthwash Dispenser Unit
- Magnetic Cups (quantity may vary, typically two)
- USB Type-C Charging Cable
- Wall Mounting Kit (3M adhesive tape, screws, and dowels)
- User Manual (this document)

SPECIFICATIONS

Feature	Detail
Model Number	1
Dimensions (L x W x H)	10.5 x 10.5 x 25.5 cm (4.1 x 4.1 x 10 inches)
Weight	481 grams (1.06 lbs)
Material	ABS + PET (BPA-free)
Liquid Volume Capacity	550 Milliliters
Battery Capacity	2000 mAh
Waterproof Rating	IPX7
Charging Port	USB Type-C
Dispensing Volumes	10ml, 20ml, 30ml

DIMENSIONS



Image: Detailed dimensions of the ZOFGENOW Mouthwash Dispenser, indicating its height, width, and depth, along with its BPA-free material, weight, and 550ml capacity.

INSTALLATION

1. Charging the Device

1. Before first use, fully charge the dispenser using the provided USB Type-C cable. Connect the cable to the charging port on the device and a suitable USB power adapter (not included).
2. The LED indicator will show charging status. A full charge typically takes a few hours.


2. Filling the Mouthwash Reservoir

1. Gently twist and remove the bottom reservoir from the main unit.
2. Fill the reservoir with your preferred mouthwash, ensuring not to exceed the maximum fill line.
3. Securely reattach the reservoir to the main unit, ensuring a tight seal to prevent leaks.

3. Mounting Options

The dispenser can be wall-mounted using two methods:

MOUNTING OPTIONS

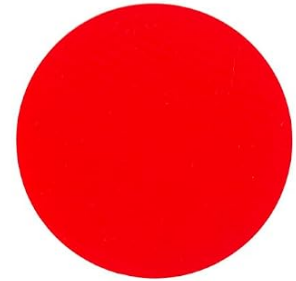

3M TAPE INCLUDED



SCREWS & DOWELS
FOR WALL MOUNTING

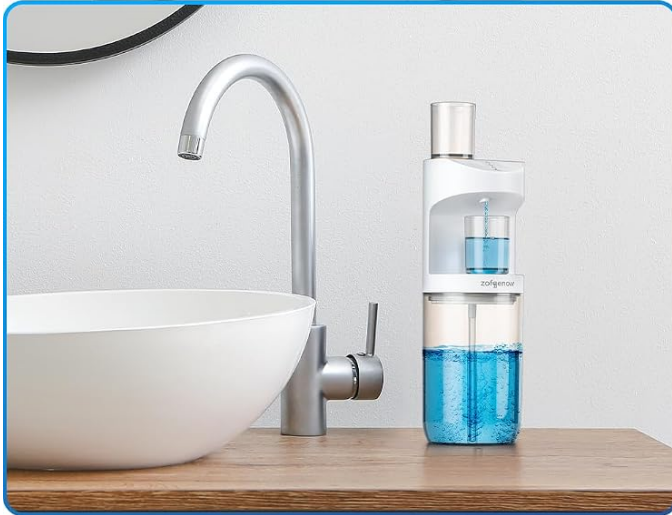


Image: Visual representation of the two mounting options for the ZOFGENOW Mouthwash Dispenser: using 3M adhesive tape for smooth surfaces or screws and dowels for a more secure fixture.

Method A: 3M Adhesive Tape (for smooth surfaces)

1. Clean and dry the desired wall surface thoroughly.
2. Peel off the protective backing from the 3M adhesive tape provided.
3. Attach the adhesive plate to the back of the dispenser.
4. Press the dispenser firmly against the wall for at least 30 seconds.
5. Allow 24 hours for the adhesive to set before placing the dispenser's full weight on it.

Method B: Screws and Dowels (for secure mounting)

1. Mark the desired mounting location on the wall.

2. Drill two holes at the marked positions, suitable for the provided dowels.
3. Insert the dowels into the drilled holes.
4. Align the dispenser's mounting holes with the dowels and secure it with the provided screws.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on, press and hold the power button for a few seconds until the indicator light illuminates.
- To power off, press and hold the power button again until the indicator light turns off.

2. Adjusting Dispensing Volume

The dispenser offers three adjustable volume settings: 10ml, 20ml, and 30ml.

ADJUSTABLE 3 DISPENSING LEVELS



Magnetic Cups
Prevent cups from falling

Image: The ZOFGENOW Mouthwash Dispenser illustrating the three selectable dispensing volumes (10ml, 20ml, 30ml) and the magnetic

attachment feature for the cups.

1. With the device powered on, press the volume adjustment button (usually indicated by a 'M' or similar icon) to cycle through the available settings.
2. The corresponding indicator light or display will show the selected volume.

3. Dispensing Mouthwash

1. Place one of the magnetic cups under the dispenser nozzle.
2. The dispenser will automatically detect the cup and dispense the pre-selected volume of mouthwash.
3. Remove the cup once dispensing is complete.

4. Using Magnetic Cups

The included cups attach magnetically to the dispenser for convenient and hygienic storage. Simply place the cup against the designated magnetic area on the dispenser.

5. Auto-Cleaning Function

To activate the auto-cleaning function, refer to the specific button or sequence indicated on your device (often a dedicated cleaning button or a long press of the volume button). This function helps flush out residual mouthwash from the internal tubing.

MAINTENANCE

1. Regular Cleaning

- Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Periodically run the auto-cleaning cycle to prevent mouthwash residue buildup in the internal system.
- The magnetic cups can be washed with soap and water. Ensure they are dry before reattaching to the dispenser.

2. Refilling Mouthwash

When the mouthwash level is low, refill the reservoir as described in the 'Installation' section. It is recommended to rinse the reservoir with water before refilling with a different type of mouthwash.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not turning on	Low battery; Device is off	Charge the device; Press and hold the power button to turn on
No mouthwash dispensed	Reservoir empty; No cup detected; Clogged nozzle	Refill reservoir; Ensure cup is correctly placed; Run auto-cleaning cycle
Inaccurate dispensing volume	Incorrect volume setting; Air bubbles in system	Adjust volume setting; Run auto-cleaning cycle to clear air
Device not charging	Faulty cable/adaptor; Loose connection	Check cable and adaptor; Ensure secure connection

SAFETY INFORMATION

- Keep the device out of reach of children and pets.
- Do not immerse the main dispenser unit in water, despite its IPX7 rating, to prevent damage to internal electronic components.
- Use only standard mouthwash solutions. Do not use thick liquids, gels, or abrasive substances.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Dispose of the product and its battery responsibly according to local regulations.

CUSTOMER SUPPORT

For any questions, concerns, or technical support regarding your ZOFGENOW Automatic Mouthwash Dispenser, please contact your retailer or the manufacturer directly. Refer to your purchase documentation for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question