

[Manuals.plus](#) /

› [SEAGO](#) /

› SEAGO Rechargeable Electric Toothbrush User Manual

SEAGO SG-959-10

SEAGO Rechargeable Electric Toothbrush User Manual

Model: SG-959-10

Brand: SEAGO

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your SEAGO Rechargeable Electric Toothbrush. Please read this manual thoroughly before first use and retain it for future reference. This sonic toothbrush is designed to provide a superior cleaning experience compared to manual toothbrushes, promoting better oral hygiene.

PACKAGE CONTENTS

Upon opening your SEAGO Electric Toothbrush package, please verify that all the following items are included:

- 1 x SEAGO Electric Toothbrush Handle
- 10 x Replacement Brush Heads (including 4 W-shaped, 3 strong plaque-removing, 2 tongue-cleaning, and 1 interdental cleaning head)
- 1 x Protection Cap for brush head
- 1 x USB Charging Cable
- 1 x Instruction Manual (this document)
- 1 x Toothbrush Holder



Image: Overview of the SEAGO Electric Toothbrush and its included accessories, such as the handle, various brush heads, and charging cable, neatly arranged in its packaging.

PRODUCT FEATURES

- Deep Cleaning Technology:** Features 40,000 strokes per minute sonic technology for effective plaque and stain removal, reaching deep into tooth gaps.

40,000 VPM

Effectively
Removes Plaque
and Improves
Gum Health
within

7 Days*



*From seago R&D Date

Image: Visual representation of the toothbrush's 40,000 Vibrations Per Minute (VPM) technology, highlighting its efficiency in removing plaque and improving gum health.

- **Versatile Brush Heads:** Comes with 10 specialized brush heads to cater to different oral cleaning needs, including W-shaped for daily use, strong plaque-removing, tongue-cleaning, and interdental cleaning heads.

10X = 30
brush heads Months use

Satisfied Different Oral Cleaning Needs

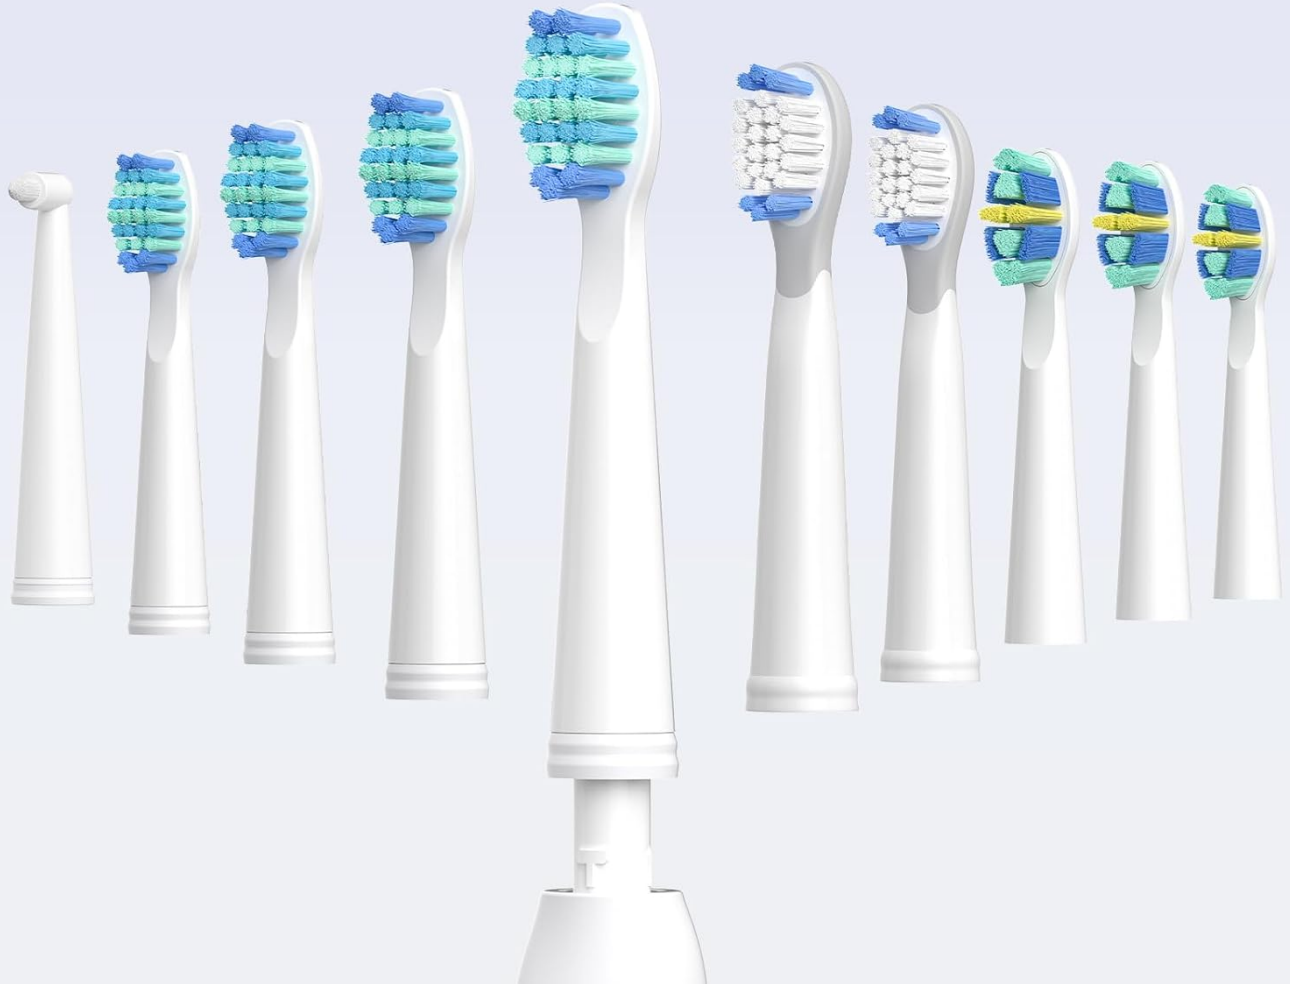


Image: A collection of 10 distinct brush heads, showcasing their varied designs for different cleaning purposes, such as daily use, plaque control, tongue cleaning, and interdental cleaning.

- **5 Brushing Modes:** Offers White, Clean, Sensitive, Polish, and Massage modes to suit various dental conditions and preferences. The smart memory function recalls your last selected mode.

5

Brushing Modes

 **White**

 **Clean**

 **Sensitive**

 **Polish**

 **Massage**



Image: The SEAGO toothbrush handle with indicators for its five distinct brushing modes: White, Clean, Sensitive, Polish, and Massage, allowing users to select based on their needs.

- **2-Minute Smart Timer:** Incorporates a 2-minute timer with 30-second interval reminders to encourage dentist-recommended brushing habits.



2 Minute Timer

With QuadPacer
Develop Healthy Tooth Brushing Habits

Image: A user demonstrating the toothbrush in action, emphasizing the built-in 2-minute timer and QuadPacer feature that helps develop healthy brushing habits.

- **IPX7 Waterproof Design:** Ensures safe use in wet environments, such as during bathing or showering.



Image: The SEAGO electric toothbrush partially submerged in water, visually confirming its IPX7 waterproof rating, making it safe for use in the shower or bath.

- **Long Battery Life & USB Charging:** A single 4-hour charge provides up to 30 days of use. Conveniently rechargeable via USB, compatible with power banks, PCs, and USB chargers.



Image: The base of the SEAGO toothbrush connected to a USB charging cable, illustrating its fast charging capability (4 hours for 30 days of use) and compatibility with various USB power sources.

SETUP

1. **Initial Charge:** Before first use, fully charge the toothbrush for approximately 4 hours. Connect the USB charging cable to the port at the bottom of the toothbrush handle and plug the other end into a compatible USB power source (e.g., power bank, PC, USB wall adapter). The indicator lights will show charging progress.
2. **Attach Brush Head:** Select your desired brush head. Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached.
3. **Install Toothbrush Holder:** If desired, assemble the provided toothbrush holder and place it on a flat, stable surface in your bathroom. This holder is designed to keep your toothbrush upright and prevent it from falling over.

OPERATING INSTRUCTIONS

1. **Apply Toothpaste:** Apply a small amount of toothpaste to the brush head.
2. **Wet Brush Head:** Lightly wet the brush head with water.

3. **Place in Mouth:** Place the brush head in your mouth before turning on the toothbrush to prevent splashing.
4. **Power On & Select Mode:** Press the power button to turn on the toothbrush. Press the power button repeatedly to cycle through the 5 available modes:
- **White:** For removing stubborn stains and whitening teeth.
 - **Clean:** Standard mode for daily cleaning.
 - **Sensitive:** Gentle cleaning for sensitive teeth and gums.
 - **Polish:** For polishing teeth and enhancing brightness.
 - **Massage:** Provides a gentle massage for gums.

The smart memory function will automatically select the last used mode when you turn on the toothbrush.

5. **Brushing Technique:** Guide the brush head slowly from tooth to tooth, allowing the sonic vibrations to do the work. Hold the brush at a slight angle towards the gum line. Do not scrub aggressively.
6. **Smart Timer & Pacer:** The toothbrush will pause briefly every 30 seconds to indicate when to move to a different quadrant of your mouth. After 2 minutes, the toothbrush will automatically turn off, signaling the completion of the recommended brushing time.
7. **Power Off:** To turn off the toothbrush before the 2-minute cycle is complete, press and hold the power button for 3 seconds.

MAINTENANCE

1. **Cleaning the Brush Head:** After each use, rinse the brush head thoroughly under running water while the toothbrush is briefly turned on to remove any remaining toothpaste or debris.
2. **Cleaning the Handle:** Wipe the handle with a damp cloth. Do not immerse the entire handle in water for extended periods, despite its waterproof rating, to prolong its lifespan.
3. **Replacing Brush Heads:** It is recommended to replace your brush head every 3 months, or sooner if the bristles become frayed or worn. To replace, twist and pull the old brush head off, then push a new one onto the shaft until it clicks.
4. **Storage:** Store the toothbrush in a dry place. Use the provided protection cap for the brush head when traveling.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Low battery or not charged.	Charge the toothbrush fully for 4 hours.
Weak vibrations.	Low battery.	Recharge the toothbrush.
Brush head is loose.	Not properly attached.	Remove and re-attach the brush head firmly until it clicks.
Toothbrush stops before 2 minutes.	Power button held down too long, or battery low.	Ensure you are not holding the power button down. Recharge if battery is low.

SPECIFICATIONS

- **Model Number:** SG-959-10
- **Brand:** SEAGO

- **Power Source:** Corded Electric, Battery Powered
- **Battery Type:** 1 Lithium Ion battery (included)
- **Vibrations:** 40,000 VPM (Vibrations Per Minute)
- **Modes:** White, Clean, Sensitive, Polish, Massage
- **Timer:** 2-minute auto-timer with 30-second interval reminders
- **Waterproof Rating:** IPX7
- **Item Firmness Description:** Soft
- **Product Dimensions:** 0.98 x 0.98 x 8.74 inches
- **Item Weight:** 8.78 ounces
- **Manufacturer:** SEAGO ELECTRIC CO.,LTD

WARRANTY AND SUPPORT

SEAGO products are manufactured with high-quality standards. For any questions, concerns, or warranty claims, please contact SEAGO customer support through the retailer's platform or the official SEAGO website. Please retain your proof of purchase for warranty validation.

For more information, visit the official SEAGO Store:[SEAGO Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0C36YPK2K>

More documents and user manuals: <https://manuals.plus/>