

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ONCHEER](#) /

› [ONCHEER P95 1080P Body Camera User Manual](#)

## ONCHEER P95

# ONCHEER P95 1080P Body Camera User Manual

Model: P95

## 1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your ONCHEER P95 1080P Body Camera. Please read this manual thoroughly before using the device to ensure proper function and to maximize its capabilities. This body camera is designed for reliable video and audio recording in various professional and personal scenarios.



Image 1.1: Front and back view of the ONCHEER P95 1080P Body Camera.

## 2. PRODUCT OVERVIEW

The ONCHEER P95 is a compact and durable body camera featuring 1080P video recording, night vision capabilities, and a 2-inch display. It is equipped with a 3000mAh rechargeable battery for extended operation.

### 2.1 Components and Controls



Image 2.1: Diagram illustrating the various components and controls of the ONCHEER P95 Body Camera.

- **Front Lens:** Main camera lens for video and photo capture.
- **Infrared LEDs:** For night vision functionality.
- **2.0-inch Screen:** For live view, playback, and menu navigation.
- **Power ON/OFF Switch:** To turn the device on or off.
- **Video Button:** One-key operation to start/stop video recording.
- **Photo/Snap Button:** To capture still images.
- **Microphone Recording Button:** To initiate audio-only recording.
- **Infrared Switch:** To manually activate or deactivate infrared night vision.
- **Warning Lights/Lighting Lights:** Indicator lights for various statuses.
- **Mode/Menu/Return Button:** For navigating menus and changing modes.
- **Play/Stop(enter) Button:** For playback control and confirming selections.
- **Previous/Next Switch:** For navigating through files or menu options.
- **Micro SD Card Slot:** For inserting the memory card.
- **TYPEC USB/Reset Port:** For charging, data transfer, and device reset.
- **Clip Socket:** Attachment point for shoulder and waist clips.

### 3. WHAT'S IN THE Box

Upon unboxing your ONCHEER P95 Body Camera, please verify that all the following items are included:

# Product Accessories



1x Body Camera

1x manual

1x charging cable

1x Charger

1x Waist clip

1x shoulder clip

1x 64GB memory card

1x card reader

1x Body Camera

1x manual



1x charging cable

1x Waist clip

1x Charger

1x shoulder clip

1x 64GB Kingston memory card

1x card reader

Image 3.1: All accessories included with the ONCHEER P95 Body Camera.

- 1x ONCHEER P95 Body Camera
- 1x User Manual
- 1x Charging Cable (USB Type-C)
- 1x Wall Charger
- 1x Waist Clip
- 1x Shoulder Clip
- 1x 64GB Kingston Memory Card
- 1x Card Reader

## 4. SETUP

### 4.1 Charging the Battery

Before initial use, fully charge the body camera. The built-in 3000mAh rechargeable battery supports up to 24 hours of continuous recording when fully charged. A 10-minute charge can provide approximately 1 hour of recording time.

1. Connect the provided USB charging cable to the camera's TYPEC USB port.
2. Connect the other end of the cable to the wall charger and plug it into a power outlet.
3. The camera's indicator light will show charging status. Refer to the screen for battery level.



Image 4.1: Charging the ONCHEER P95 Body Camera.

## 4.2 Inserting the SD Card

The camera comes with a 64GB Kingston SD card. Ensure the card is properly inserted before recording.

1. Locate the Micro SD Card slot on the side of the camera.
2. Gently insert the 64GB Micro SD card into the slot with the gold contacts facing the back of the camera until it clicks into place.
3. To remove, push the card in slightly until it springs out.

## 4.3 Attaching the Clips

The camera includes both shoulder and waist clips for versatile mounting options.

1. Select either the shoulder clip or the waist clip based on your preference.
2. Align the clip with the clip socket on the top-back of the camera.

3. Slide the clip into the socket until it securely locks.
4. The clips are designed to rotate 360 degrees for optimal positioning.

## Suitable for Various Scenarios



Image 4.2: ONCHEER P95 Body Camera with clips attached, demonstrating flexible mounting.

## 5. OPERATION

### 5.1 Power On/Off

- **To Power On:** With the camera powered off, long-press the Video Button for 3 seconds. The camera will power on and immediately begin recording video. This feature allows for quick activation in emergency situations.
- **To Power Off:** Press and hold the Power ON/OFF Switch until the device shuts down.

### 5.2 Recording Video

The camera records video in 1080P resolution with a 145° wide-angle lens.

1. Ensure the camera is powered on.
2. To start recording, short-press the Video Button. A red indicator light will typically flash, and a recording icon will appear on the screen.

3. To stop recording, short-press the Video Button again. The recording will save, and the indicator light will change.

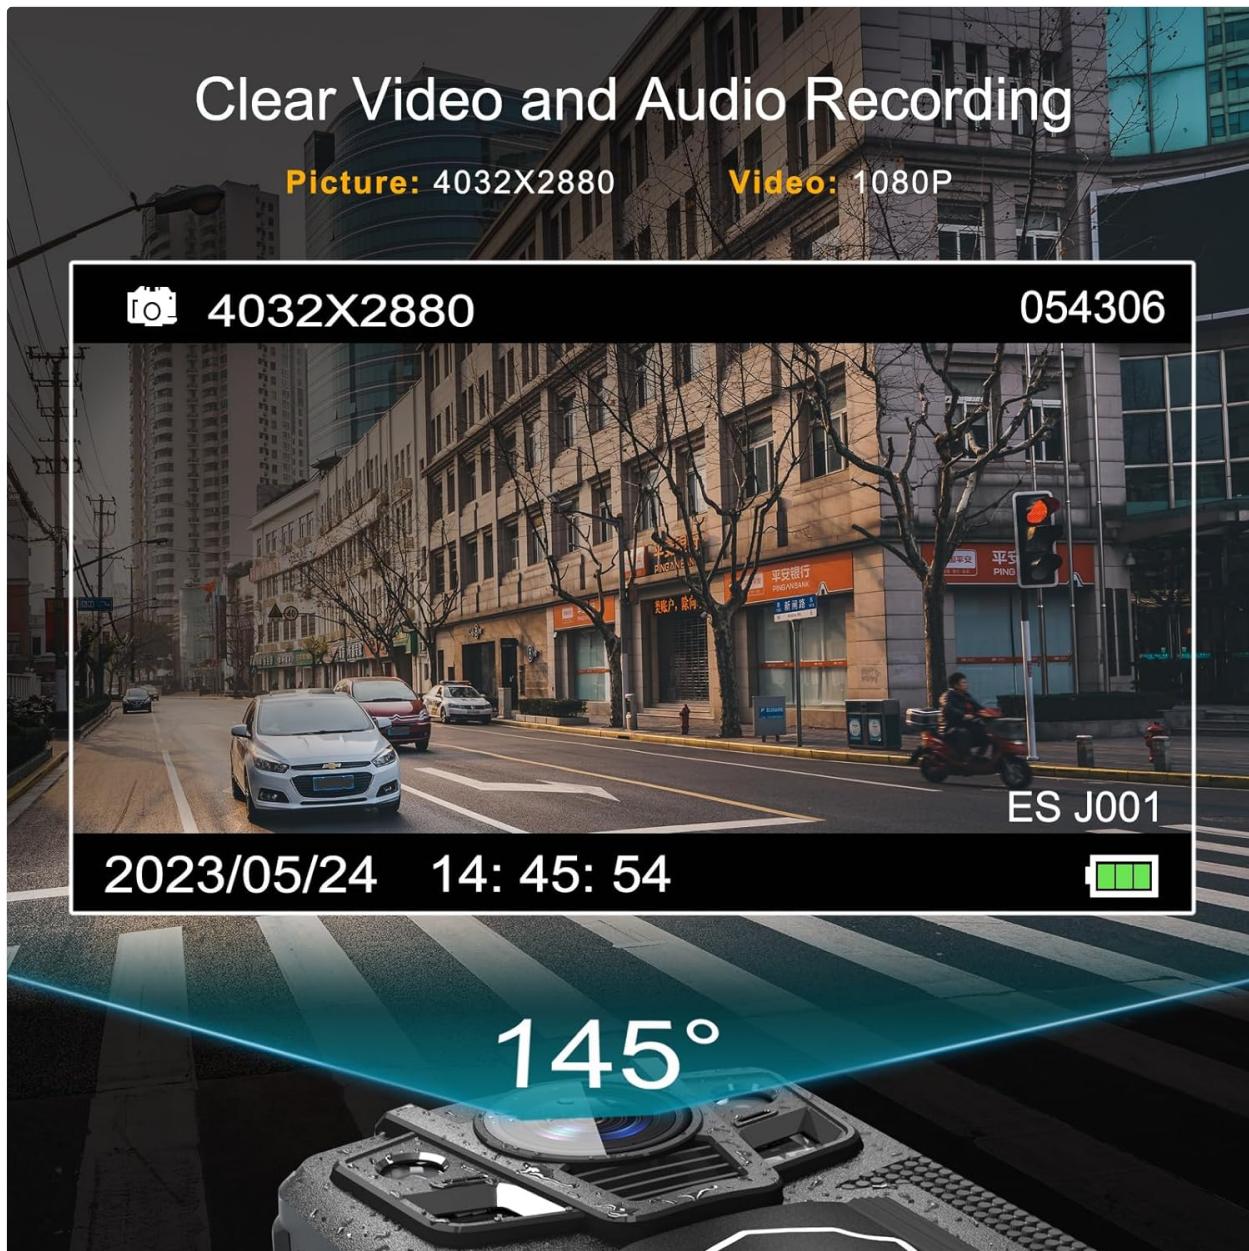


Image 5.1: Example of 1080P video recording quality with date/time overlay.

### 5.3 Taking Photos

The camera can capture 12-megapixel still images.

1. Ensure the camera is powered on and not currently recording video.
2. Short-press the Photo/Snap Button to take a picture.

### 5.4 Night Vision

The camera automatically activates night vision mode in low-light conditions for clearer video. It uses two high-intensity infrared LEDs.

- The camera is designed to automatically switch to night vision when ambient light is insufficient.
- You can also manually control the infrared function using the Infrared Switch if available in the menu settings.



Image 5.2: Visual comparison of night vision (monochrome) and normal (color) recording.

## 5.5 Loop Recording

The loop recording function ensures continuous recording by overwriting the oldest files when the memory card is full.

- To enable or disable loop recording, navigate through the camera's menu using the Mode/Menu/Return button and the Previous/Next switches.
- Confirm your selection with the Play/Stop(enter) button.

## 5.6 Connecting to Computer and Data Transfer

All recorded video and picture files can be transferred to a computer for storage and review. Files cannot be deleted or modified directly on the camera to protect data integrity.

1. Connect the camera to your computer using the provided USB cable.
2. The camera screen will display options such as "Memory Mode" or "PC Camera Mode".
3. Select "Memory Mode" to access the recorded files on the SD card. The camera will appear as a removable drive on your computer.
4. You can then copy files from the camera to your computer.

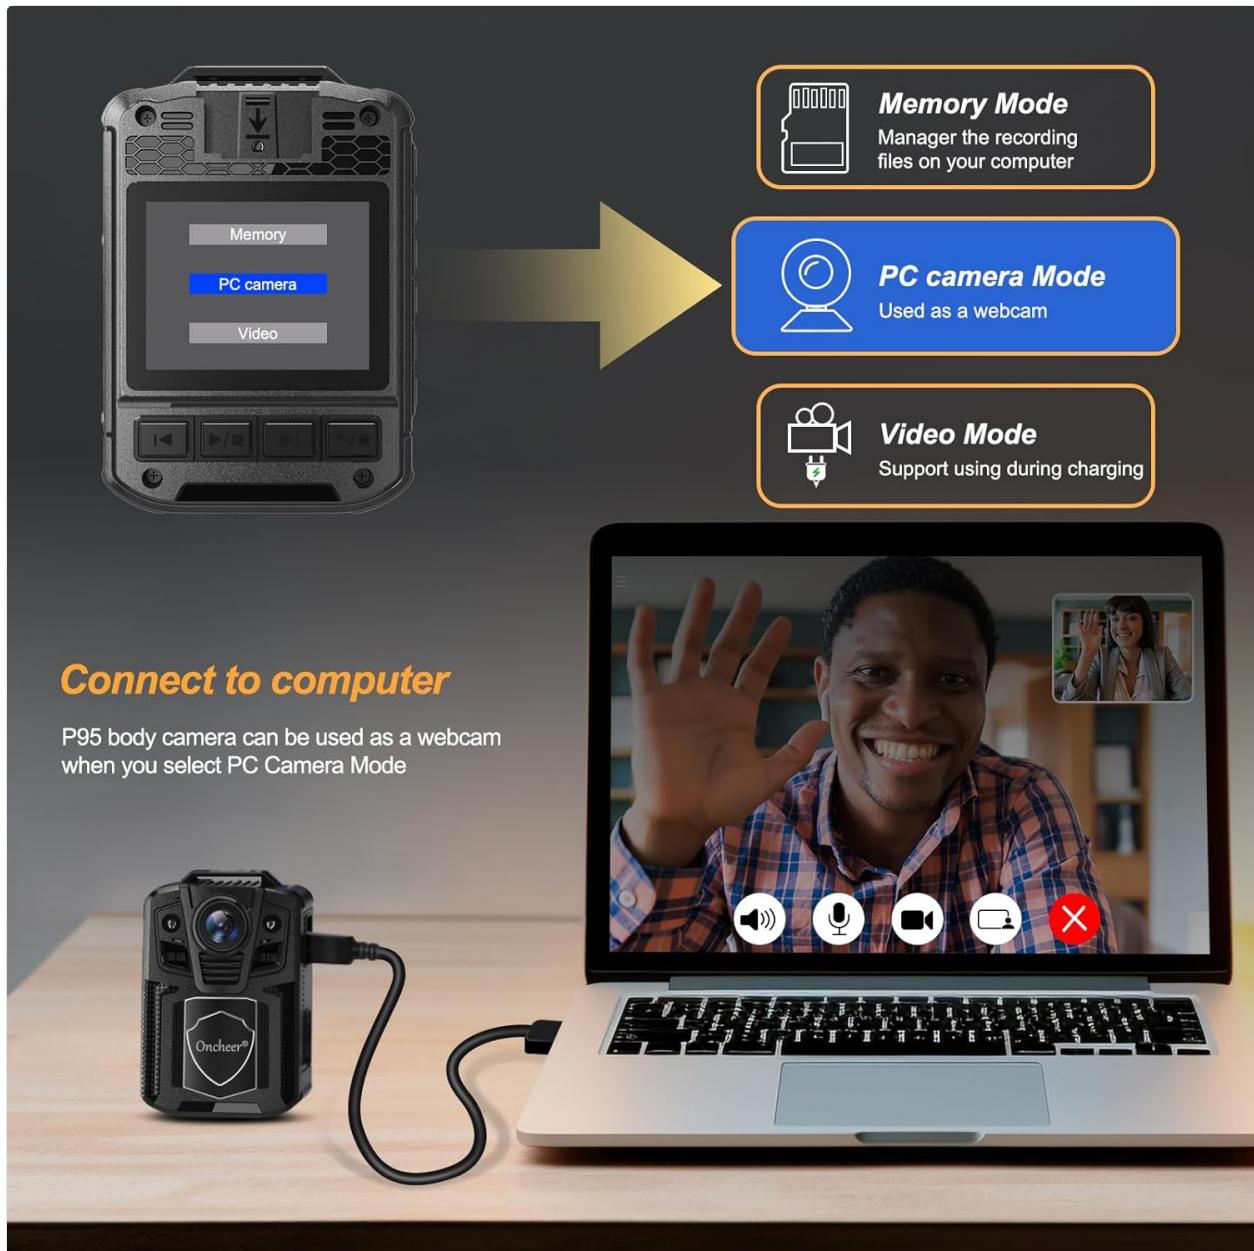


Image 5.3: Connecting the body camera to a computer for data transfer or webcam use.

## 5.7 PC Camera Mode (Webcam Functionality)

The ONCHEER P95 can also function as a webcam when connected to a computer.

1. Connect the camera to your computer using the provided USB cable.
2. When prompted on the camera screen, select "PC Camera Mode".
3. Your computer should recognize the device as a webcam, which can then be used with compatible video conferencing or recording software.

## 6. MAINTENANCE

### 6.1 Data Security

To maintain the integrity of recorded evidence, video and picture files cannot be deleted or modified directly on the body camera. Always transfer files to a computer for management.

### 6.2 Cleaning

- Use a soft, dry cloth to clean the camera body.

- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Avoid using harsh chemicals or abrasive materials.

### 6.3 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the battery is partially charged (around 50%) if storing for extended periods to prolong battery life.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter with your ONCHEER P95 Body Camera.

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted.	Charge the camera fully using the provided charger and cable.
Recording stops unexpectedly or camera shuts off.	Low battery; SD card full or corrupted; device overheating.	Ensure battery is charged. Check SD card capacity and format if necessary. Allow camera to cool down if it feels hot. Avoid prolonged recording in high temperatures.
Video/Audio quality is poor.	Lens is dirty; insufficient lighting; recording settings.	Clean the lens. Ensure adequate lighting or activate night vision. Check video resolution settings in the camera menu.
Buttons are unresponsive.	Temporary software glitch; physical damage.	Try resetting the device using the reset pinhole (if available, usually near the USB port). If the issue persists, contact customer support.
Cannot transfer files to computer.	Incorrect USB mode selected; faulty cable/port; driver issues.	Ensure "Memory Mode" is selected on the camera. Try a different USB port or cable. Check computer's device manager for driver issues.

## 8. SPECIFICATIONS

Feature	Detail
Brand	ONCHEER
Model Number	P95
Video Capture Resolution	1080p
Photo Sensor Technology	CMOS
Screen Size	2 Inches
Battery	3000mAh Lithium Polymer (included)
Continuous Recording Time	Up to 24 hours
Flash Memory Type	SD (64GB Kingston card included)

Feature	Detail
Special Features	Built-In Light, Loop Recording, Night Vision
Connectivity Technology	USB
Item Weight	13.7 ounces
Package Dimensions	6.1 x 3.86 x 2.6 inches

## 9. WARRANTY AND SUPPORT



For warranty information and technical support, please refer to the documentation provided with your purchase or contact ONCHEER customer service directly. Keep your proof of purchase for warranty claims.

For additional assistance, you may visit the official ONCHEER store page on Amazon:[ONCHEER Store](#)

© 2025 ONCHEER. All rights reserved.

### Related Documents - P95

	<p><a href="#">ONCHEER P95 Body Camera FAQ and User Guide</a></p> <p>Frequently asked questions and operational guidance for the ONCHEER P95 body camera, covering date/time settings, audio, memory card expansion, clip replacement, and software management.</p>
	<p><a href="#">Oncheer 8070BT Wood Classic Multi-Function Radio User Manual</a></p> <p>User manual for the Oncheer 8070BT 3-band (FM/AM/SW) wood classic multi-function radio. Features include radio operation, USB/TF card playback, Bluetooth connectivity, specifications, and FCC compliance information.</p>
	<p><a href="#">P95 Smartwatch FAQs and User Guide</a></p> <p>Comprehensive frequently asked questions and answers for the P95 smartwatch, detailing setup, features, and troubleshooting with the FitCloudPro app.</p>

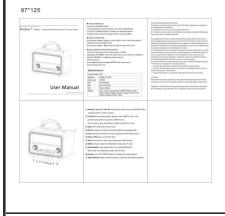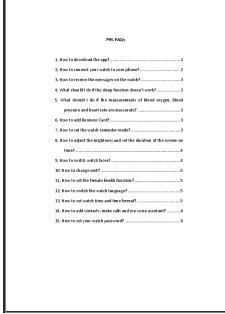	<p><b>ONCHEER P95 Body Camera FAQ and User Guide</b></p> <p>Frequently asked questions and operational guidance for the ONCHEER P95 body camera, covering date/time settings, audio, memory card expansion, clip replacement, and software management.</p>
	<p><b>Oncheer 8070BT Wood Classic Multi-Function Radio User Manual</b></p> <p>User manual for the Oncheer 8070BT 3-band (FM/AM/SW) wood classic multi-function radio. Features include radio operation, USB/TF card playback, Bluetooth connectivity, specifications, and FCC compliance information.</p>
	<p><b>P95 Smartwatch FAQs and User Guide</b></p> <p>Comprehensive frequently asked questions and answers for the P95 smartwatch, detailing setup, features, and troubleshooting with the FitCloudPro app.</p>


## Documents - ONCHEER – P95

### [pdf] User Manual

DSJ K70 P95    cdr Administrator ONCHEER 1080P Patrol Sport Body Camera Video Recorder Cams with 64G SD Card Shoulder Waist Clip Infrared Night Vision Bodycam 24H Continous Record for Police Security Guards Sporting Trip User Manual C1wHCCr 8VL m media amazon images I |||

...

lang: score:16 filesize: 6.25 M page\_count: 12 document date: 2023-05-09

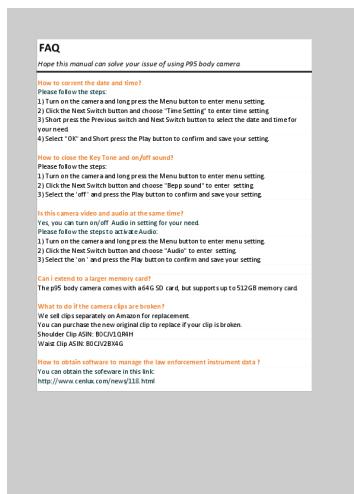

### [ONCHEER P95 Body Camera FAQ and User Guide](#)

Frequently asked questions and operational guidance for the ONCHEER P95 body camera, covering date/time settings, audio, memory card expansion, clip replacement, and software management.

lang:en score:14 filesize: 642.74 K page\_count: 2 document date: 2023-10-19