

[Manuals.plus](#) /

> [SEAFLO](#) /

> SEAFLO 3.2 Gallon (12L) Premium Portable Travel Toilet Instruction Manual SFPT-12-03

SEAFLO SFPT-12-03

SEAFLO 3.2 Gallon (12L) Premium Portable Travel Toilet

INSTRUCTION MANUAL - MODEL SFPT-12-03

Introduction

This manual provides detailed instructions for the safe and effective use, setup, operation, and maintenance of your SEAFLO 3.2 Gallon (12L) Premium Portable Travel Toilet, Model SFPT-12-03. Please read all instructions carefully before use and retain this manual for future reference.





Image: The SEAFLO 3.2 Gallon (12L) Premium Portable Travel Toilet, Model SFPT-12-03, shown with the lid open, highlighting its compact and modern design.

Key Features

- **Sleek, Lightweight and Durable Modern Design:** Constructed for portability and longevity.
- **Fresh Water Tank With Powerful Piston-Flush:** Ensures effective rinsing with each use.
- **High-Powered Tri-Directional Flush Nozzle:** Provides thorough cleaning of the bowl.
- **Slick Anti-Stick Oversized Bowl:** Designed for easy flushing and cleaning.
- **Detachable Fully-Sealed Holding Tank With Ergonomic Handle:** Facilitates easy transport and disposal of waste.
- **Rotating Dumping Elbow:** Allows for clean and distant emptying of the waste tank.
- **Air Relief Valve Button:** Eliminates dumping gurgle and splash-back for hygienic disposal.
- **Superior Sealed Design:** Prevents leaks, spills, and odors during transport.
- **Removable Seat and Seat Cover:** For convenient cleaning and maintenance.
- **Waste Tank Level Indicator:** Provides visual indication of waste tank capacity to prevent overflow.

MULTIFUNCTIONAL INJECTION PORTABLE TOILET

10L + 12L



Image: The SEAFLO portable toilet positioned on a deck overlooking a scenic ocean view, illustrating its suitability for outdoor and travel

use.

Setup Instructions

Follow these steps for initial setup of your portable toilet:

1. **Separate the Tanks:** Disconnect the upper fresh water tank from the lower waste holding tank. This is typically done by releasing the side latches.
2. **Add Deodorant to Waste Holding Tank:** Pour an appropriate amount of portable toilet deodorant or chemical into the waste holding tank. Refer to the deodorant product's instructions for exact quantities.
3. **Add Fresh Water:** Open the water inlet cap on the fresh water tank and fill it with clean water. Ensure the cap is securely closed after filling.
4. **Combine the Tanks:** Realign the fresh water tank with the waste holding tank and secure the side latches until they click into place, ensuring a tight seal.



Image: A visual guide illustrating the six steps for setting up the SEAFLO portable toilet, including separating tanks, adding deodorant, filling

with fresh water, combining tanks, opening the slide valve, and flushing.

Operating Instructions

To use your SEAFLO portable toilet:

1. **Open Slide Valve:** Before use, pull the slide valve handle located at the front of the waste tank to open the passage to the holding tank.
2. **Flushing:** After use, push the slide valve handle back to close the passage. Then, use the manual piston pump to flush the bowl. Press the pump several times until the bowl is clean.
3. **Air Relief Valve:** When emptying the waste tank, press the air relief valve button to prevent gurgling and splash-back, ensuring a smooth and clean disposal process.
4. **Monitor Waste Level:** Regularly check the waste tank level indicator to determine when the tank needs emptying.

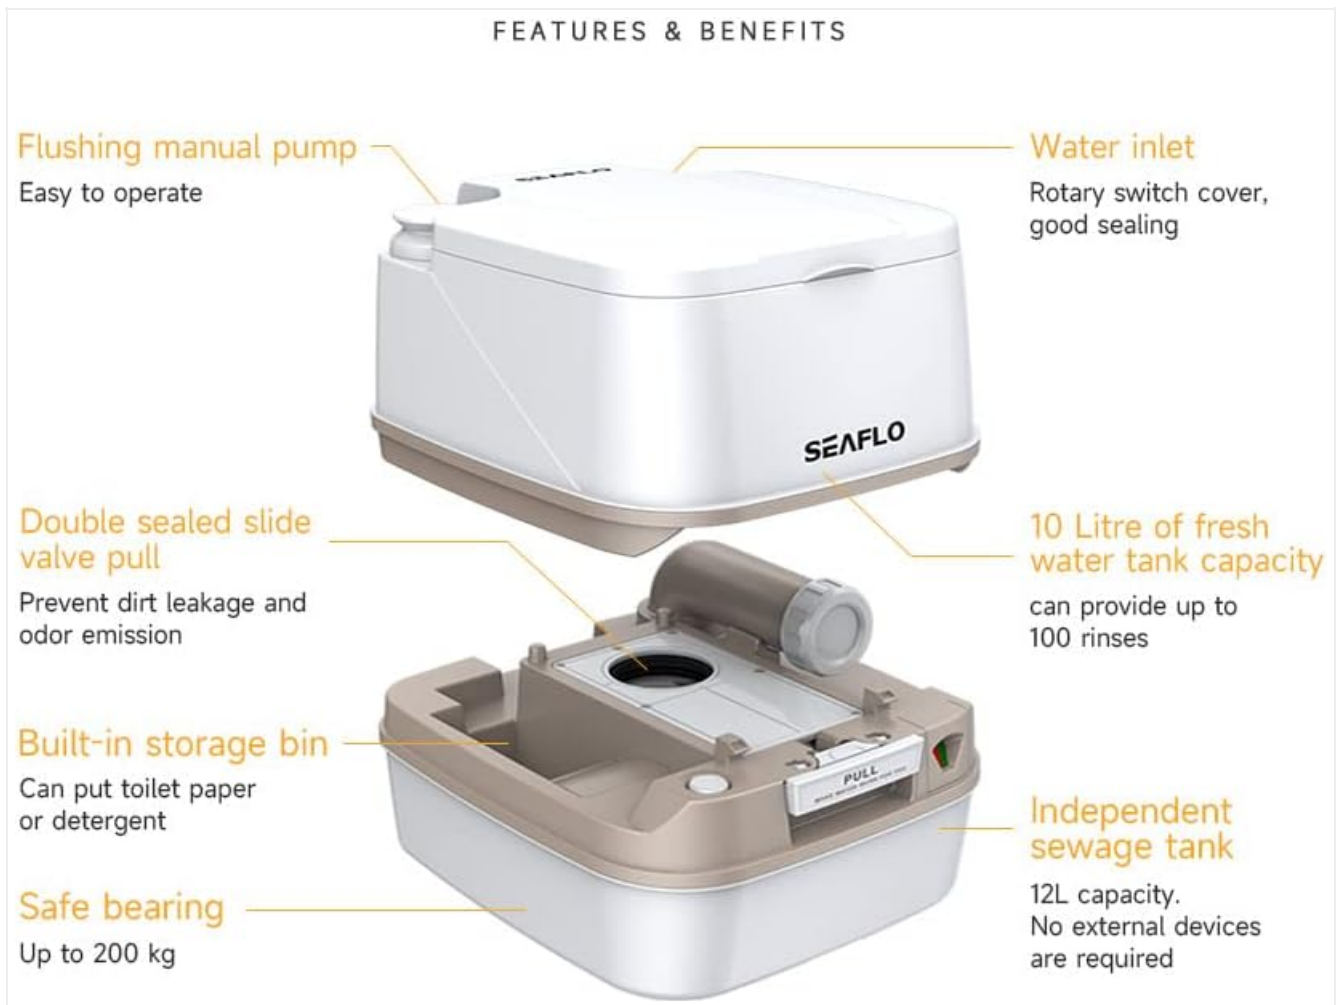


Image: An exploded view diagram highlighting key features such as the flushing manual pump, water inlet, double sealed slide valve pull, built-in storage bin, safe bearing, 10-liter fresh water tank, and independent 12-liter sewage tank.

T-type flush nozzle and bowl

360° vortex scouring. It uses as little as 50ml water to flush the whole bowl and waste tank can be cleaned thoroughly. Ergonomic toilet seat, longer, deeper and more comfortable



Level Indicator

Display the level of content in waste tank,
avoid overflow protection



Image: A detailed view of the T-type flush nozzle and bowl, demonstrating the 360-degree vortex scouring action for thorough cleaning with minimal water.

Maintenance and Cleaning

Proper maintenance ensures hygiene and extends the life of your portable toilet.

- **Emptying the Waste Tank:**
 - a. Ensure the slide valve is closed.
 - b. Separate the fresh water tank from the waste holding tank.
 - c. Carry the waste holding tank using its ergonomic handle to a designated disposal area.
 - d. Rotate the dumping elbow to direct the waste.
 - e. Press the air relief valve button while emptying to prevent gurgling.
 - f. Rinse the waste tank thoroughly with clean water after emptying.
- **Cleaning the Bowl and Seat:** The removable seat and seat cover can be detached for easy cleaning. Use mild soap and water. The anti-stick oversized bowl also facilitates easy cleaning.
- **General Cleaning:** Wipe down the exterior surfaces with a damp cloth and mild detergent as needed. Avoid abrasive cleaners.
- **Storage:** When not in use for extended periods, ensure both tanks are empty and clean. Store in a cool, dry place.





Image: A composite image detailing various components including the shock-proof buckle, built-in storage bin, flushing manual pump, antiskid design, air release button, and upgraded lock buckle for secure tank connection.





Image: A visual representation of the 270-degree rotating emptying spout, designed for hygienic and convenient waste disposal.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Leaks or Odors	Slide valve not fully closed, tanks not securely latched, or seals are dirty/damaged.	Ensure slide valve is completely closed. Check that the upper and lower tanks are securely latched. Inspect seals for debris or damage and clean/replace if necessary.
Ineffective Flush	Insufficient water in fresh water tank, or pump mechanism issue.	Refill the fresh water tank. Ensure the piston pump is operating smoothly; if not, check for obstructions or wear.
Difficulty Emptying Waste Tank	Air relief valve not pressed, or waste material blockage.	Ensure the air relief valve button is pressed during emptying. If blockage occurs, try adding more water and gently shaking the tank (when sealed) to dislodge.
Waste Level Indicator Malfunction	Sensor obstruction or mechanical issue.	Ensure the waste tank is clean. If the issue persists, contact customer support.

Specifications

Feature	Detail
Model Number	SFPT-12-03
Fresh Water Tank Capacity	2.64 Gallon (10L)
Waste Holding Tank Capacity	3.2 Gallon (12L)
Color	White
Material	PP, PA, POM, ABS (Acrylonitrile Butadiene Styrene)
Item Weight	9 Pounds (approx. 4.08 kg)
Product Dimensions (L x W x H)	15.5 x 13.75 x 14 inches (approx. 39.4 x 34.9 x 35.6 cm)
Installation Type	Floor Mounted
Max User Weight	440 LBS (approx. 200 kg)
Flush Type	Manual Piston Pump



Image: Technical drawing displaying the precise dimensions of the SEAFLO portable toilet in both inches and millimeters, including height, width, and depth from various angles.

Warranty and Support

For warranty information or technical support regarding your SEAFLO portable toilet, please refer to the warranty card included with your product or contact SEAFLO customer service directly. Contact details can typically be found on the manufacturer's official website or product packaging.