

[Manuals.plus](#) /

› [QNIGLO](#) /

› QNIGLO Q268 Rechargeable Kids Walkie Talkie Instruction Manual

QNIGLO Q268

QNIGLO Q268 Rechargeable Kids Walkie Talkie Instruction Manual

Brand: QNIGLO

INTRODUCTION

This manual provides essential information for the safe and effective operation of your QNIGLO Q268 Rechargeable Kids Walkie Talkie. Please read it thoroughly before use and retain it for future reference.

The QNIGLO Q268 walkie talkie features clear sound, VOX hands-free communication, private channel codes, monitoring and scanning functions, a built-in flashlight, and convenient USB charging. It is designed for ease of use and durability, making it suitable for various outdoor activities and imaginative play.

PRODUCT OVERVIEW

The QNIGLO Q268 walkie talkie package includes the following items:

- QNIGLO Q268 Rechargeable Walkie Talkies (2 units)
- USB Charging Cable
- Rechargeable Battery (pre-installed)
- User Manual (this document)

Walkie Talkies Recargable

Múltiples métodos de carga
Cable USB-C y batería interna
Económico y respetuoso con el medio ambiente



Hola, bebé

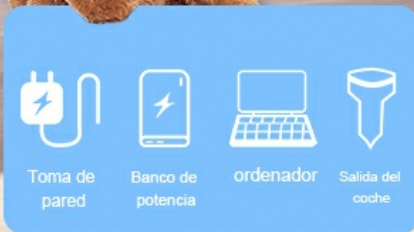


Image: Contents of the QNIGLO Q268 Walkie Talkie package. Shown are two walkie talkies, a USB charging cable, and the user manual.

CONTROLS AND DISPLAY

Familiarize yourself with the buttons and display indicators on your QNIGLO Q268 walkie talkie:



Image: Front view of the QNIGLO Q268 Walkie Talkie, highlighting the LCD screen and control buttons.

- **LCD Screen:** Displays channel number, sub-code, battery level, volume, and signal strength.
- **Power/Menu Button:** Press and hold to power on/off. Short press to access menu settings.
- **Up/Down Buttons:** Navigate menu options and adjust values (e.g., channel, volume).
- **PTT (Push-to-Talk) Button:** Press and hold to transmit your voice. Release to listen.
- **LAMP Button:** Activates the built-in LED flashlight.
- **SOS Button:** Activates an emergency alert.
- **MON (Monitor) Button:** Used for monitoring channels.
- **Call/Ring Button:** Sends a call tone to other walkie talkies on the same channel.

SETUP

1. Charging the Battery

Your QNIGLO Q268 walkie talkie comes with a built-in rechargeable lithium polymer battery. Before first use, ensure the device is fully charged.

1. Locate the USB charging port on the side of the walkie talkie.
2. Connect the provided USB charging cable to the walkie talkie and a compatible USB power source (e.g., wall adapter, computer, power bank).
3. The battery indicator on the LCD screen will show charging status. A full charge typically provides up to 24 hours of average use.



Image: A QNIGLO Q268 Walkie Talkie being charged via its USB port.

2. Power On/Off

- To turn on: Press and hold the **Power/Menu** button until the LCD screen illuminates.
- To turn off: Press and hold the **Power/Menu** button until the LCD screen turns off.

3. Setting Channel and Sub-code

The QNIGLO Q268 offers 8 main channels and 99 sub-codes (encryption codes) for private conversations. All walkie talkies intended to communicate must be set to the same main channel and sub-code.

1. Short press the **Menu** button. The channel number will flash.
2. Use the **Up** or **Down** buttons to select your desired main channel (1-8).
3. Short press the **Menu** button again. The sub-code will flash.
4. Use the **Up** or **Down** buttons to select your desired sub-code (0-99). Setting the sub-code to 0 will disable it.

5. Short press the **Menu** button one more time or wait a few seconds for the setting to be saved automatically.

OPERATING INSTRUCTIONS

1. Making a Call (PTT)

To communicate with another walkie talkie:

1. Ensure both walkie talkies are on the same channel and sub-code.
2. Press and hold the **PTT** button located on the side of the device. Speak clearly into the microphone.
3. Release the **PTT** button to stop transmitting and listen for a response.

2. VOX Function (Hands-Free)

The VOX function allows you to transmit without pressing the PTT button, activating transmission automatically when you speak.

1. Short press the **Menu** button until "VOX" appears on the LCD screen.
2. Use the **Up** or **Down** buttons to select a VOX sensitivity level (1-3, with 3 being most sensitive). Select "OFF" to disable VOX.
3. Press the **PTT** button or wait a few seconds to confirm the setting.



Image: Children using QNIGLO walkie talkies during a bike ride, demonstrating hands-free communication.

3. Monitoring and Scanning

- **Monitor Function:** Press and hold the **MON** button to listen for weak signals on the current channel.
- **Scan Function:** Short press the **Menu** button until "SCAN" appears. Use the **Up** or **Down** buttons to start scanning active channels. Press **PTT** to stop scanning.

4. Call Tones

You can send a call tone to alert other users on the same channel.

- Short press the **Call/Ring** button to send a default call tone.
- To change the call tone: Short press the **Menu** button until "CA" appears. Use the **Up** or **Down** buttons to select one of the 10 available call tones. Press **PTT** or wait to confirm.

5. Keypad Lock

To prevent accidental changes to settings, you can lock the keypad.

- To lock: Press and hold the **Menu** button until a key icon appears on the LCD screen.
- To unlock: Press and hold the **Menu** button again until the key icon disappears.

6. Flashlight

The walkie talkie includes a built-in LED flashlight for convenience in low-light conditions.

- To turn on/off: Short press the **LAMP** button.



Image: The QNIGLO Q268 Walkie Talkie's LED flashlight in use, illuminating a dark area.

MAINTENANCE

- Clean the device with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Keep the walkie talkie dry. Avoid exposure to extreme temperatures or direct sunlight.
- Store the device in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is low or depleted.	Charge the walkie talkie using the provided USB cable.

Problem	Possible Cause	Solution
Cannot communicate with other walkie talkies	Different channels or sub-codes. Out of range.	Ensure all devices are on the same main channel and sub-code. Move closer to the other device.
Interference or unwanted conversations	Other devices using the same channel/sub-code.	Change to a different main channel and/or set a unique sub-code.
Poor sound quality	Weak signal, too far apart, or obstacles.	Move closer to the other device or to an open area. Check volume settings.

SPECIFICATIONS

- **Model Number:** Q268
- **Dimensions:** 14 x 5 x 3 cm
- **Weight:** 300 g
- **Battery:** 1 Lithium Polymer (included)
- **Number of Channels:** 8
- **Frequency Range:** 446.00625-446.09375 MHz
- **Maximum Talk Range:** Up to 1 Kilometer (in open areas)
- **Voltage:** 5 Volts (DC)
- **Water Resistance Level:** Water-resistant
- **Average Battery Life:** 24 Hours
- **Tuner Type:** UHF
- **Connectivity Protocol:** PMR446

SAFETY INFORMATION

- Do not attempt to disassemble or modify the device.
- Keep the walkie talkie away from heat sources and direct flame.
- Supervise young children during use to ensure proper handling and safety.
- Dispose of batteries and electronic components responsibly according to local regulations.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your QNIGLO Q268 Walkie Talkie, please do not hesitate to contact

us. Refer to your purchase documentation for specific warranty details.
You can find more information and contact details on the official QNIGLO website or through your retailer.

© 2023 QNIGLO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C5T6WMTV>

More documents and user manuals: <https://manuals.plus/>