

[Manuals.plus](#) /

› [Korona](#) /

› Korona Martha 73232 Digital Glass Scale XXL Instruction Manual

Korona 73232

Korona Martha 73232 Digital Glass Scale XXL Instruction Manual

Model: 73232

INTRODUCTION

Thank you for choosing the Korona Martha 73232 Digital Glass Scale XXL. This manual provides essential information for the safe and efficient operation of your new scale. Please read these instructions carefully before first use and keep them for future reference. This scale is designed for personal body weight measurement, featuring an extra-large weighing surface, high capacity, and precise graduation.



Image: The Korona Martha 73232 Digital Glass Scale XXL, showcasing its sleek design and large display.

SAFETY INFORMATION

- Place the scale on a hard, flat, and stable surface. Uneven or soft surfaces (like carpets) can affect accuracy.

- The glass surface can be slippery when wet. Ensure the surface is dry before stepping on the scale.
- Do not jump on the scale or drop heavy objects on it, as this may damage the glass and internal components.
- Keep the scale away from extreme temperatures, direct sunlight, and high humidity.
- This scale is for personal use only and not intended for commercial or medical purposes.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- 1 x Korona Martha 73232 Digital Glass Scale XXL
- 1 x CR2032 Battery (pre-installed or included separately)

SETUP

1. **Battery Installation:** If the battery is not pre-installed, open the battery compartment on the underside of the scale. Insert the CR2032 battery with the positive (+) side facing up. Close the compartment securely.
2. **Placement:** Place the scale on a firm, flat, and level surface. Avoid soft surfaces like carpets or rugs, as these can affect measurement accuracy.
3. **Initial Calibration:** For the first use or after moving the scale, it is recommended to calibrate it. Briefly step on the scale until the display shows a reading, then step off. The display will show '0.0' or turn off. The scale is now calibrated and ready for use.

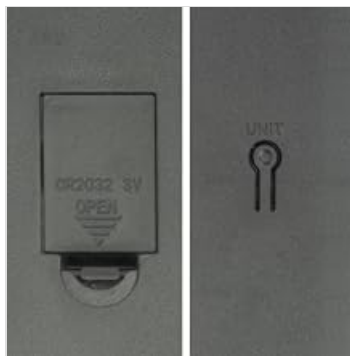


Image: Close-up of the battery compartment and unit switch on the underside of the scale.



Image: Detail of a rubber foot, ensuring stable placement on various surfaces.

OPERATING INSTRUCTIONS

1. **Step On:** Gently step onto the center of the scale with bare feet. The scale will automatically turn on.
2. **Wait for Reading:** Stand still on the scale. The display will show your weight. It may flash a few times before settling on a final reading.

3. **Auto-Off:** The scale will automatically turn off after a few seconds of inactivity to conserve battery life.



Image: The Korona Martha 73232 scale displaying a weight measurement on its large LCD screen.



Image: A detailed view of the clear LCD display, showing a weight reading in kilograms.

UNIT CONVERSION (KG/LB)

Your Korona Martha 73232 scale allows you to switch between kilograms (kg) and pounds (lb).

1. Locate the 'UNIT' button on the underside of the scale, usually near the battery compartment.
2. Press this button to toggle between 'kg' and 'lb'. The selected unit will be displayed on the LCD screen.

KORONA[®]



U-STRUCTURE
4 RUBBER FEET
ROUNDED EDGES



SAFETY GLASS
MATT SURFACE
FLAT DESIGN



LCD DISPLAY
2 UNITS / (KG/LB)
BATTERY CASE

MARTHA



Image: The underside of the scale, highlighting the unit switch button for changing between kilograms and pounds.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the scale surface with a slightly damp cloth. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a dry place at room temperature. Avoid storing it vertically or in areas with high humidity.
- **Battery Replacement:** When the display shows 'Lo', it's time to replace the battery. Open the battery compartment, remove the old CR2032 battery, and insert a new one, ensuring correct polarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No display / Scale does not turn on	Battery is dead or incorrectly installed.	Check battery polarity or replace with a new CR2032 battery.
'Lo' displayed	Low battery.	Replace the CR2032 battery.
'Err' displayed	Overload or unstable measurement.	Ensure weight does not exceed 200 kg. Step off and re-calibrate by stepping on and off, then re-measure.
Inaccurate readings	Scale on an uneven or soft surface; not calibrated; moved recently.	Place scale on a hard, flat surface. Re-calibrate the scale by stepping on and off before taking a measurement.

SPECIFICATIONS

Feature	Detail
Model Number	73232
Brand	Korona
Dimensions (L x W x H)	40 x 30 x 2.5 cm
Weight	1.5 Kilograms
Maximum Capacity	200 Kilograms
Graduation	100 Grams
Material	Glass
Display Type	LCD
Power Source	1 x CR2032 Battery (included)
Special Features	Extra-large weighing surface, Unit conversion (kg/lb), Automatic shut-off, Overload indicator

WARRANTY AND SUPPORT

Korona products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Korona website. If you encounter any issues or require technical assistance, please contact Korona customer support through their official channels.

For further assistance, please visit: [Korona Official Website](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question