

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSTAR](#) /

› [COSTAR 2-in-1 Espresso Machine \(Model: Espresso Master 2 Plus\) User Manual](#)

## COSTAR Espresso Master 2 plus

# COSTAR 2-in-1 Espresso Machine

Model: Espresso Master 2 Plus

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure the voltage matches your power supply before connecting.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Use only manufacturer-recommended accessories.
- Keep children away from the appliance during operation.
- Avoid contact with hot surfaces. Use handles or knobs.
- Place the appliance on a stable, flat surface away from hot gas or electric burners.
- This appliance is for household use only.

## 2. PRODUCT OVERVIEW

---

### 2.1 Components Included

- 1 x COSTAR 2-in-1 Espresso Machine
- 1 x Coffee Tamper
- 1 x Instruction Manual
- 1 x Removable Water Tank
- 2 x Cup Filters (for coffee powder and capsules)

### 2.2 Specifications

Feature	Specification
---------	---------------

Brand	COSTAR
Model Name	Espresso Master 2 Plus
Colour	Black
Product Dimensions	28D x 11.5W x 25H Centimeters
Special Feature	Lightweight, Removable Tank, Single Cup Brew
Coffee Maker Type	Espresso Machine
Style	2-in-1 (Capsule & Coffee Powder)
Specific Uses For Product	Americano, Espresso
Operation Mode	Manual
Voltage	240 Volts
Power Source	Electric
Pump Pressure	20 Bar
Water Tank Capacity	600 Milliliters (0.6L)
Item Weight	3 kg 400 g
Heating System	Fast Heating
Human Interface Input	Buttons

### 2.3 Key Features

- **2-in-1 Compatibility:** Brews both coffee capsules (Nespresso, Starbucks, Lavazza, Coffeeza compatible) and ground coffee powder.
- **20-Bar High-Pressure Extraction:** Ensures rich flavor and a perfect crema layer for every espresso.
- **Fast Heating System:** Coffee is ready in approximately 25 seconds.
- **Simple One-Touch Operation:** Easy to use interface for quick brewing.
- **Removable Water Tank:** 600ml capacity for convenience and easy refilling.

## 3. SETUP

---

1. **Unpack:** Carefully remove all packaging materials and components from the box.
2. **Placement:** Place the espresso machine on a stable, flat, heat-resistant surface, away from water sources and direct sunlight. Ensure adequate ventilation around the machine.
3. **Clean Components:** Wash the removable water tank, drip tray, and cup filters with warm, soapy water. Rinse thoroughly and dry completely before reassembling.
4. **Fill Water Tank:** Remove the water tank from the back of the machine. Fill it with fresh, cold drinking water up to the 'MAX' line. Do not exceed the maximum fill level. Reattach the water tank securely.

5. **Initial Rinse Cycle:** Before first use, perform a rinse cycle without coffee. Plug in the machine. Press the power button to turn it on. Once the indicator light stops blinking (indicating heating is complete), place an empty cup under the dispenser. Press the brew button (single cup or double cup, either will work for rinse) to run water through the system. Repeat this process 2-3 times to clean any manufacturing residue.



Figure 3.1: Filling the 600ml removable water tank.

## 4. OPERATION

---

### 4.1 Brewing with Coffee Capsules

1. Ensure the water tank is filled with fresh water.
2. Open the machine's front cover and pull out the adapter holder.
3. Insert the capsule adapter into the holder.
4. Place your desired coffee capsule into the capsule adapter.
5. Close the adapter holder and push it back into the machine until it clicks into place.
6. Place a cup on the drip tray.
7. Press the power button to turn on the machine. Wait for the indicator light to stop blinking (approx. 25 seconds) to indicate it's heated.
8. Press the single or double cup brew button to start brewing. The machine will automatically stop when the selected volume is dispensed.



Figure 4.1: Inserting a coffee capsule.

## 4.2 Brewing with Coffee Powder

1. Ensure the water tank is filled with fresh water.
2. Open the machine's front cover and pull out the adapter holder.
3. Insert the coffee powder adapter into the holder.
4. Add your preferred amount of ground coffee powder into the adapter. Use the provided tamper to flatten the coffee evenly.
5. Close the adapter holder and push it back into the machine until it clicks into place.
6. Place a cup on the drip tray.
7. Press the power button to turn on the machine. Wait for the indicator light to stop blinking (approx. 25 seconds) to indicate it's heated.
8. Press the single or double cup brew button to start brewing. The machine will automatically stop when the selected volume is dispensed.



Figure 4.2: Adding and tamping coffee powder.

## 4.3 General Operation Tips

- For best results, use fresh, cold water.
- Pre-heat your cup by running a short hot water cycle without coffee.
- Adjust coffee grind size for optimal extraction when using coffee powder.

Your browser does not support the video tag.

Video 4.3: This video demonstrates the basic operation of the COSTAR 2-in-1 Espresso Machine, including filling the water tank, inserting the coffee adapter (for both capsules and powder), and initiating the brewing process with one-touch buttons.

## 5. MAINTENANCE & CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your espresso machine.

### 5.1 Daily Cleaning

- **Drip Tray:** Empty and clean the drip tray after each use or when the indicator is visible. Wash with warm, soapy water and rinse.
- **Water Tank:** Empty any remaining water from the tank daily. Rinse and refill with fresh water before each use. Clean thoroughly with warm, soapy water weekly.
- **Coffee Adapters:** Remove and rinse the coffee capsule/powder adapters immediately after use to prevent coffee residue buildup.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scourers.

### 5.2 Descaling

Descaling is essential to remove mineral deposits that can affect machine performance and coffee taste. The frequency depends on water hardness and usage, but generally every 2-3 months.

1. Empty the water tank and fill it with a descaling solution (follow descaler manufacturer's instructions) or a mixture of white vinegar and water (1:1 ratio).
2. Place a large container under the coffee dispenser.
3. Turn on the machine and allow it to heat up.
4. Run several brew cycles until the water tank is empty.
5. Rinse the water tank thoroughly and fill it with fresh water.
6. Run several more cycles with fresh water to flush out any remaining descaling solution.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Machine does not turn on	Not plugged in; Power outlet fault	Check power connection; Try a different outlet.
No coffee dispenses	Water tank empty; Machine not heated; Clogged nozzle	Fill water tank; Wait for indicator light to stabilize; Perform descaling.
Coffee is too weak	Insufficient coffee powder; Coarse grind; Used capsule/powder adapter	Increase coffee powder; Use finer grind; Ensure fresh capsule/powder.

Coffee is too strong	Too much coffee powder; Fine grind	Reduce coffee powder; Use coarser grind.
Water leaks from machine	Water tank not seated correctly; Overfilled water tank	Ensure water tank is properly installed; Do not overfill.

## 7. WARRANTY AND SUPPORT

COSTAR products are manufactured with quality and care. For any issues or support, please contact our customer service.

### 7.1 Manufacturer Information

**Manufacturer:** FOSHAN LXGEEK ROBOT TECHNOLOGY AND SERVICE CO.,LTD

**Address:** Room A308-1, Research Building A, Fogao High-Tech Think Tank, Nanhai Software & Tech Park, Shishan Town, Nanhai District, Foshan, China.

**E-mail:** lxgeek0757@gmail.com

### 7.2 Importer and Customer Service (India)

**Importer and Marketed by:** E-RISING (INDIA) PRIVATE LIMITED

**Address:** Gala No.: 5 to 9, A-8, Opposite Sonadevi Logistics Park, Lonad Pipeline Road, Village-Lonad, Bhiwandi, Thane, Maharashtra, 421302.

**Customer Service Contact Number:** +91 9579514004

**E-mail:** Support@costarcosmos.com

**WhatsApp:** 9579514004

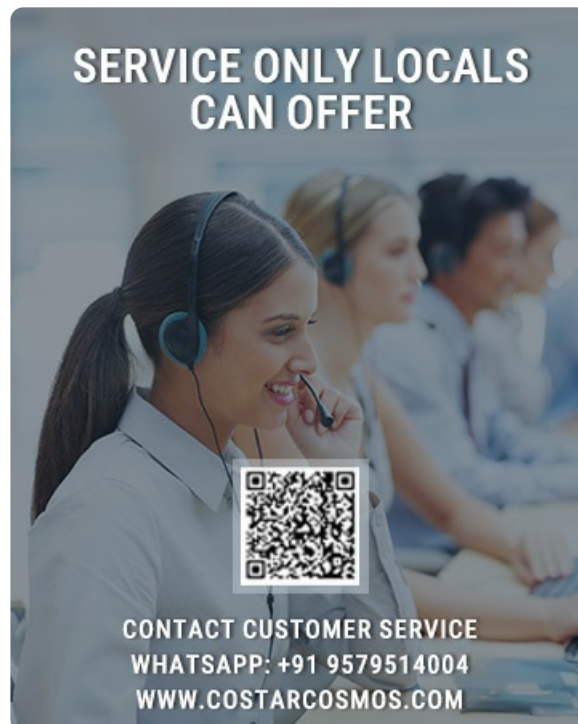


Figure 7.1: Customer service contact information.

## 8. CERTIFICATIONS

---

The COSTAR Espresso Machine complies with various international standards:

### Global Certifications



Figure 8.1: Global Certifications for the product.