

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PERLESMITH](#) /

› [PERLESMITH Full Motion TV Wall Mount Instruction Manual](#)

PERLESMITH PSLFK11-24

PERLESMITH Full Motion TV Wall Mount

Model: PSLFK11-24

INTRODUCTION

Welcome to the PERLESMITH Full Motion TV Wall Mount instruction manual. This mount is designed to securely hold your 32-75 inch television, providing flexible viewing angles and saving space. Please read this manual carefully before installation and use to ensure safe and proper operation.

SAFETY INFORMATION

Important Safety Instructions

- **WARNING:** Do not install on drywall alone. Ensure installation into wood studs or solid concrete walls.
- Verify your TV's weight and VESA pattern are within the mount's specifications (Max 60kg, VESA 200x200mm to 600x400mm).
- Use only the provided hardware. If any parts are missing or damaged, contact PERLESMITH support.
- Always have at least two people for installation to prevent injury or damage.
- Ensure the wall structure can support the combined weight of the mount and the TV.
- Do not overtighten screws.
- Keep children and pets away during installation.

PACKAGE CONTENTS

Please check that all components are included and undamaged.

Main Components:

- Wall Plate Assembly
- TV Brackets (2)
- Mounting Hardware Kit (various screws, washers, spacers, anchors)

Tools Required (Not Included):

- Drill
- Stud Finder
- Level
- Phillips Head Screwdriver
- Socket Wrench
- Pencil
- Measuring Tape

INSTALLATION GUIDE

Step 1: Verify TV Compatibility

This mount is compatible with TVs from 32 to 75 inches, weighing up to 60kg. Check your TV's VESA pattern (the distance between the mounting holes on the back of your TV). Compatible VESA patterns range from 200x200mm to 600x400mm. (Note: 100x100mm is not supported).

取り付け可能なテレビ




This image illustrates the compatible TV sizes (32-75 inches) and various VESA mounting patterns supported by the wall mount, including 200x100mm, 200x200mm, 200x300mm, 200x400mm, 300x200mm, 300x300mm, 300x400mm, 400x200mm, 400x300mm, 400x400mm, 500x300mm, and 600x400mm.

Step 2: Choose Your Wall Type

This mount is designed for installation on wood stud walls or solid concrete walls. **DO NOT install on drywall alone.**



テレビ壁掛け金具 フルモーション式

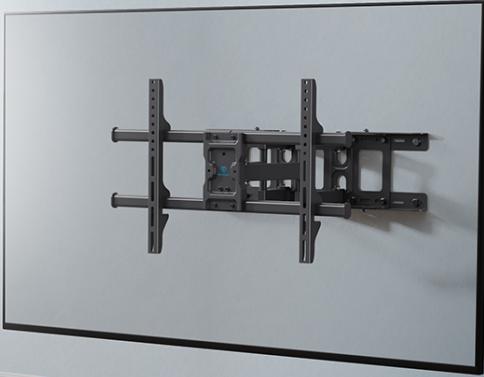

This diagram shows the two compatible wall types for installation: wood stud walls (with stud spacing of 406mm, 457mm, or 610mm) and solid concrete walls. It also includes a warning not to install on drywall without studs.

For Wood Stud Walls:

1. Locate the center of the wood studs using a stud finder. Mark the drilling locations.
2. Drill pilot holes (refer to manual for drill bit size).
3. Attach the wall plate to the studs using the provided lag bolts and washers. Ensure it is level.

For Solid Concrete Walls:

1. Mark the drilling locations on the concrete wall.
2. Drill pilot holes (refer to manual for drill bit size).
3. Insert concrete anchors into the drilled holes.
4. Attach the wall plate to the wall using the provided lag bolts and washers. Ensure it is level.

Step 3: Attach TV Brackets to TV

Carefully place your TV face down on a soft, clean surface.

Attach the two TV brackets to the back of your TV using the appropriate screws, washers, and spacers from the hardware kit. Ensure the brackets are centered and securely fastened. If your TV has an uneven back, use spacers to create a flat mounting surface.



This image shows the TV brackets being attached to the back of a television, illustrating the connection points and the overall appearance of the mounted brackets.

Step 4: Hang TV on Wall Plate

With assistance, carefully lift the TV and hook the TV brackets onto the wall plate. Ensure the TV is securely seated on the wall plate. Engage the safety locks on the TV brackets to prevent accidental dislodging.



This image displays the PERLESMITH full-motion TV wall mount itself, ready for a television to be attached. It highlights the robust dual-arm design and the VESA mounting plate.


OPERATING INSTRUCTIONS

Adjusting Your TV Position

This full-motion mount allows for various adjustments to achieve optimal viewing angles:

- **Tilt:** Tilt the TV up to 5° upwards and down to 15° downwards to reduce glare and improve viewing from different heights.
- **Swivel:** Swivel the TV up to 45° left or right to direct the screen towards your viewing area.
- **Extension:** Extend the TV from the wall from 76mm (3 inches) up to 391mm (15.4 inches) for flexible positioning.
- **Level Adjustment:** Fine-tune the horizontal level of the TV after installation.


取り付け可能な壁

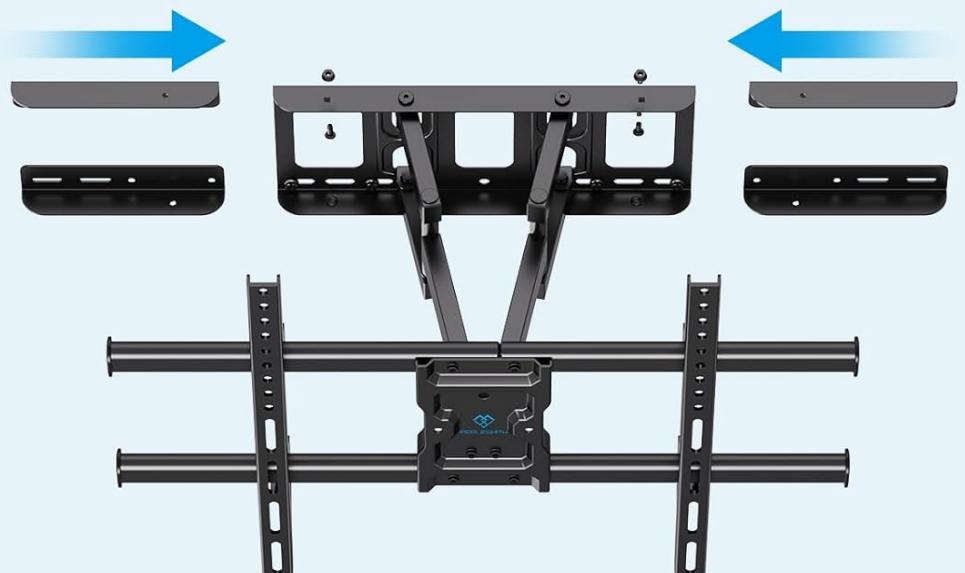

406mm/457mm/610mm


木間柱

ソリッド壁

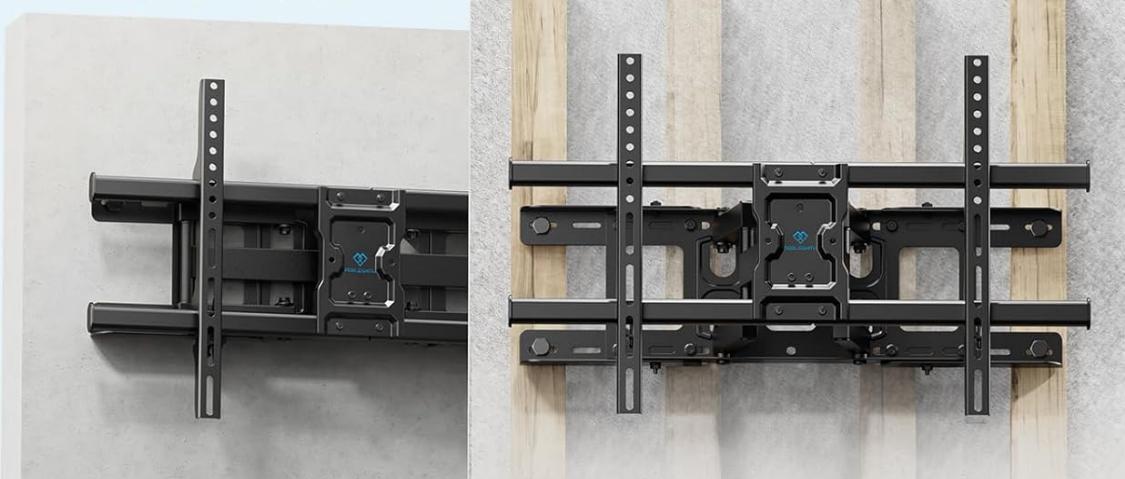

This image demonstrates the multi-angle adjustment capabilities of the TV mount, including upward tilt (5°), downward tilt (15°), and left/right swivel ($\pm 45^\circ$), allowing for flexible viewing positions.

見やすい多角度調節可能

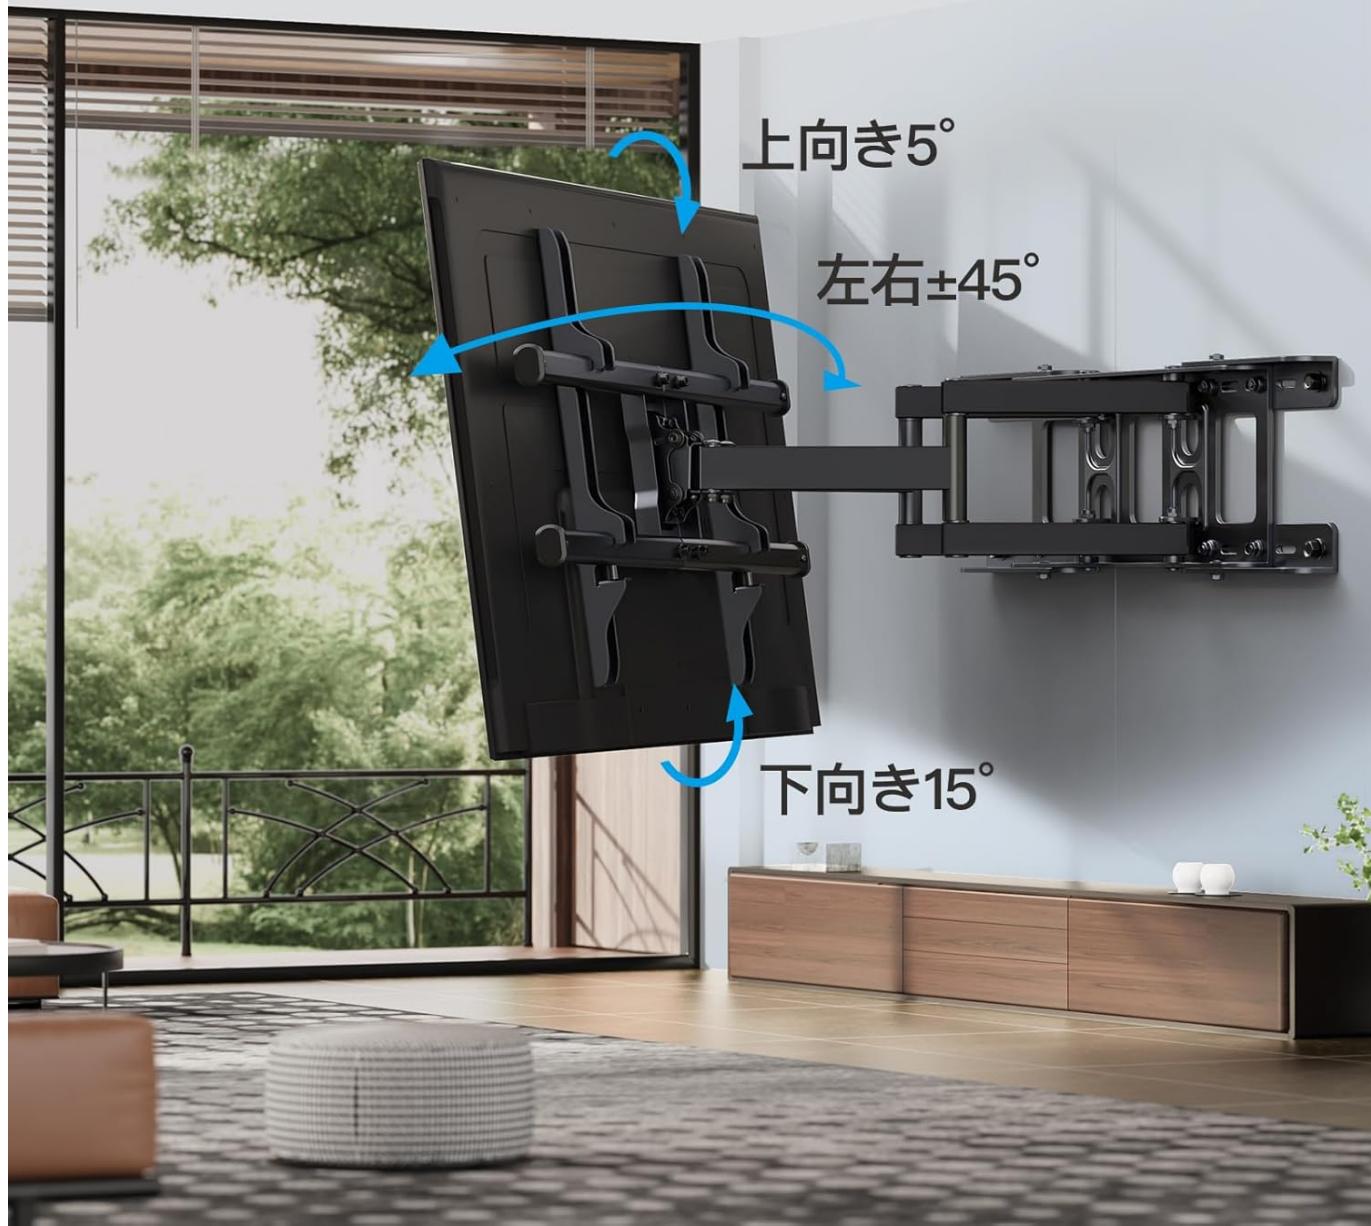

This image illustrates the extension range of the TV mount, showing how it can be pulled out from the wall up to 391mm and retracted to 76mm, providing flexibility for viewing and space-saving.

MAINTENANCE

- Periodically check that all screws and connections are secure.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners.
- Do not hang objects from the mount or TV.

TROUBLESHOOTING

Common Issues and Solutions:

TV is not level after installation:

Use the level adjustment feature on the mount to fine-tune the horizontal position. Refer to the installation guide for

specific instructions.

Mount feels unstable:

Ensure all lag bolts are securely fastened to the wall studs or concrete. Recheck the wall type and installation method. If issues persist, contact PERLESMITH support.

TV does not fit the mount:

Verify your TV's weight and VESA pattern against the specifications. This mount supports 32-75 inch TVs up to 60kg with VESA patterns from 200x200mm to 600x400mm.

Missing or damaged parts:

Do not proceed with installation. Contact PERLESMITH support immediately for replacement parts.

SPECIFICATIONS

Feature	Detail
Model Number	PSLFK11-24
Screen Size Compatibility	32 - 75 inches
Weight Capacity	Up to 60 kg (132 lbs)
VESA Compatibility	200x200mm to 600x400mm (Horizontal x Vertical)
Tilt Angle	+5° / -15°
Swivel Angle	±45°
Extension from Wall	76mm - 391mm (3 - 15.4 inches)
Material	Cold-rolled steel
Color	Black

WARRANTY AND SUPPORT


PERLESMITH offers a 3-year quality assurance service from the date of purchase for all its products. If you encounter any issues or have questions, please do not hesitate to contact PERLESMITH support. We are committed to providing excellent service and ensuring your satisfaction.

For support, please visit the official PERLESMITH website or contact our customer service team via the contact information provided with your product packaging.

OFFICIAL PRODUCT VIDEOS

No official product videos are available for embedding at this time.

Related Documents - PSLFK11-24

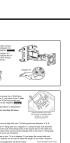	<p>PERLESMITH PSPILFK1 Full-Motion TV Wall Mount Installation Guide</p> <p>PERLESMITH PSPILFK1 instruction manual for a full-motion TV wall mount. This guide details safe installation for TVs up to 132 lbs (60kg) on wood studs, concrete, and brick walls. Covers VESA compatibility, parts, and step-by-step assembly for optimal viewing.</p>
	<p>PERLESMITH PSMFK1 Full-Motion TV Wall Mount Installation Manual</p> <p>Comprehensive instruction manual for the PERLESMITH PSMFK1 full-motion TV wall mount. Learn how to safely install and adjust your TV mount for VESA compatibility, various wall types, and optimal viewing angles.</p>
	<p>PERLESMITH PSMFK12 Full-Motion TV Wall Mount Instruction Manual</p> <p>Comprehensive instruction manual for the PERLESMITH PSMFK12 Full-Motion TV Wall Mount, covering installation, safety, and adjustment for TVs up to 77lbs with VESA patterns up to 400x400mm.</p>
	<p>PERLESMITH PSXLF01 Full-Motion TV Wall Mount Installation Manual</p> <p>Comprehensive instruction manual for the PERLESMITH PSXLF01 Full-Motion TV Wall Mount. Covers compatibility checks, parts list, and detailed step-by-step installation instructions for mounting on wood studs and solid concrete walls. Includes safety warnings and adjustment guides.</p>
	<p>PERLESMITH PSMFK4 Full-Motion TV Wall Mount Installation Guide</p> <p>Comprehensive instruction manual for the PERLESMITH PSMFK4 Full-Motion TV Wall Mount, covering compatibility checks, parts identification, and step-by-step installation for various TV types and wall materials.</p>
	<p>Invision HDTV-E Single Arm TV Wall Mount Instruction Manual</p> <p>Comprehensive instruction manual for the Invision HDTV-E single arm TV wall mount. Covers unboxing, VESA compatibility, wall mounting (wood stud and brick/concrete), TV attachment, cable management, and adjustments for 24-60 inch screens.</p>