

[Manuals.plus](#) /

› [Mobility Lab](#) /

› RYGHT TEMPO R484338 Wireless Headphones User Manual

Mobility Lab TEMPO R484338

RYGHT TEMPO R484338 Wireless Headphones User Manual

Model: TEMPO R484338 | Brand: Mobility Lab

INTRODUCTION

Thank you for choosing the RYGHT TEMPO R484338 Wireless Headphones. This manual provides essential information for the safe and optimal use of your device. Please read it carefully before use and retain it for future reference. The RYGHT TEMPO headphones offer clear stereo sound, up to 20 hours of battery life, a foldable and lightweight design, intuitive controls for music and calls, and comfortable padded earcups.

PACKAGE CONTENTS

Ensure all items are present in the package:

- RYGHT TEMPO Wireless Headphones
- 3.5mm Jack Cable
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your RYGHT TEMPO headphones.



Figure 1: RYGHT TEMPO Wireless Headphones, showcasing the overall design.

Casque circum-aural

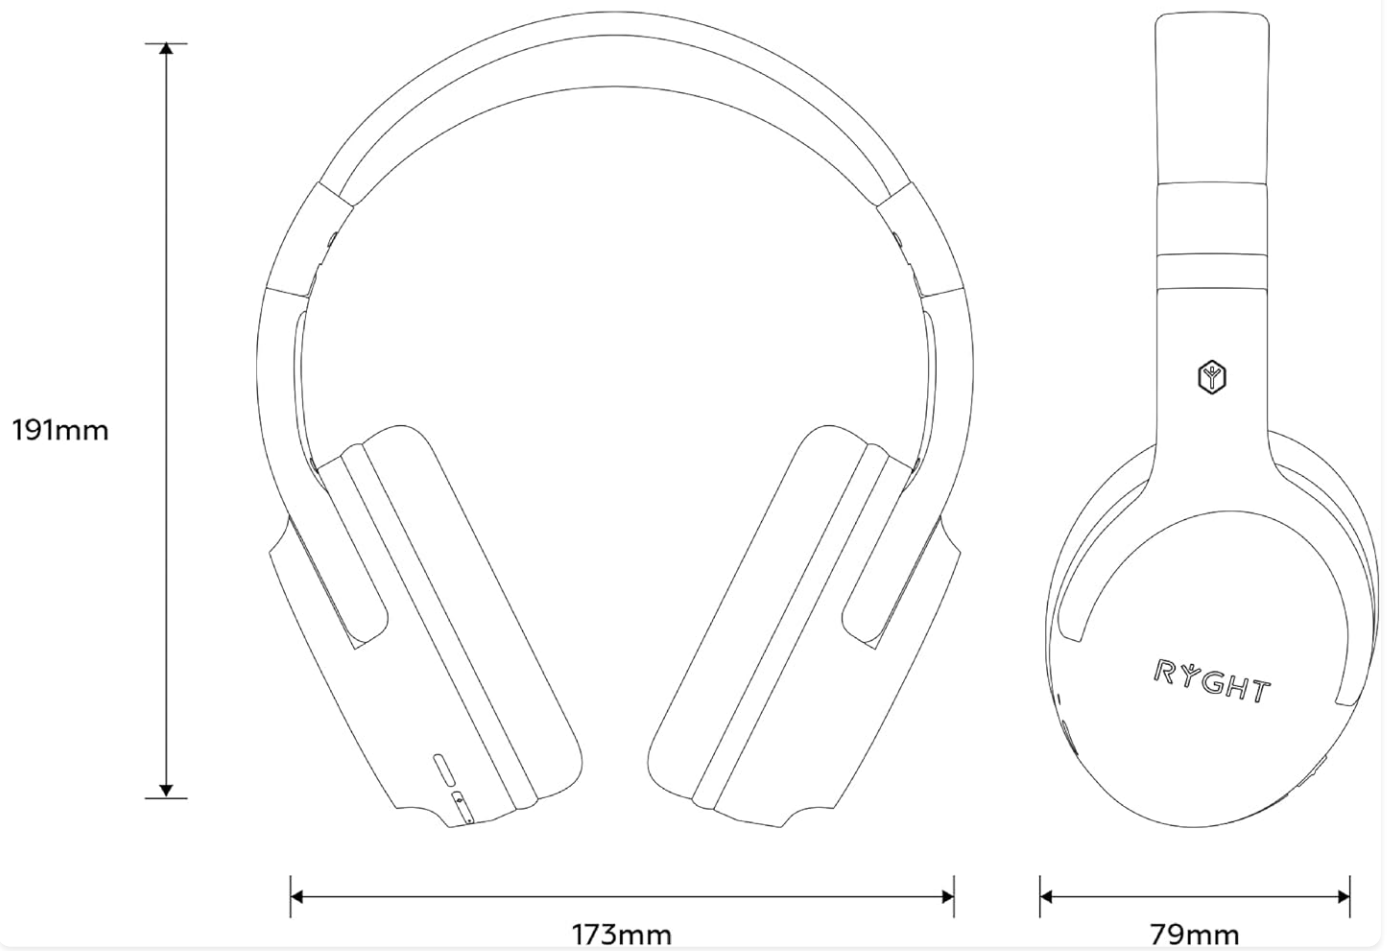


Figure 2: Detailed view of the control buttons on the earcup, including volume, track control, and multi-function button.

Micro intégré 20h d'autonomie



Figure 3: Close-up of the integrated microphone and USB-C charging port, highlighting the 20-hour battery life capability.

Arceau et oreillettes rembourrés



Figure 4: View of the padded headband and earcups, designed for comfort during extended use.

SETUP

1. Charging the Headphones

Before first use, fully charge your RYGHT TEMPO headphones.

1. Connect the supplied USB-C charging cable to the charging port on the headphones.
2. Connect the other end of the USB-C cable to a USB power source (e.g., computer, wall adapter).
3. The LED indicator will show charging status. A full charge takes approximately 150 minutes (2.5 hours).
4. Once fully charged, the LED indicator will change or turn off, depending on the model. Disconnect the cable.

2. Bluetooth Pairing

To connect your headphones wirelessly to a device:

1. Ensure the headphones are charged and turned off.
2. Press and hold the multi-function button (usually the power button) for a few seconds until the LED indicator flashes rapidly, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "RYGHT TEMPO" from the list of found devices.
5. Once paired, the LED indicator will typically show a solid blue light or flash slowly.

3. Wired Connection (Optional)

You can also use the headphones with the included 3.5mm jack cable:

1. Plug one end of the 3.5mm jack cable into the audio input port on the headphones.
2. Plug the other end into the 3.5mm audio output jack of your device.
3. The headphones will operate in passive mode, meaning no battery power is required for audio playback.



Figure 5: Illustrates the dual connectivity options: wireless Bluetooth and wired via 3.5mm jack.

Power On/Off

- **Power On:** Press and hold the multi-function button until the LED indicator lights up.
- **Power Off:** Press and hold the multi-function button until the LED indicator turns off.

Music Playback

- **Play/Pause:** Short press the multi-function button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.
- **Next Track:** Long press the '+' button.
- **Previous Track:** Long press the '-' button.

Call Management

- **Answer/End Call:** Short press the multi-function button.
- **Reject Call:** Long press the multi-function button.

Voice Assistant

- **Activate Voice Assistant:** Double-press the multi-function button.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your headphones:

- Wipe the headphones with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Avoid getting moisture into any openings.

Storage

The RYGHT TEMPO headphones feature a foldable design for convenient storage:

- Fold the earcups inward to reduce their size.
- Store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on top of the headphones.



Pliable et pivotant

Figure 6: The headphones in their folded position, demonstrating their portable design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low or depleted battery.	Charge the headphones fully using the supplied USB-C cable.
No sound or low volume.	Volume too low on headphones or device; improper connection.	Increase volume on both the headphones and the connected device. Ensure Bluetooth is connected or the 3.5mm cable is fully inserted.

Problem	Possible Cause	Solution
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing LED). Turn Bluetooth off and on again on your device. Move headphones closer to the device.
Sound quality is poor.	Weak Bluetooth signal; interference; low-quality audio source.	Move closer to the connected device. Avoid obstacles between headphones and device. Try a different audio source.

SPECIFICATIONS

Model Name	TEMPO
Model Number	R484338
Connectivity Technology	Wireless (Bluetooth 5)
Form Factor	Over-Ear (Circum-Auriculaire)
Impedance	32 Ohms
Sound Isolation	Acoustic Isolation
Charging Time	150 minutes (2.5 hours)
Battery Life	Up to 20 hours
Weight	160 Grams
Dimensions (L x W x H)	173 x 191 x 79 mm
Compatible Devices	Computers, Smartphones, Tablets
Control Type	Voice control, Media control, Volume control, Call control (Tactile)
Included Components	Headphones, Jack Cable, USB-C Cable, User Manual
Material	Nylon or Neoprene
Water Resistance Level	Not waterproof

WARRANTY AND SUPPORT

Your RYGHT TEMPO R484338 Wireless Headphones are covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Mobility Lab customer service through their official website or the contact information provided with your purchase.



