



Manuals.plus /

- › Rosieres /
- › ROSIERES RDH32/1 Ceramic Hob Domino Instruction Manual

Rosieres RDH32/1

ROSIERES RDH32/1 Ceramic Hob Domino User Manual

Model: RDH32/1 (Reference: 8059019067476)

Overview Installation **Safety Information** **Product**
Operation Maintenance Troubleshooting Specifications

1. SAFETY INFORMATION

Please read this instruction manual carefully before installing or using your new Rosieres RDH32/1 ceramic hob. Keep this manual for future reference. Incorrect installation or use may cause injury or damage.

General Safety Precautions

- **Electrical Safety:** This appliance must be installed by a qualified electrician in accordance with local wiring regulations. Ensure the voltage and frequency match the ratings on the appliance's rating plate.
- **Heat Warning:** The hob surface and surrounding areas become hot during use. Do not touch hot surfaces. Use oven mitts or pot holders.
- **Children and Vulnerable Persons:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children away from the appliance when it is in operation.
- **Cleaning:** Always disconnect the appliance from the power supply before cleaning. Allow the hob to cool down completely before cleaning.
- **Ventilation:** Ensure adequate ventilation around the appliance during installation and operation.
- **Flammable Materials:** Do not store flammable materials near the hob.

2. PRODUCT OVERVIEW

The Rosieres RDH32/1 is a compact 30 cm ceramic hob domino, designed for efficient cooking in smaller spaces. It features two radiant cooking zones, precise touch controls, and a built-in timer for convenient meal preparation.

Key Features:

- 30 cm width, ideal for compact kitchens.
- Two high-efficiency radiant cooking zones.
- Main cooking zone with 1800 W power.
- Sensitive touch controls for easy operation.
- Integrated timer function.
- Durable ceramic glass surface.

Components:

- 1. Ceramic Glass Surface:** The main cooking area.
- 2. Cooking Zones:** Two distinct areas for placing cookware.
- 3. Control Panel:** Touch-sensitive area for power, zone selection, and timer.
- 4. Residual Heat Indicators:** Lights that indicate if a cooking zone is still hot after use.

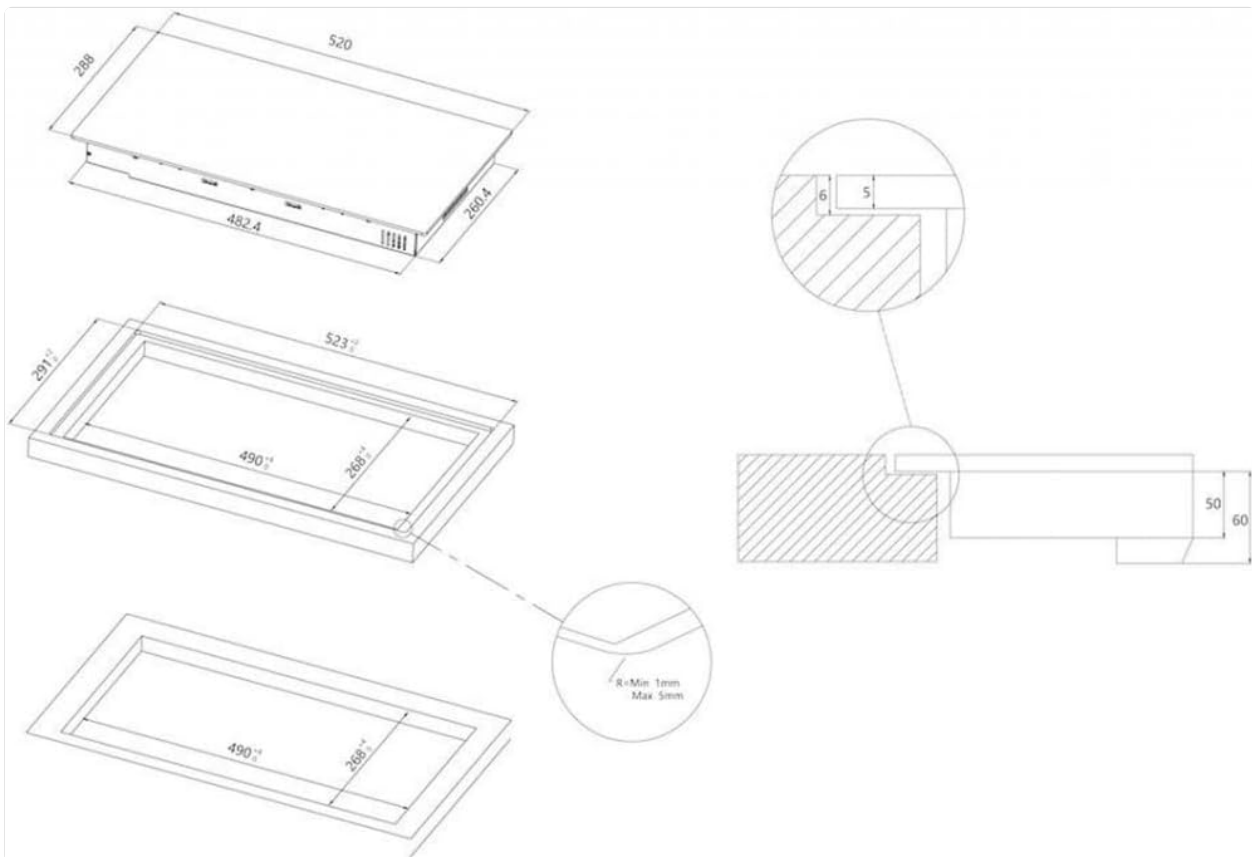


Image: The Rosieres RDH32/1 ceramic hob domino, showcasing its sleek black ceramic glass surface and touch control panel. The hob features two distinct cooking zones.

3. INSTALLATION

Important: Installation must be carried out by a qualified technician in accordance with all local regulations and standards. Incorrect installation can lead to electric shock, fire, or damage to the appliance.

Pre-Installation Checks:

- Ensure the worktop material is heat-resistant and stable.
- Verify that the electrical supply meets the appliance's requirements (see Technical Specifications).
- Ensure adequate ventilation space below and around the hob.

Worktop Cutout Dimensions:

The hob is designed for built-in installation. The following dimensions are critical for creating the correct cutout in your worktop. Refer to the installation diagram for visual guidance.

Overall Hob Dimensions (Top): Approximately 520 mm (Length) x 288 mm (Width).

Hob Base Dimensions: Approximately 482.4 mm (Length) x 260.4 mm (Width).

Recommended Cutout Dimensions: Approximately 490 mm (Length) x 268 mm (Width).

Worktop Thickness: Minimum 30 mm, Maximum 50 mm.

Minimum Clearance Below Hob: At least 50 mm from the bottom of the hob to any surface below, with a total depth of 60 mm required for ventilation.

Corner Radius (R): Minimum 1 mm, Maximum 5 mm for the cutout corners.

Note: An installation diagram showing precise measurements for the hob and the required worktop cutout, including top view, side view, and detailed corner radius, would typically be included here. This diagram illustrates the hob's overall dimensions (520x288mm), the base dimensions (482.4x260.4mm), and the recommended cutout dimensions (490x268mm). It also details the required clearances for ventilation (50-60mm depth) and the corner radius for the cutout (R-Min 1mm, Max 5mm).

Electrical Connection:

- Ensure the main power supply is switched off before making any connections.
- Connect the appliance to a suitable earthed electrical outlet.
- The electrical cable must be securely fastened and protected from heat.

4. OPERATION

The Rosieres RDH32/1 ceramic hob features intuitive touch controls for easy and precise cooking.

Turning On/Off:

1. **To Turn On:** Touch the Power symbol (⊖) on the control panel. The hob will beep, and indicators will light up.
2. **To Turn Off:** Touch the Power symbol again. All cooking zones will switch off.

Selecting a Cooking Zone and Adjusting Power:

1. After turning on the hob, select the desired cooking zone by touching its corresponding zone selection button.
2. Use the '+' and '-' touch controls to adjust the power level from 1 (low) to 9 (high).
3. The display for the selected zone will show the current power level.

Using the Timer:

1. With a cooking zone active, touch the Timer symbol (⏱).
2. Use the '+' and '-' controls to set the desired cooking time (in minutes).
3. The timer will count down, and the selected cooking zone will automatically switch off when the time expires. An audible signal will sound.

Safety Features:

- **Residual Heat Indicator:** After a cooking zone is switched off, an 'H' will appear on the display if the zone is still hot enough to cause burns. Do not touch the surface until the 'H' disappears.
- **Automatic Shut-off:** If a cooking zone is left on for an extended period without adjustment, it will automatically switch off as a safety measure.

5. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your Rosieres RDH32/1 ceramic hob.

Daily Cleaning:

- Always ensure the hob is completely cool before cleaning.
- Wipe the ceramic glass surface with a soft cloth or sponge and a mild detergent.
- Rinse thoroughly with clean water and dry with a clean, soft cloth to prevent water spots.

Removing Stubborn Stains:

- For burnt-on food or stubborn stains, use a specialized ceramic hob cleaner and a hob scraper (if necessary). Follow the cleaner's instructions.
- Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the ceramic surface.
- For sugary spills, immediately scrape them off the hot surface with a hob scraper to prevent permanent damage, then clean once cool.

General Maintenance:

- Regularly check the power cord for any signs of damage.
- Ensure the ventilation openings underneath the hob are not obstructed.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply. Control panel locked.	Check the circuit breaker/fuse. Ensure the hob is properly plugged in. Touch and hold the power button for a few seconds to unlock.
Cooking zone not heating.	Incorrect power level selected. Overheat protection activated.	Increase the power level. Allow the hob to cool down. Ensure proper ventilation.
Display shows 'E' or error code.	Internal fault or sensor error.	Turn off the hob at the main power supply for a few minutes, then turn it back on. If the error persists, contact customer service.
Hob makes unusual noises.	Normal operation sounds (e.g., fan noise). Pan material.	Some sounds are normal. Ensure cookware is flat-bottomed and suitable for ceramic hobs.

If the problem persists after trying these solutions, please contact a qualified service technician or Rosieres customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Rosieres
Model	RDH32/1
Manufacturer Reference	8059019067476
Type	Ceramic Hob Domino
Installation Type	Built-in (Autonome)
Number of Cooking Zones	2 Radiant Zones
Main Zone Power	1800 W
Control Type	Touch Control (Tactile)
Material	Ceramic Glass (Vitroc�eramique)
Power Source	Electric Cable
Dimensions (Overall)	Approx. 520 mm (Length) x 288 mm (Width)
Weight	6 Kilograms
Components Included	Cooking unit only

8. WARRANTY AND SUPPORT

Your Rosieres RDH32/1 ceramic hob is covered by a manufacturer's warranty. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for any warranty claims.

For Service and Support:

- Refer to the warranty card included with your product for detailed information.
- Contact the retailer from whom you purchased the appliance.
- Visit the official Rosieres website for customer support contact details, FAQs, and service center locations.
- Do not attempt to repair the appliance yourself. Repairs should only be carried out by authorized service personnel.