

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [NEXT-SHINE](#) /

> [NEXT-SHINE Electric Coffee Grinder with CNC Stainless Steel Conical Burr - Instruction Manual](#)

## NEXT-SHINE B0CLL7DFHY

# NEXT-SHINE Electric Coffee Grinder

INSTRUCTION MANUAL - MODEL: B0CLL7DFHY

## Introduction

Thank you for choosing the NEXT-SHINE Electric Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee grinder. Please read it thoroughly before first use and keep it for future reference.

This grinder features a CNC stainless steel conical burr, a 20g single cup capacity, and internal adjustable settings for various brewing methods. Crafted from durable aluminum alloy and 304 stainless steel, it offers effortless, speedy, and uniform grinding with low noise. Easy to clean and portable, it's ideal for personal use and travel.

## Product Features

- **Robust Construction:** Crafted entirely from aluminum alloy and featuring 304 stainless steel for its internal components, ensuring durability and wear resistance.
- **Effortless and Speedy Operation:** Equipped with a potent motor, this device can grind 15 grams of coffee beans in a mere 30 seconds.
- **Uniform Grind for Perfect Flavor:** Delivers a consistent and even grind size, with over 85% of grounds falling within the ideal range of 550-850µm.
- **User-Centric Design:** Slender build for comfortable, non-slip hold, dual-bearing construction for minimal vibration, and operates below 65 decibels.
- **Easy Grind Customization:** Features a clear numerical dial and intuitive coarse-to-fine icons with 35 precise grind levels, fine-tunable by 0.04mm increments.
- **Perfect for Personal Brews:** Bean and grounds compartments optimally sized to hold 15-20 grams for 1-2 cups of coffee.
- **Convenient Cleaning and Storage:** Compact design for small kitchen areas and breaks down effortlessly for cleaning with the included dual-purpose brush.

## Product Overview & Components

Familiarize yourself with the main parts of your NEXT-SHINE coffee grinder.



Figure 1: Main unit of the NEXT-SHINE Electric Coffee Grinder.



Figure 2: Close-up view of the CNC Stainless Steel Conical Burr, highlighting its robust construction.



Figure 3: The coffee grinder shown with its included accessories, such as the cleaning brush and spoon.

## Setup

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wipe down the exterior of the grinder with a damp cloth. Disassemble the grinding chamber and burr (refer to the 'Cleaning & Maintenance' section) and clean them with the provided brush to remove any manufacturing residue. Ensure all parts are completely dry before reassembly.
3. **Charge Battery:** Connect the grinder to a USB power source using the provided cable. The indicator light will show charging status. Ensure the grinder is fully charged before initial use for optimal performance.

## Operating Instructions

---

### 1. Adjusting Grind Size

The NEXT-SHINE grinder offers 35 precise grind levels, allowing you to customize your coffee for various brewing methods.

# 35 GAP LEVELS INFINITE REGULATION



Coarse Grinding



Medium Grinding



Fine Grinding



Figure 4: Adjusting the grind size using the numerical dial.

- To adjust, rotate the numerical dial located at the bottom of the grinding chamber.
- Turn towards 'FINE' for finer grinds (e.g., Espresso, Moka Pot).
- Turn towards 'COARSE' for coarser grinds (e.g., French Press, Pour Over).
- Each click represents a 0.04mm increment, allowing for precise control.



**PRECISE ADJUSTMENT OF GRINDING COARSENESS**


Fine	Medium	Coarse
		
ESPRESSO	POUR OVER COFFEE	FRENCH PRESS

Rotate the dial according to coffee brewing style, 35 levels grind settings from finer to coarser. Uniform particle size distribution of the powder, extracting a clean and balanced taste of coffee.

Figure 5: Recommended grind settings for various brewing methods.

## 2. Grinding Coffee Beans

1. **Add Beans:** Open the top lid and pour 15-20 grams of whole coffee beans into the bean hopper. Close the lid securely.
2. **Select Grind:** Adjust the grind size dial to your desired setting (refer to 'Adjusting Grind Size' above).
3. **Start Grinding:** Press the power button once to start grinding. The grinder will automatically stop once all beans are ground.

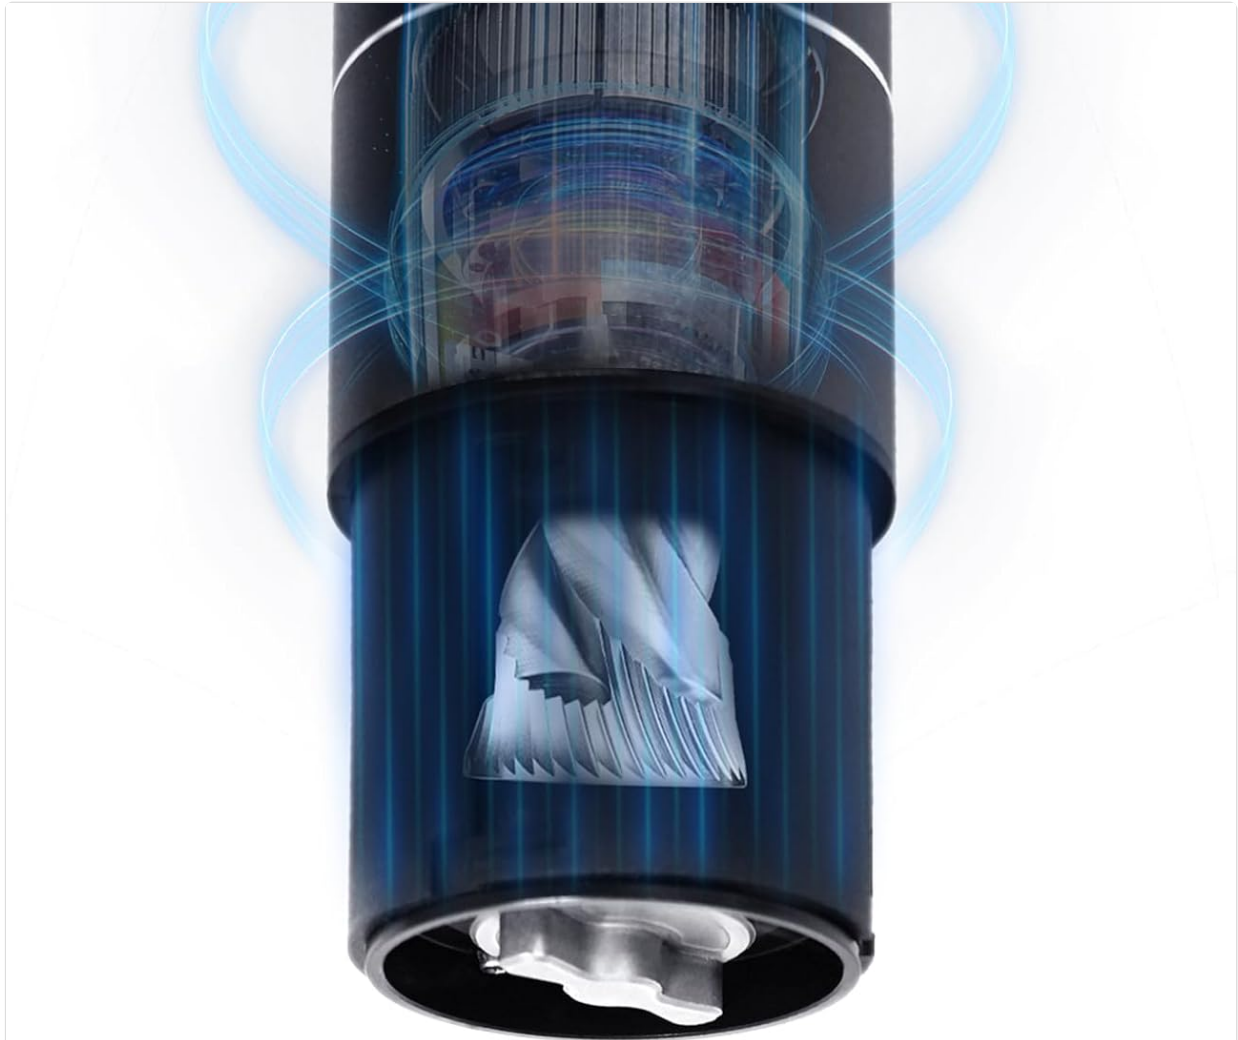

# SMART MOTOR - Auto Stop without BEANS

High-speed Powerful --Grinding 15g coffee beans in **30s**

Figure 6: The smart motor efficiently grinding coffee beans.

Your browser does not support the video tag. This video demonstrates the first grind-while-charging feature of the CEVING Portable High-Speed Coffee Grinder, showing its fast grinding capability while connected to a power source.

Video 1: Demonstration of the CEVING Portable High-Speed Coffee Grinder's fast grinding and charge-while-grind functionality.

Your browser does not support the video tag. This video showcases the portable battery-powered burr

coffee grinder, highlighting its convenience and ease of use for grinding coffee on the go.

Video 2: Demonstration of the Portable Battery Powered Burr Coffee Grinder.

## Cleaning & Maintenance

Regular cleaning ensures optimal performance and preserves the flavor of your coffee.



Figure 7: Cleaning the conical burr and grinding chamber with the provided brush.

1. **Disassembly:** Unscrew the bottom grounds container. Gently twist and pull the grinding chamber to detach it from the main body.
2. **Brush Cleaning:** Use the included dual-purpose brush to remove any residual coffee grounds from the burr, grinding chamber, and grounds container.
3. **Wipe Down:** Wipe the exterior of the grinder with a clean, dry cloth.
4. **Reassembly:** Reassemble all parts in reverse order. Ensure all components are securely fastened.
5. **Important:** Do not wash the main body or burr with water. Only the grounds container can be rinsed with water. Ensure all parts are completely dry before reassembly.

## Specifications

Attribute	Value
Brand	NEXT-SHINE
Model	B0CLL7DFHY
Color	Grey
Product Dimensions	18.4 x 5.4 x 18.4 cm
Capacity	25 Grams
Material	Aluminum, Stainless Steel
Item Weight	750 g
Manufacture Year	2023

## Troubleshooting

- **Grinder not starting:** Ensure the battery is charged. Check if the grinding chamber and grounds

container are securely attached.

- **Inconsistent grind:** Ensure the burr and grinding chamber are clean. Adjust the grind setting to a finer or coarser level as needed.
- **Slow grinding:** Ensure the battery is fully charged. Clean the burr to remove any blockages from old coffee grounds.

## Warranty and Support

---

For warranty information or technical support, please contact NEXT-SHINE customer service at Next-shine@outlook.com. Please provide your model number and purchase date when contacting support.

## Important Safety Information

---

- Keep out of reach of children.
- Do not immerse the main body of the grinder in water.
- Use only whole coffee beans; do not grind other substances.
- Ensure the grinder is fully assembled before operation.
- Unplug the grinder before cleaning or when not in use.