

Manuals.plus /

› UOGIC /

› Uogic Stylus Pen AX10-T for iPad Instruction Manual

UOGIC AX10-T

Uogic Stylus Pen AX10-T Instruction Manual

Model: AX10-T

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Uogic Stylus Pen. Keep this manual for future reference.

- Do not expose the stylus to extreme temperatures or direct sunlight.
- Avoid dropping the stylus or subjecting it to strong impacts.
- Keep the stylus away from water and other liquids.
- Do not attempt to disassemble or repair the stylus yourself. Contact customer support if service is required.
- Use only the provided USB-C cable for charging. Ensure the power adapter is 5V 2A for optimal charging.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Uogic Stylus Pen
- USB-C Charging Cable
- User Guide
- Replacement Tips (quantity may vary)



Figure 1: Package Contents. Includes the stylus pen, USB-C cable, and replacement tips.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Uogic Stylus Pen.

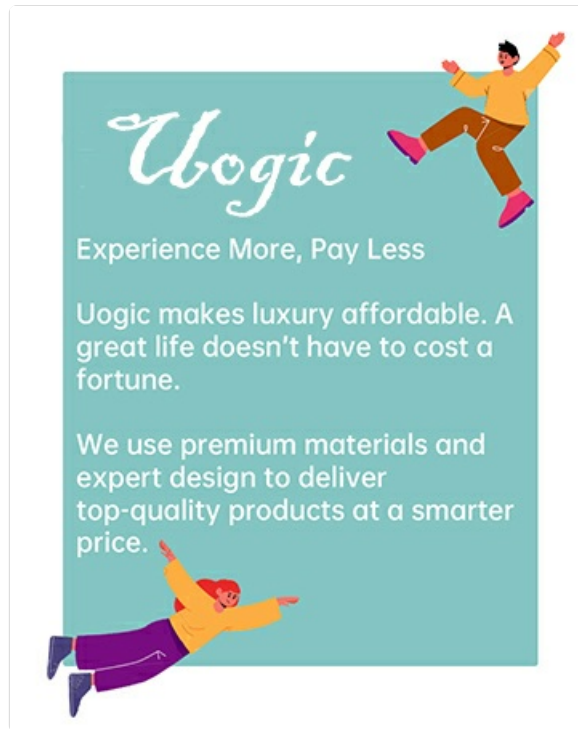


Figure 2: Stylus Pen Components. The diagram highlights the function button, Type-C charging port, light indicator, and replaceable fine tip.

- **Function Button:** Located at the top of the stylus for power control.
- **Type-C Charging Port:** Used for charging the stylus. Protected by a dust cap.
- **Light Indicator:** Displays power status and charging progress.
- **Replaceable Fine Tip:** Provides precise writing and drawing.

SETUP

1. Charging the Stylus

Before first use, fully charge your stylus pen.

1. Open the dust cap to reveal the Type-C charging port.
2. Connect the provided USB-C cable to the stylus and a 5V 2A power source (e.g., wall adapter, computer USB port, power bank).
3. The LED indicators will show charging status. A full charge takes approximately 1 hour and provides up to 10 hours of continuous use.
4. Close the dust cap after charging to protect the port.

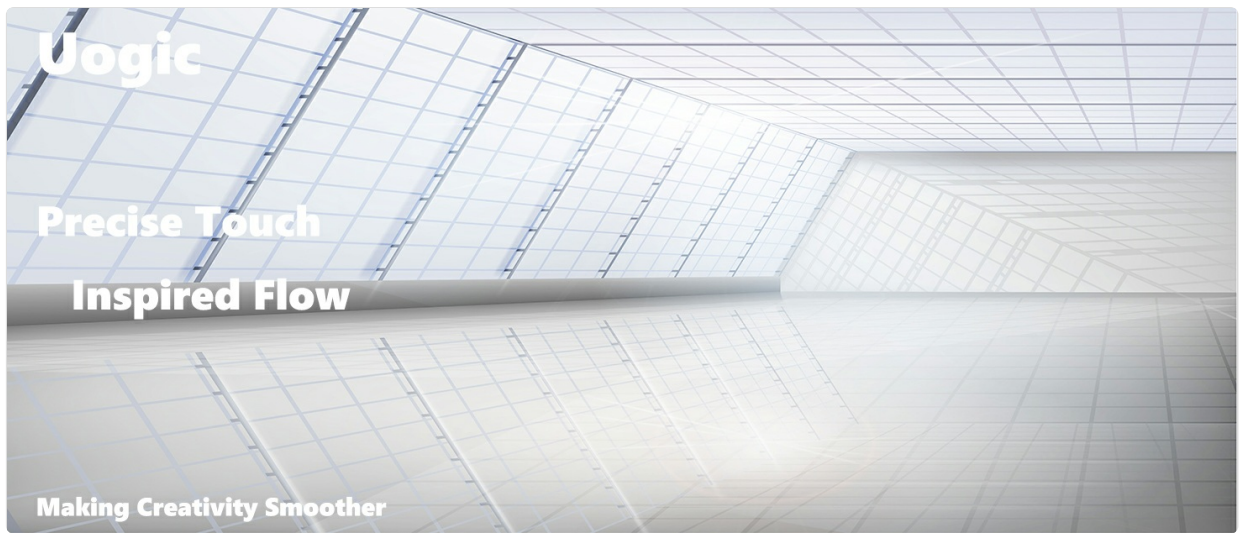


Figure 3: Charging the Stylus. The stylus charges quickly via USB-C, offering long usage time.

2. Powering On/Off

- **To Power On:** Simply tap the top of the stylus once. The LED indicators will light up.
- **To Power Off:** Double-click the top of the stylus. The LED indicators will turn off.
- The stylus will automatically enter sleep mode after 5 minutes of inactivity to conserve energy.

3. Compatibility Check

The Uogic Stylus Pen is compatible with specific iPad models. Please verify your iPad model before use.

Compatible iPad Models:

- iPad (6th, 7th, 8th, 9th, 10th generation)
- iPad mini (5th, 6th generation)
- iPad Air (3rd, 4th, 5th generation)
- iPad Air 11"/13" (M2)
- iPad Pro 11" (1st, 2nd, 3rd generation)
- iPad Pro 12.9" (3rd, 4th generation)
- iPad Pro 11"/13" (M4)

Important Note: This stylus is NOT compatible with iPad models from 2018 and earlier.



Figure 4: iPad Compatibility Chart. Refer to this chart to confirm your iPad model's compatibility.

4. Initial Connection

The Uogic Stylus Pen does not require Bluetooth pairing. Simply power it on, and it is ready for use with compatible iPad models.

OPERATING INSTRUCTIONS

1. Writing and Drawing

The stylus offers a natural and precise writing experience.

- **Palm Rejection:** You can rest your hand comfortably on the iPad screen while writing or drawing without causing unintended marks. No special gloves are required.



Figure 5: Palm Rejection in Use. Write or draw naturally with your palm resting on the screen.

- **Tilt Sensitivity:** Vary the thickness of your lines by changing the angle at which you hold the stylus. This feature allows for more dynamic and artistic strokes, similar to a traditional pencil.

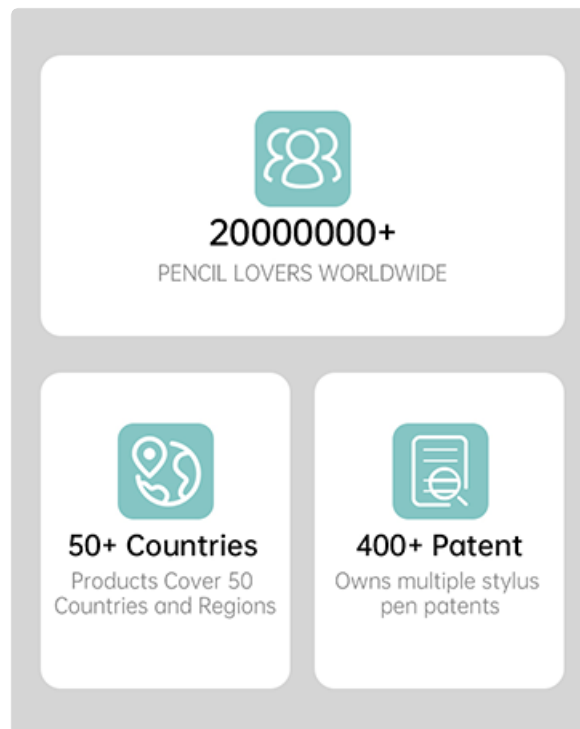


Figure 6: Tilt Sensitivity. Adjust line thickness by tilting the stylus.

2. Magnetic Attachment

The stylus features a strong built-in magnet for convenient storage.

- Simply attach the stylus to the side of your compatible iPad for secure storage and easy access.



Figure 7: Magnetic Adsorption. Securely attach the stylus to your iPad for portability.

MAINTENANCE

1. Replacing the Tip

The stylus tip is replaceable to ensure continued precision and responsiveness.

1. Gently twist the existing tip counter-clockwise to remove it.
2. Align a new replacement tip with the stylus and twist it clockwise until it is securely fastened.

2. Cleaning the Stylus

To maintain optimal performance and appearance:

- Wipe the stylus body with a soft, dry, lint-free cloth.
- Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your Ulogic Stylus Pen, refer to the following common solutions:

- **Stylus not turning on:**
Ensure the stylus is sufficiently charged. Connect it to a power source using the USB-C cable and allow it to charge for at least 15 minutes before attempting to power it on again.
- **Stylus not responding on iPad:**
First, confirm your iPad model is listed as compatible in the 'Compatibility Check' section. Ensure the stylus is powered on. If the issue persists, try restarting your iPad.
- **Inaccurate tracking or skipping:**
Check if the stylus tip is securely attached and not worn out. Replace the tip if necessary. Ensure your iPad screen is clean and free of debris.
- **Stylus not charging:**
Verify that the USB-C cable is properly connected to both the stylus and the power source. Ensure the power source is providing 5V 2A. Try using a different USB-C cable or power adapter if available.
- **Accidental touches when resting palm:**
Ensure that the 'Palm Rejection' feature is functioning correctly. This feature is typically automatic and does not require specific settings on the iPad. If issues persist, ensure your iPad's software is up to date.

SPECIFICATIONS

Feature	Detail
Model Number	AX10-T
Brand	UOGIC
Color	Black
Material	Aluminum
Item Weight	0.48 Ounces (approx. 13.6g)
Battery Type	Lithium Polymer
Charging Time	Approx. 1 hour (for full charge)
Battery Life (Standby)	Up to 10 hours of continuous use
Item Dimensions (L x W x H)	6.54 x 0.35 x 0.35 inches

WARRANTY AND SUPPORT

Warranty Information

The Uogic Stylus Pen AX10-T comes with a **12-month manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please do not hesitate to contact our customer service team. We are available to assist you 24 hours a day.

Contact Information:

Please refer to the contact details provided on the product packaging or the official UOGIC website for the most up-to-date support channels.