

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [GROHE](#) /

> [GROHE Start 30630000 Single-Lever Kitchen Faucet Instruction Manual](#)

GROHE 30630000

GROHE Start 30630000 Single-Lever Kitchen Faucet Instruction Manual

Model: 30630000

[Overview](#) [Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

[Safety Information](#) [Product](#)

1. SAFETY INFORMATION

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- **Water Supply:** Ensure the main water supply is turned off before beginning any installation or maintenance work.
- **Pressure:** Recommended operating pressure is 1.0 - 5.0 bar. If pressure exceeds 5.0 bar, a pressure reducer must be installed.
- **Temperature:** The maximum hot water inlet temperature should not exceed 80°C (176°F).
- **Professional Installation:** Installation should be performed by a qualified professional in accordance with local plumbing and building codes.
- **Cleaning:** Use only mild soap and water for cleaning. Avoid abrasive cleaners, scouring pads, or solvents, as these can damage the chrome finish.

2. PRODUCT OVERVIEW

The GROHE Start 30630000 is a single-lever kitchen faucet designed for convenient use, especially in front of windows. It features a high spout and a durable chrome finish.



Image: Front view of the GROHE Start 30630000 single-lever kitchen faucet with a high, U-shaped spout and chrome finish.

Key Features:

- **Window Installation:** Designed to be easily lifted and laid down to allow window opening.
- **High Spout:** Provides ample clearance for filling and cleaning large pots and containers.
- **Adjustable Swivel Range:** The spout can be adjusted to swivel 0°, 150°, or 360° for flexible use.
- **GROHE QuickFix:** Ensures quick and straightforward installation.
- **GROHE LongLife:** Ceramic cartridge for precise control of water flow and temperature.

- **GROHE StarLight:** Durable chrome finish for easy cleaning and lasting shine.

3. INSTALLATION

Before starting, ensure all necessary tools are available and the water supply is turned off. Refer to the technical drawing for precise measurements and connections.

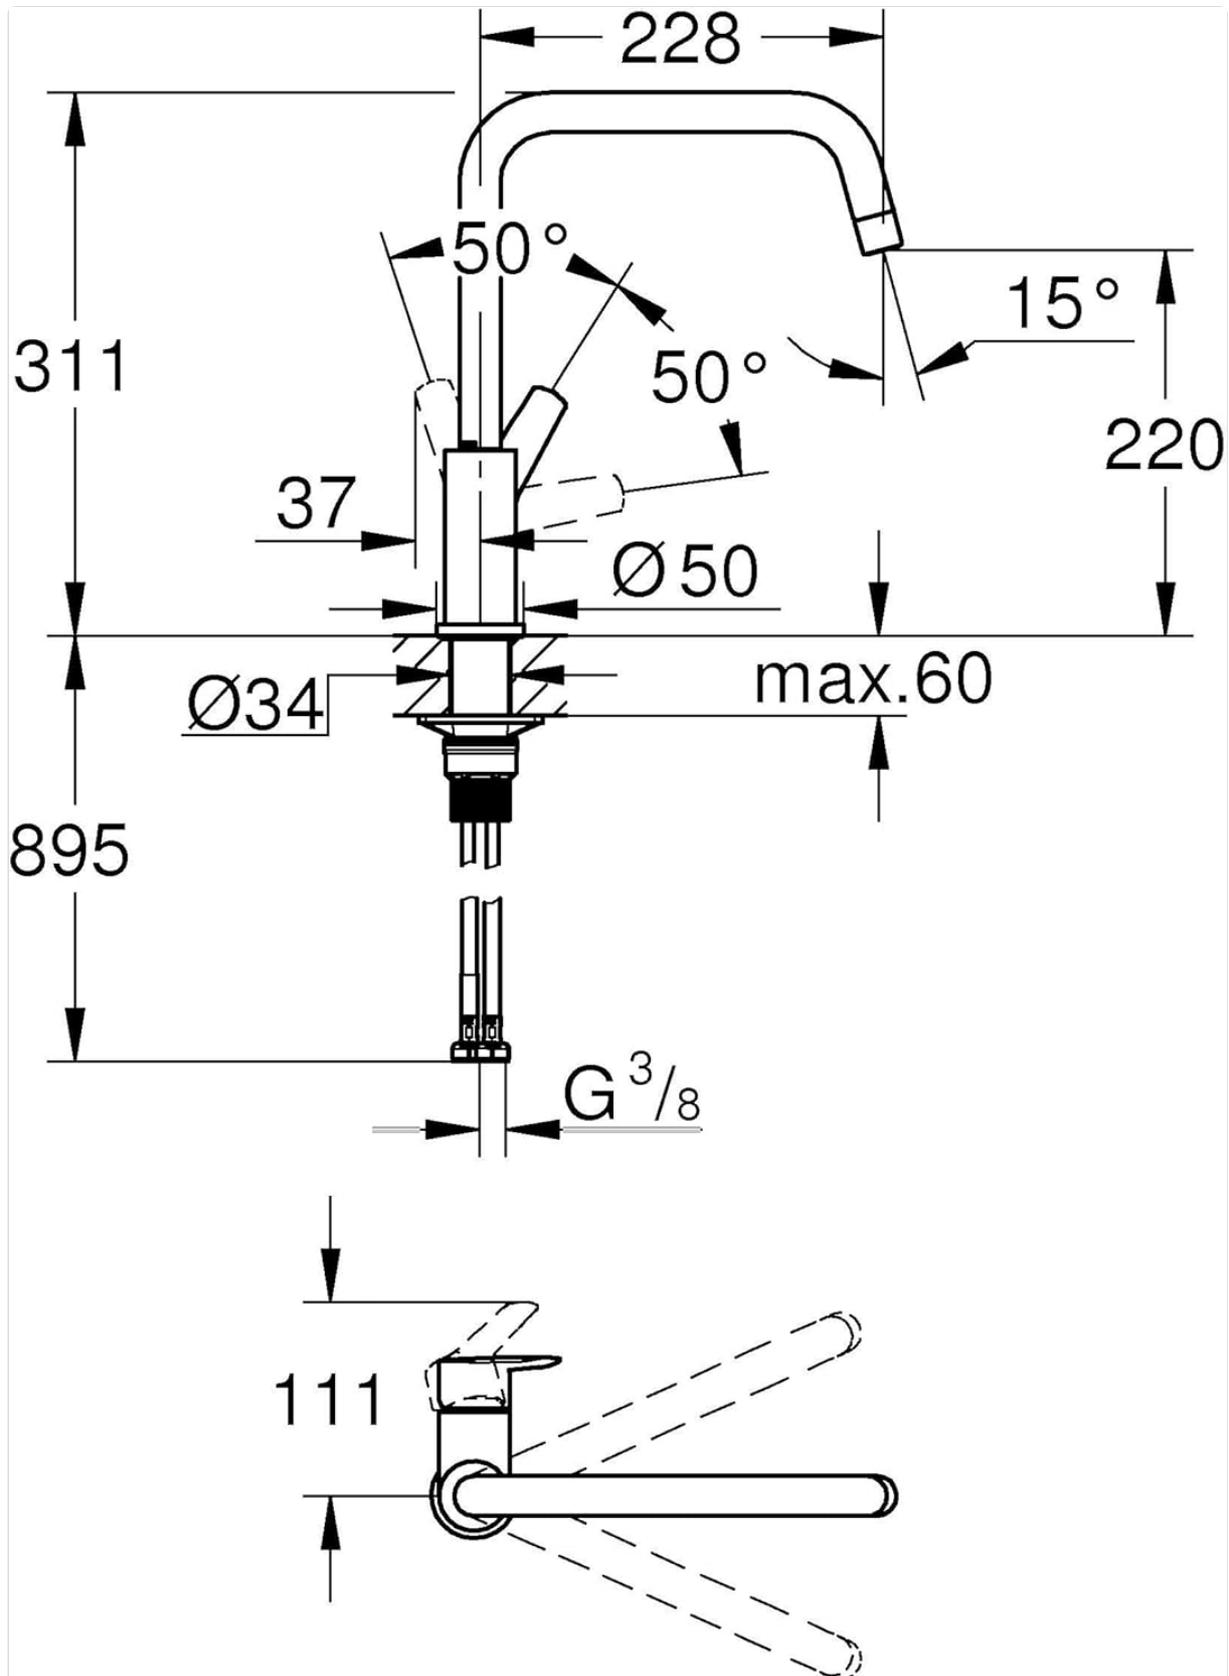


Image: Technical drawing illustrating the dimensions and connection points of the GROHE StarLight 30630000 faucet, including spout height (311mm), spout reach (228mm), and hose length (895mm).

Installation Steps:

1. **Prepare the Sink/Countertop:** Ensure a single mounting hole (diameter Ø34mm) is available and clean. The maximum countertop thickness should be 60mm.
2. **Mount the Faucet:** Insert the faucet base into the mounting hole.
3. **Secure with QuickMount:** From underneath the sink, attach the GROHE QuickMount fastening system. Tighten the nut securely to fix the faucet in place.



Image: Close-up view of the GROHE QuickMount system, showing the blue plastic nut and threaded rod for easy and secure faucet installation from below the sink.

4. **Connect Water Hoses:** Connect the hot and cold water supply lines to the corresponding flexible hoses of the faucet. Ensure a watertight seal using appropriate tools and sealing materials. The hose length is 895mm.
5. **Check for Leaks:** Slowly turn on the main water supply and check all connections for leaks.
6. **Test Operation:** Operate the faucet to ensure proper water flow and temperature control.

4. OPERATION

The single-lever design allows for easy control of water flow and temperature.

- **Water Flow:** Lift the lever to turn on the water. The higher the lever is lifted, the greater the water flow.

- **Temperature Control:** Move the lever to the left for hot water and to the right for cold water.
- **Adjustable Swivel Spout:** The high spout can be rotated to direct water where needed. The swivel range can be set to 0°, 150°, or 360° during installation or adjusted later if needed.



Image: A person filling a blue bucket with water from the high spout of the GROHE kitchen faucet, demonstrating its utility for larger containers.

- **Window Functionality:** For sinks located in front of a window, the faucet can be easily lifted straight up and laid horizontally on the countertop to allow the window to open.



Image: The GROHE kitchen faucet is shown in a horizontal position on the countertop, allowing a window directly above the sink to open freely. This highlights its specialized window installation feature.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your GROHE faucet.

Cleaning Instructions:

- Use only a soft cloth and mild soap solution for cleaning.
- Wipe the faucet dry after each use to prevent water spots and mineral buildup.
- **Do NOT** use abrasive cleaners, scouring pads, acid-based cleaners, or solvents, as these will damage the chrome finish and internal components.
- For stubborn mineral deposits, use a vinegar-based solution diluted with water, applied with a soft cloth, and rinsed thoroughly.

Cartridge Maintenance:

If water flow or temperature control becomes inconsistent, the ceramic cartridge may need inspection or replacement. This should be performed by a qualified technician.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator Low water pressure Partially closed stopcock	Unscrew and clean the aerator. Check household water pressure. Ensure stopcocks are fully open.
Leaking from Spout	Worn cartridge Loose connections	Replace the ceramic cartridge (professional service recommended). Check and tighten all connections.
Inconsistent Water Temperature	Faulty cartridge Hot/cold water supply issues	Replace the ceramic cartridge (professional service recommended). Verify hot and cold water supply to the faucet.

If the problem persists after attempting these solutions, please contact GROHE customer support or a qualified plumber.

7. SPECIFICATIONS

Model Number	30630000
Brand	GROHE
Product Dimensions (L x W x H)	47.5 x 31 x 8 cm
Weight	1.88 Kilograms
Color	Chrome
Finish	Chromed

Material	Brass (Faucet body), Metal (Handle/Lever)
Installation Method	Single-hole, Deck Mounted
Number of Holes Required	1
Spout Height	311 Millimeters
Spout Reach	228 Millimeters
Hose Length	895 Millimeters
Number of Handles	1
Handle Position	Left
Special Features	Adjustable temperature limit, Window installation functionality (lift-up spout)
Included Components	Start OHM sink U-spout pre-window inst. (Faucet unit, mounting hardware, connection hoses)
Country of Origin	Germany

8. WARRANTY AND SUPPORT

GROHE products are manufactured to the highest quality standards and come with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your product or visit the official GROHE website.

For technical support, spare parts, or service inquiries, please contact GROHE customer service. Contact details can typically be found on the GROHE website or in the product packaging.

Online Resources: www.grohe.com