

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Momcozy](#) /

› [Momcozy 3-Layer Bottle Sterilizer and Dryer & Bottle Warmer User Manual](#)

Momcozy B0CNSLKSV

Momcozy 3-Layer Bottle Sterilizer and Dryer & Bottle Warmer User Manual

Model: B0CNSLKSV

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation and maintenance of your Momcozy 3-Layer Bottle Sterilizer and Dryer & Bottle Warmer. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the unit on a stable, heat-resistant surface.
- Do not immerse the base unit in water or other liquids.
- Keep out of reach of children.
- Unplug the unit when not in use and before cleaning.
- Do not operate if the cord or plug is damaged.
- Use only distilled water for sterilization to prevent mineral buildup.
- Exercise caution when handling hot steam and hot components after sterilization.

PRODUCT COMPONENTS

The Momcozy 3-Layer Bottle Sterilizer and Dryer & Bottle Warmer consists of several key components:

- **Sterilizer Base Unit:** Contains the heating element and control panel.
- **Lower Basket:** For larger items like bottles.
- **Upper Basket:** For smaller items like nipples, pacifiers, and breast pump parts.
- **Lid:** Covers the baskets during operation.
- **Bottle Warmer Unit:** Separate unit for warming bottles and food.
- **Measuring Cup:** For adding water to the sterilizer.

30% Larger Capacity than Others



Image: The Momcozy 3-Layer Bottle Sterilizer and Dryer, illustrating its large capacity and dimensions (15.74 inches height, 8.85 inches width, 11.02 inches depth). It shows multiple bottles and accessories placed within its three layers.

SETUP INSTRUCTIONS

Sterilizer and Dryer Setup:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash all baskets, lids, and accessories in warm soapy water, rinse thoroughly, and dry. Wipe the base unit with a damp cloth.
3. **Assemble:** Place the lower basket onto the base unit. Then, place the upper basket on top of the lower basket. Finally, place the lid securely on the upper basket.
4. **Position:** Place the assembled unit on a flat, stable, heat-resistant surface away from direct sunlight and heat sources.

Bottle Warmer Setup:

1. **Unpack:** Remove the bottle warmer from its packaging.
2. **Clean:** Wipe the exterior with a damp cloth. The internal warming chamber can be cleaned with a soft brush and warm soapy water, then rinsed.
3. **Position:** Place the warmer on a stable, flat surface.

OPERATING INSTRUCTIONS

Using the Sterilizer and Dryer:

1. **Load Items:** Place clean bottles upside down in the lower basket. Arrange nipples, pacifiers, and breast pump parts in the upper basket. Ensure items do not block steam vents.
2. **Add Water:** Pour 100ml of distilled water into the heating plate of the base unit using the provided measuring cup. Do not overfill.
3. **Secure Lid:** Place the lid firmly on the unit.
4. **Select Mode:** Plug in the unit. Press the power button. Select your desired mode:
 - **Sterilize Only:** For a 9-minute sterilization cycle.
 - **Dry Only:** Choose drying times from 10-60 minutes.
 - **Sterilize & Dry:** Automatically sterilizes for 9 minutes, then dries for the selected duration.
5. **Start Cycle:** Press the start button. The unit will begin operation.
6. **Cool Down:** After the cycle completes, allow the unit to cool for at least 10 minutes before opening the lid. Use caution as steam and contents will be hot.
7. **Storage Mode:** The unit maintains a sterile storage state for up to 24 hours, with ventilation and drying every 55 minutes to prevent contamination.

20%
Faster

momCOZY

9 mins

Other

11 mins

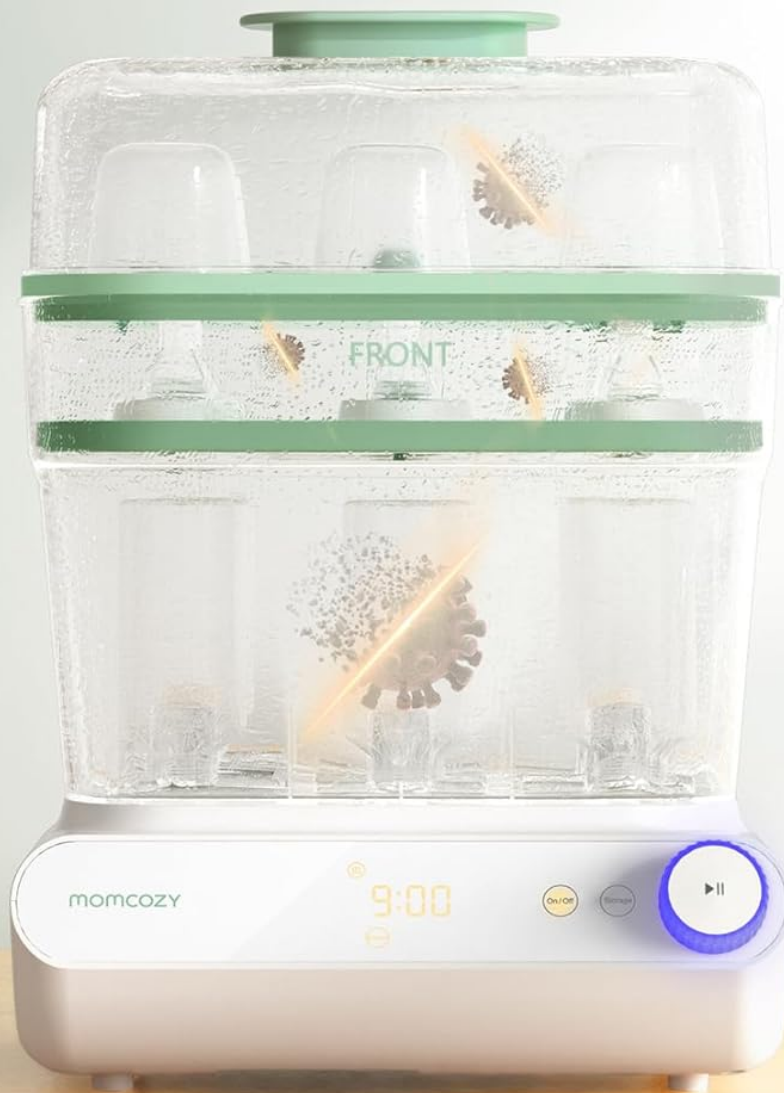


Image: The Momcozy 3-Layer Bottle Sterilizer and Dryer during a sterilization cycle, with visible steam inside the transparent chambers. The digital display shows "9:00", indicating the sterilization time.

360° Full Circle Drying



Image: The Momcozy 3-Layer Bottle Sterilizer and Dryer illustrating its 360-degree full circle drying function, with warm air circulating around bottles and accessories. The display shows "28:00".

Holders Designed for Breast Pump Parts

Help sterilize and dry pump accessories more efficiently



Image: Close-up view of the Momcozy 3-Layer Bottle Sterilizer and Dryer showing specialized holders designed for breast pump parts, ensuring efficient sterilization and drying.

Using the Bottle Warmer:

1. **Place Bottle:** Place the bottle or food jar into the warming chamber.
2. **Add Water:** Fill the water reservoir with distilled water up to the indicated level for the desired warming method.

3. **Select Mode:** Plug in the unit. Choose from the following functions:
 - **Fast Warming:** Quickly warms milk.
 - **Food Heating:** Warms baby food.
 - **Steaming:** For sterilizing small items or steaming food.
 - **Thaw:** Gently thaws frozen milk or food.
 - **24H Keep Warm:** Maintains a set temperature for up to 24 hours.
 - **Material Selection:** Adjusts heating based on bottle material (glass, plastic, silicone).
4. **Start Cycle:** Press the start button. The intelligent heating system will adjust the temperature to mimic breast milk.
5. **Remove Bottle:** Carefully remove the bottle or food jar once warming is complete. Always test the temperature before feeding.

30% Faster

Warm milk in 2-5 mins



Image: The Momcozy Bottle Warmer with a baby bottle inside, illustrating its fast warming capability, indicated by a "Fast" graphic and heat lines.

Get The Precise Temp You Want



Warming time adjusts automatically after your preset



Image: A transparent view of the Momcozy Bottle Warmer, highlighting its intelligent heating design and internal components that ensure precise temperature control for warming.

Heat Baby Food & Fit all Bottles



Image: The Momcozy Bottle Warmer displaying its multifunctionality, including Fast Warming, Thaw, Food Heating, Steaming, Intelligent Timer, Capacity Option, Material Option, Anti-Scald Basket, 24hrs Keep-Warm, and Memory Function. Dimensions are also shown (6.3 inches height, 4.52 inches width).

MAINTENANCE

Cleaning the Sterilizer and Dryer:

- **Daily Cleaning:** After each use, unplug the unit and allow it to cool. Remove the baskets and lid, wash them in warm soapy water, rinse, and dry. Wipe the heating plate and base unit with a damp cloth.
- **Descaling:** Mineral deposits (limescale) may build up on the heating plate over time. To descale, mix 60ml of white vinegar with 120ml of water. Pour the mixture onto the heating plate and let it sit for 30 minutes. Do not run a cycle. Pour out the mixture, rinse the heating plate with clean water, and wipe dry. Repeat if necessary.

Cleaning the Bottle Warmer:

- **Daily Cleaning:** Unplug and allow to cool. Empty any remaining water. Wipe the interior and exterior with a damp cloth.
- **Descaling:** If limescale builds up, follow the same descaling procedure as the sterilizer base unit.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------------|---|---|
| Unit does not turn on. | Not plugged in; power outlet fault. | Ensure unit is securely plugged into a working outlet. |
| Sterilization cycle not completing. | Insufficient water; lid not properly sealed. | Add correct amount of distilled water (100ml); ensure lid is securely placed. |
| Items are not dry after cycle. | Drying time too short; items overloaded; steam vents blocked. | Increase drying time; do not overload; ensure steam vents are clear. |
| White residue on heating plate. | Mineral buildup from tap water. | Descal the unit using white vinegar solution (refer to Maintenance section). Use distilled water for future cycles. |
| Bottle warmer not heating. | Insufficient water; incorrect mode selected. | Ensure adequate water level; select appropriate warming mode. |

SPECIFICATIONS

- **Model:** B0CNSLKSVM
- **Sterilizer Capacity:** Up to 6-12 bottles and accessories (3-layer design)
- **Sterilization Time:** 9 minutes
- **Drying Time:** Adjustable (10-60 minutes)
- **Sterile Storage:** Up to 24 hours with intermittent ventilation/drying
- **Bottle Warmer Functions:** Fast Warming, Food Heating, Steaming, Thaw, 24H Keep Warm, Material Selection
- **Power:** (Not specified in input, please refer to product packaging)
- **Dimensions (Sterilizer):** Approximately 15.74" H x 8.85" W x 11.02" D
- **Dimensions (Warmer):** Approximately 6.3" H x 4.52" W

WARRANTY INFORMATION

Momcozy products typically come with a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Momcozy website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Momcozy Customer Support:

- **Website:** [Visit the Momcozy Store on Amazon](#) (for general product information)
- **Email/Phone:** Refer to your product packaging or the official Momcozy website for the most current contact information.

