

7AM2M AM100

7AM2M Sonic Electric Toothbrush User Manual

Model: AM100

1. INTRODUCTION

Thank you for choosing the 7AM2M Sonic Electric Toothbrush. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly before first use and retain it for future reference.

2. PRODUCT OVERVIEW

The 7AM2M Sonic Electric Toothbrush (Model AM100) is designed to provide an effective and comfortable oral cleaning experience. It features advanced sonic technology, multiple brushing modes, and a long-lasting battery.

Key Components:

- Toothbrush Handle
- Replacement Brush Heads (6 included)
- Wireless Charging Base
- USB Charging Cable

Features:

- Powerful Sonic Cleaning: Up to 40,000 vibrations per minute (VPM) for effective plaque removal.
- 5 High-Performance Brushing Modes: Clean, White, Polish, Milder, Sensitive.
- Smart Vibrating Notification Timer: 2-minute timer with 30-second interval reminders.
- Long Battery Life: Up to 120 days of normal usage on a single charge.
- Wireless Fast Charging.
- IPX7 Waterproof Rating: Suitable for use in the bath or shower.
- Ergonomic Anti-Slip Design.
- Maglev Motor and Smart Chip technology for consistent power.



Image 2.1: The 7AM2M Sonic Electric Toothbrush (Light Green) with its packaging and six replacement brush heads.



Image 2.2: Illustration of the Maglev Motor, indicating over 40,000 VPM for powerful cleaning.



Image 2.3: Depiction of the Smart Chip (M3) which compensates for power in case of obstacles and increases strength.



Image 2.4: Visual representation of the high-capacity Lithium-Ion battery integrated into the toothbrush handle.

3. SETUP

1. Unpack the toothbrush and all accessories.
2. Before first use, fully charge the toothbrush. Refer to the 'Charging' section for detailed instructions.
3. Attach a brush head to the toothbrush handle. Align the brush head with the metal shaft and push down until it clicks into place.

4. OPERATING INSTRUCTIONS

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the toothbrush in your mouth, positioning the bristles at a 45-degree angle to your gum line.
3. Press the power button to turn on the toothbrush. It will start in the last used mode.
4. Gently guide the brush head slowly across your teeth, allowing the sonic vibrations to clean. Do not scrub.
5. The built-in smart timer will pause briefly every 30 seconds to remind you to move to the next quadrant of your mouth (upper right, upper left, lower right, lower left).
6. After 2 minutes, the toothbrush will automatically turn off, indicating the completion of the recommended brushing time.
7. Rinse your mouth and the brush head thoroughly after brushing.

5. BRUSHING MODES

The 7AM2M Sonic Electric Toothbrush offers 5 distinct brushing modes to suit various oral care needs. Press the power button repeatedly to cycle through the modes when the toothbrush is on.

- **Clean:** Gentle mode for daily cleaning.
- **White:** Strong mode for removing surface stains.
- **Polish:** Strong mode with inverted frequency for polishing teeth.
- **Milder:** Gentle mode with inverted frequency for sensitive areas.
- **Sensitive:** Soft mode for sensitive teeth and gums.

5 Unique Modes

to personalize your brushing



Clean



White



Polish



Sensitive



Milder



Clean

White

Polish

Milder

Sensitive

Image 5.1: Visual representation of the five unique brushing modes: Clean, White, Polish, Sensitive, and Milder.

Wireless Fast Charge

 **1** Charge

 **120+** Days Use



Image 5.2: The toothbrush handle displaying the LED indicators for each of the 5 brushing modes.

6. CHARGING

The toothbrush features wireless fast charging and a high-capacity battery.

- Connect the USB charging cable to the wireless charging base and a suitable power adapter (not included).
- Place the toothbrush handle onto the charging base. Ensure the base is dry before placing the toothbrush.
- The indicator light on the toothbrush will illuminate to show it is charging.
- A full charge can last up to 120 days with normal usage (twice a day).
- The toothbrush has a low battery reminder and automatically cuts off power after a full charge to prevent overcharging.



Image 6.1: The toothbrush being charged wirelessly on its charging base, highlighting the '1 Charge = 120+ Days Use' feature.



7. MAINTENANCE AND CARE

Cleaning the Toothbrush:

- After each use, rinse the brush head thoroughly under running water.
- Wipe the toothbrush handle with a damp cloth.
- The toothbrush is IPX7 waterproof, meaning the entire body can be washed and used during showering.



Image 7.1: The toothbrush highlighting its IPX7 waterproof rating and ergonomic anti-slip design.



Image 7.2: The toothbrush submerged in water, demonstrating its IPX7 waterproof capability for use in the shower.

Brush Head Replacement:

- It is recommended to replace the brush head every 3 months, or sooner if the bristles appear worn or frayed.
- The blue indicator bristles on the brush head will fade in color to signal when it's time for replacement.
- To replace, pull the old brush head straight off the handle and push a new one on until it clicks.
- The included 6 replacement brush heads provide approximately 18 months of use.



W-Shaped

No damage
to gums



Bristles Fade

Cleans
5 times
better than
others



Polished >93.5%

Remind you
to use the
brush head
replacement



Image 7.3: Close-up of the W-shaped brush head bristles, designed for thorough cleaning without gum damage. Blue indicator bristles are visible.



Image 7.4: Detailed view of the W-shaped bristles, illustrating their design for superior cleaning compared to standard bristles.



Image 7.5: Six premium brush heads, indicating a total supply for 18 months of use.



Image 7.6: Visual reminder that bristles gradually lighten over time, signaling the need for replacement.

8. TROUBLESHOOTING

If you encounter issues with your 7AM2M Sonic Electric Toothbrush, please refer to the following common solutions:

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. If it still doesn't turn on, try cleaning the charging contacts on both the toothbrush and the base.
- **Toothbrush not charging:** Verify that the charging base is properly connected to a power source. Ensure the toothbrush is correctly seated on the charging base. Clean any debris from the charging contacts.
- **Reduced vibration strength:** This may indicate a low battery. Charge the toothbrush fully. If the issue persists after charging, contact customer support.

- **Brush head feels loose:** Ensure the brush head is pushed down firmly onto the metal shaft until it clicks into place. If it remains loose, the brush head or handle may be damaged and require replacement.

For further assistance, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Model Number	AM100
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Life	Up to 120 days (normal usage)
Vibrations Per Minute (VPM)	40,000+
Brushing Modes	5 (Clean, White, Polish, Milder, Sensitive)
Waterproof Rating	IPX7
Timer	2-minute smart timer with 30-second interval reminders
Brush Head Type	W-shaped, Medium firmness
Product Dimensions	10 x 1 x 1 inches
Item Weight	8.11 ounces
Age Range	Adult, Kid

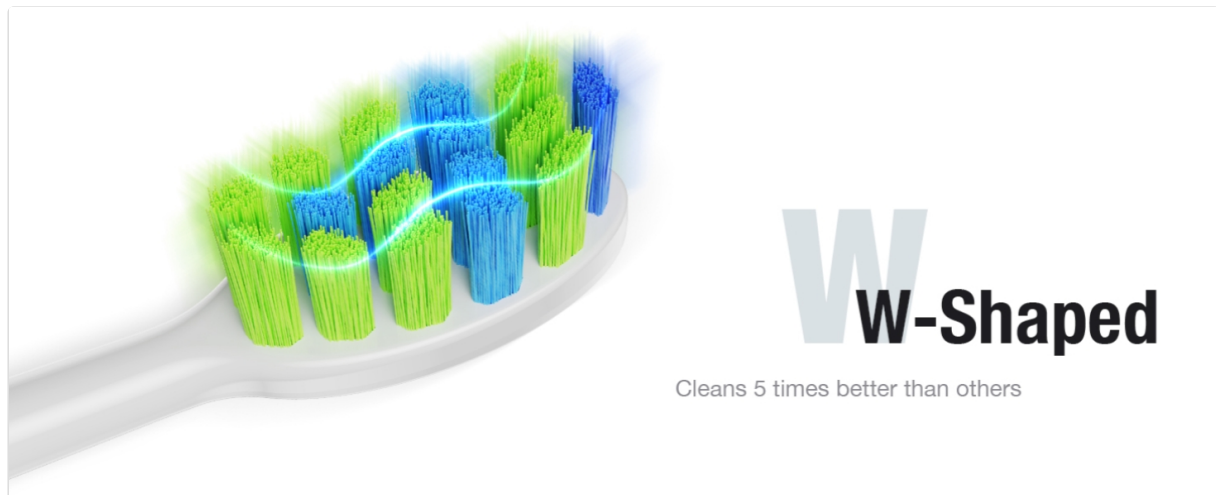


Image 9.1: Comparison highlighting improvements in work noise (<60 dB), battery life (120 days), and product lifetime (2 years) for the new model.

10. WARRANTY AND SUPPORT

The 7AM2M Sonic Electric Toothbrush comes with a 1-year assurance from the date of purchase. If you experience any issues with your product, please contact our customer service team for assistance.

Contact Information:

- **After-Sales Support Number:** (+1)209-734-3760

- **Amazon Account Support:** Log in to your Amazon account, navigate to "Your orders," find the order ID for this product, and click "Contact seller."

20,000,000
Sold

120+
Global Patent

100+ Countries
For Sale

1000+ Dentists
Recommendations



1 Year Assurance



After-Sales,
Number:
(+1)209-734-3760

Image 10.1: Information regarding the 1-year assurance and the after-sales support contact number.



Image 10.2: Details on the 1-year product assurance and the provided after-sales contact number.

