

ALIBELL B0CPHR6WT5

ALIBELL Wireless Call System User Manual

Model: 1 Receiver + 6 Transmitters

1. INTRODUCTION

Thank you for choosing the ALIBELL Wireless Call System. This system is designed to enhance communication and service efficiency in various environments, including restaurants, cafes, nursing facilities, hospitals, and homes. This manual provides detailed instructions for setting up, operating, and maintaining your device to ensure optimal performance.

The system includes one receiver unit and six transmitter buttons, pre-configured for immediate use.

2. PRODUCT OVERVIEW

2.1 Components

- 1 x ALIBELL Receiver Unit
- 6 x ALIBELL Transmitter Buttons
- User Manual

2.2 Key Features

- **Pre-configured:** Numbers 01-06 are set at the factory for immediate use, requiring no initial setup.
- **Multi-language Voice Broadcast:** Supports Japanese and English voice announcements.
- **Customizable Alerts:** Choose from 31 types of ringtones.
- **Adjustable Volume:** 5 levels of volume adjustment, including a mute option (level 0).
- **Easy Number Clearing:** Simple function to clear call numbers from the receiver display.
- **Flexible Placement:** Transmitters can be easily attached to tables, walls, or carried.
- **Extended Range:** Up to 100m (328 ft) reception range in open areas. Indoor range is approximately 30-60m (98-197 ft), depending on obstacles. Range can be extended with an optional repeater.
- **Versatile Applications:** Ideal for restaurants, cafes, bars, nursing homes, hospitals (nurse call), and home use.

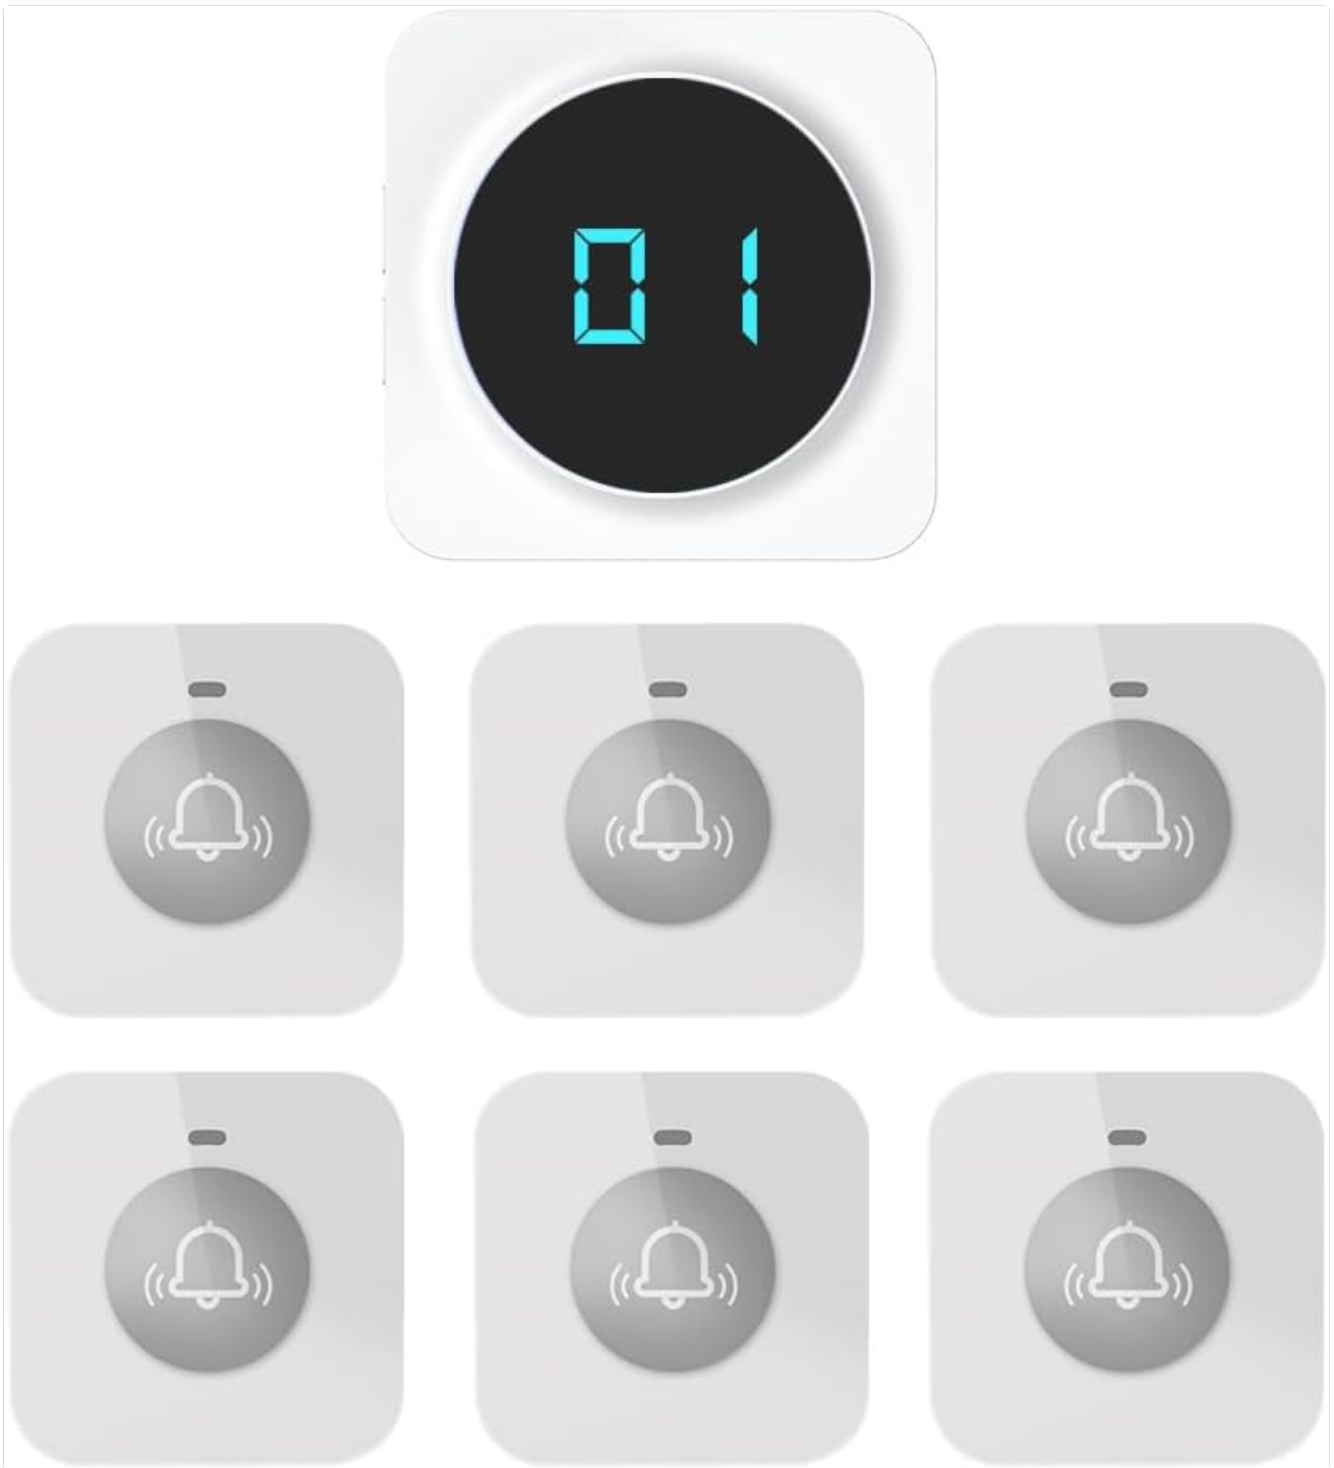


Figure 1: ALIBELL Wireless Call System with one receiver and six call buttons. This image displays the complete ALIBELL Wireless Call System package, featuring one central receiver unit and six individual call buttons, ready for deployment.

3. SETUP INSTRUCTIONS

3.1 Initial Setup (Pre-configured)

Your ALIBELL Wireless Call System is pre-configured at the factory. The receiver is paired with transmitters 01 through 06. Simply plug in the receiver and place the transmitters in desired locations for immediate use.



Figure 2: ALIBELL receiver and six pre-registered call buttons (01-06). This image shows the ALIBELL receiver alongside six call buttons, indicating that numbers 01 through 06 are pre-registered and ready for immediate use.

3.2 Receiver Placement

- Plug the receiver into a standard electrical outlet in a central location where staff can easily see and hear notifications.
- Ensure the receiver is not obstructed by large metal objects or other electronic devices that could interfere with the signal.

3.3 Transmitter Placement

- Attach the transmitter buttons to tables, walls, or other accessible surfaces using the provided adhesive or screws.
- Ensure transmitters are within the effective signal range of the receiver.



Figure 3: Diagram illustrating the ALIBELL system's 150m signal transmission distance within a multi-level commercial space, demonstrating its coverage.

3.4 Pairing Additional Transmitters (if applicable)

The receiver supports up to 99 transmitters. Refer to the detailed pairing instructions in the full manual if you purchase additional transmitters.

Figure 4: A diagram illustrating the registration process, where the receiver supports up to 99 transmitters. Pressing a transmitter button sends a call to the receiver, which then displays the call number and announces it in Japanese.

4. OPERATING INSTRUCTIONS

4.1 Making a Call

- To make a call, simply press the button on the transmitter unit.
- The receiver will display the corresponding call number and emit an audible alert (voice announcement or ringtone).



Figure 5: An image showing a hand pressing an ALIBELL call button, triggering a Japanese voice call notification on the receiver, suitable for restaurants, cafes, nursing facilities, and hospitals.

4.2 Adjusting Receiver Settings

- **Volume Adjustment:** Use the volume buttons on the side of the receiver to cycle through 5 volume levels, including mute (level 0).
- **Ringtone Selection:** Use the music adjustment button on the side of the receiver to select from 31 different ringtones.
- **Language Selection:** The receiver supports Japanese and English voice announcements. Refer to the full manual for specific instructions on changing the language setting.
- **Clearing Calls:** Press the appropriate button on the receiver to clear the displayed call number after attending to a request.



Figure 6: Detailed view of the ALIBELL receiver unit, showing the LED display on the front and the speaker, music adjustment button, and 5-level volume control on the side/back.

5. MAINTENANCE

5.1 Cleaning

- Wipe the receiver and transmitter units with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the surface.

5.2 Battery Replacement (Transmitters)

The transmitter buttons are powered by alkaline batteries. When a transmitter's battery is low, its signal strength may decrease, or it may stop functioning. Follow these steps to replace the battery:

1. **Step 1:** Gently push out the back cover of the transmitter.
2. **Step 2:** Use a small tool (e.g., a flathead screwdriver) to carefully open the bottom cover.
3. **Step 3:** Replace the old battery with a new alkaline battery of the same type.
4. **Step 4:** Reassemble the bottom cover and then the back cover, ensuring they snap securely into place.

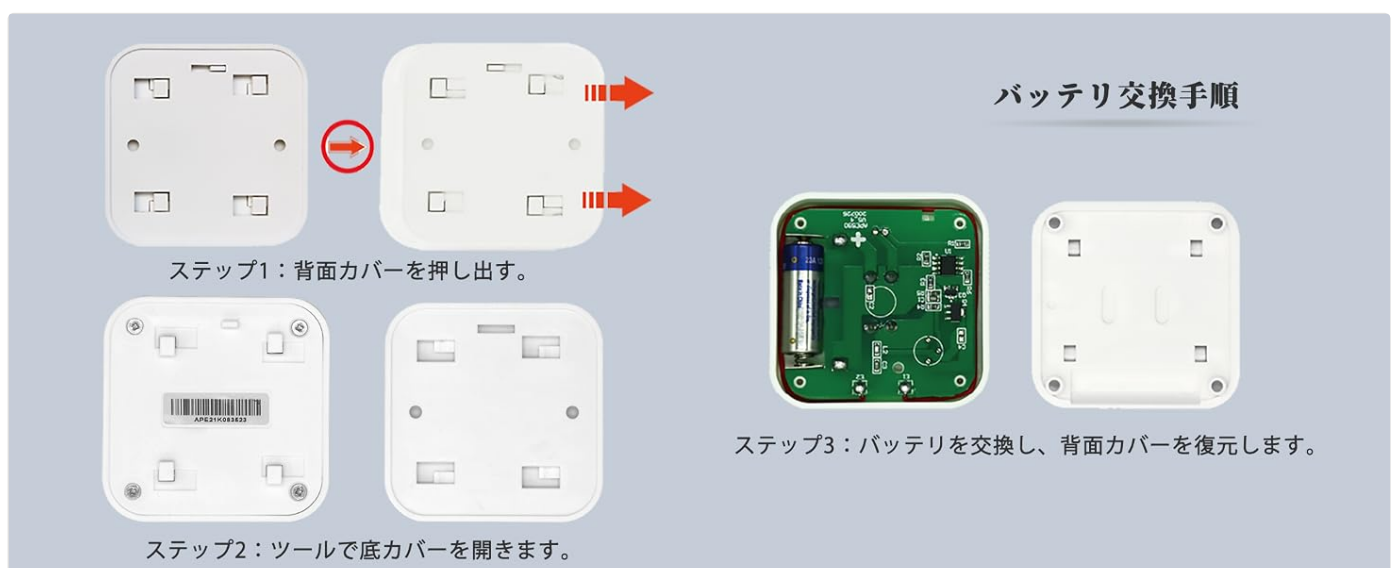


Figure 7: A step-by-step visual guide for replacing the battery in the ALIBELL transmitter: Step 1: Push out the back cover. Step 2: Open the bottom cover with a tool. Step 3: Replace the battery and reassemble the back cover.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver does not respond to transmitter.	1. Transmitter battery is low or dead. 2. Transmitter is out of range. 3. Interference from other electronic devices. 4. Transmitter not properly paired.	1. Replace transmitter battery. 2. Move transmitter closer to the receiver or consider a repeater. 3. Relocate receiver or transmitter away from interference sources. 4. Re-pair the transmitter (refer to full manual).
Receiver display is blank.	1. Receiver is not plugged in. 2. Power outage.	1. Ensure receiver is securely plugged into a working outlet. 2. Check power supply.
Call number does not clear.	Clear button not pressed correctly.	Press the clear button firmly on the receiver.
Voice announcement is unclear or too quiet.	Volume setting is too low.	Adjust the volume using the side buttons on the receiver.

7. SPECIFICATIONS

Feature	Detail
Brand	ALIBELL
Model Name	1 Receiver + 6 Transmitters
Product Dimensions (Receiver)	7.0 x 7.0 x 2.5 cm
Product Dimensions (Transmitter)	5.0 x 5.0 x 1.6 cm
Item Weight	430 g (total package)
Batteries Included	Yes
Battery Type (Transmitter)	Alkaline
Reception Range	Approx. 100m (open area), 30-60m (indoors)
Number of Ringtones	31
Volume Levels	5 (including mute)
Supported Transmitters	Up to 99
ASIN	B0CPHR6WT5
First Available Date	December 5, 2023

寸法詳細



Figure 8: This image provides detailed measurements for both the receiver (7.0cm x 7.0cm x 2.5cm) and the transmitter (5.0cm x 5.0cm x 1.6cm) units, illustrating their compact size.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official ALIBELL website. If you have any operational questions, please consult the store's customer service.

© 2023 ALIBELL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question