

[Manuals.plus](#) /

> [KISSWILL](#) /

> KISSWILL LMH-1 Mini USB Desktop Humidifier Instruction Manual

KISSWILL LMH-1

KISSWILL LMH-1 Mini USB Desktop Humidifier Instruction Manual

1. PRODUCT OVERVIEW

The KISSWILL LMH-1 Mini USB Desktop Humidifier is designed to provide a soothing mist in various personal spaces such as cars, offices, and bedrooms. It features a compact design, quiet ultrasonic operation, and convenient USB power supply.



Image 1.1: The KISSWILL LMH-1 Mini USB Desktop Humidifier in operation, showing mist output and ambient lighting.

Key Features:

- **Low Noise & Breathing Light:** Operates quietly with an integrated warm ambient light.
- **Portable & USB Powered:** Compact design for easy portability, powered via USB.
- **Quiet Ultrasonic Operation:** Produces mist at a near-silent frequency (26dB).
- **One-Button Control:** Simple operation for mist and light functions.
- **Two Spray Modes & Auto Shut-Off:** Offers continuous and intermittent mist modes with automatic shut-off for safety when water levels are low.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Humidifier Body (1 Pcs)
- Instruction Manual (1 Pcs)
- USB-C Cable (1 Pcs)
- Cotton Swab (Pre-installed or spare, 1 Pcs)

Package included:



Image 2.1: The humidifier body, instruction manual, and USB-C cable as included in the package.

3. SAFETY INFORMATION

- Do not use essential oils or corrosive liquids, as this may damage the humidifier.
- Use only clean tap water or distilled water.
- Ensure the humidifier is placed on a stable, flat surface.
- Do not immerse the device in water or other liquids.
- Keep out of reach of children and pets.
- Unplug the device before cleaning or refilling.
- Do not block the mist outlet.

4. SETUP

4.1 Initial Preparation

1. Unpack all components from the box.

2. Remove the top cover of the humidifier.
3. Locate the cotton swab (filter) inside the central tube. Ensure it is properly seated. If it is dry, soak it in water for 5-10 minutes before first use to ensure proper misting.

4.2 Filling the Water Tank

1. Carefully fill the water tank with clean tap water or distilled water. Do not exceed the maximum fill line.
2. Replace the top cover securely.



Image 4.1: Illustration of adding water to the humidifier tank.

4.3 Power Connection

Connect the provided USB-C cable to the humidifier's power port and the other end to a compatible USB power source (e.g., computer, power bank, USB wall adapter).

5. OPERATING INSTRUCTIONS

The humidifier is controlled by a single button located on the device.

5.1 Mist Control

- **First Press:** Activates continuous spray mode. The humidifier will automatically shut off after 4 hours.
- **Second Press:** Switches to intermittent spray mode (sprays for a few seconds, then pauses). The humidifier will automatically shut off after 6 hours.
- **Third Press:** Stops the spray function.

5.2 Light Control

- **Long Press (hold for 3 seconds):** Turns the ambient light on or off.

5.3 Automatic Shut-Off

The humidifier is equipped with an automatic shut-off feature that activates when the water level is low, preventing dry burning and ensuring safety.

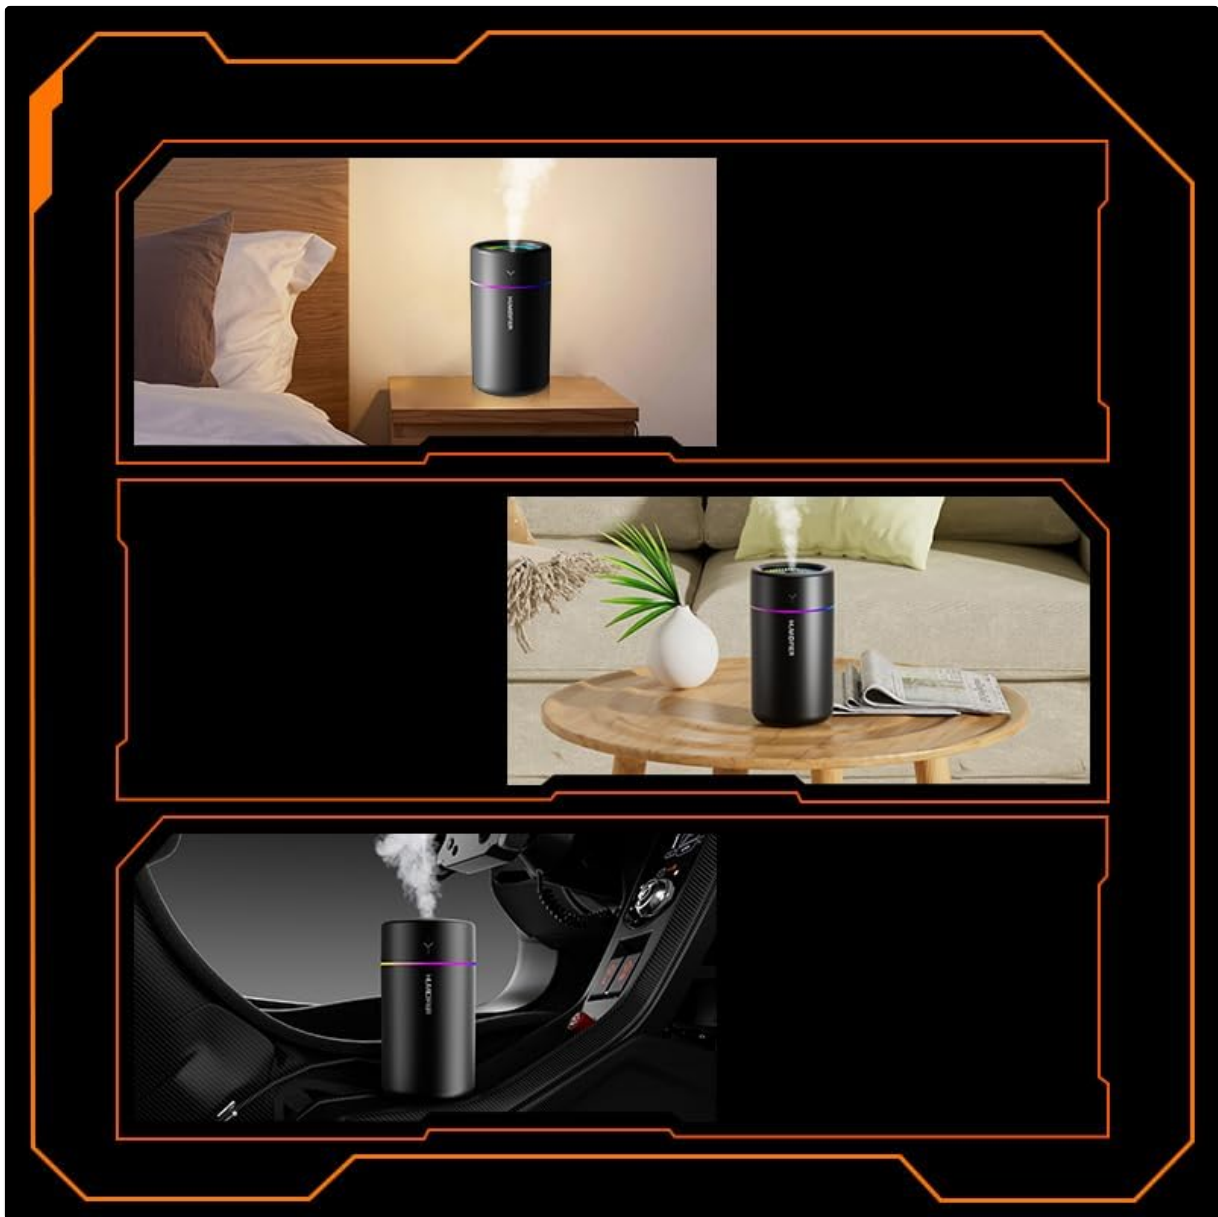


Image 5.1: The humidifier being used in a bedroom, office, and car environment.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your humidifier.

6.1 Cleaning the Water Tank

1. Unplug the humidifier and remove the top cover.
2. Empty any remaining water from the tank.
3. Wipe the inside of the tank with a soft, damp cloth. For stubborn mineral deposits, use a small amount of white vinegar diluted with water, then rinse thoroughly.
4. Do not use harsh chemicals or abrasive cleaners.

6.2 Replacing the Cotton Swab (Filter)

The cotton swab should be replaced every 1-3 months, or sooner if you notice reduced mist output or a strange odor. Replacement swabs can be purchased separately.

1. Unplug the humidifier and remove the top cover.
2. Gently pull out the central tube containing the cotton swab.
3. Remove the old cotton swab and insert a new one, ensuring it is fully saturated with water before reassembling.
4. Reinsert the tube and replace the top cover.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	<ul style="list-style-type: none">• Insufficient water in tank• Dry cotton swab• Cotton swab clogged or damaged• Mist outlet blocked	<ul style="list-style-type: none">• Refill water tank• Soak cotton swab for 5-10 minutes• Replace cotton swab• Clean mist outlet
Humidifier not turning on	<ul style="list-style-type: none">• No power connection• Faulty USB cable or adapter	<ul style="list-style-type: none">• Ensure USB cable is securely connected• Try a different USB port or adapter
Leaking water	<ul style="list-style-type: none">• Overfilled water tank• Top cover not securely closed	<ul style="list-style-type: none">• Do not exceed max fill line• Ensure top cover is properly sealed

8. SPECIFICATIONS



Image 8.1: The physical dimensions of the humidifier, approximately 2.75 inches in diameter and 5.19 inches in height.

Feature	Detail
Model Name	LMH-1
Product Dimensions	2.75"D x 2.75"W x 5.19"H
Item Weight	5 ounces
Voltage	5 Volts
Wattage	2.5 watts
Operation Mode	Vaporizer (Ultrasonic)
Special Feature	Auto Shut Off
Noise Level	26dB (approx.)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

© 2023 KISSWILL. All rights reserved.